
# **TM SERIES FLOW METERS**

#### HALL EFFECT

The TW series meters have a turbine with a magnet mounted in the wheel. Every time the turbine

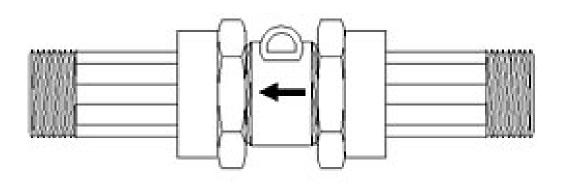

rotates, a pulse of electrical current is generated. This is called the Hall Effect. Flow is registered on an external device by counting the pulses. The paddle wheel assembly is corrosion-proof Noryl®, with a ceramic-encased magnet and stainless steel shaft.

#### **SPECIAL FEATURES**

- The electronics are isolated from water.
- Meters are compact, lightweight and easy to install.
- Meters are serviceable without removing from plumbing.
- Cables have quick connect to meter and can be quickly removed and replaced during service.

<b>S</b> PECIFICATIONS	TM100	TM200
Nominal Pipe Diameter	1 "	2″
Flow Range (gpm)	0.25 to 40	2 to 250
Housing	30% Glass-Filled PPO	30% Glass-Filled PPO
Turbine	Polypropylene	Polypropylene
Bearings	Polyimide	Polyimide
Shaft	302 SS	302 SS
Accuracy	$\pm$ 3% of reading	± 3% of reading
Pressure Drop	1.5 psi @ 30 gpm	2.5 psi @ 150 gpm
K-FACTOR (pulses/gallon)	64	15
Maximum Water Temp	100°F	100°F
Maximum Temperature	122°F	122°F
Maximum Water Pressure	127 psi	100 psi
Maximum Cable Length	1000 ft	1000 ft
PPO - Polyphenylene Oxide		
<b>TM150</b> same specifications as TM200 with 1 $\frac{1}{2}$ " end connections.		



## CAT425.2

PART NO.	DESCRIPTION
707143-1	1" Turbine Flow Meter with brass NPT adaptor
707143-2	1" Turbine Flow Meter with solvent weld Sch 80 PVC adaptor
707143-3	2" Turbine Flow Meter with brass NPT adaptor
707143-4	2" Turbine Flow Meter with solvent weld Sch 80 PVC adaptor
707143-5	10' Cable Assembly
707143-6	25' Cable Assembly
707143-7	2" Turbine Flow Meter with 1 1/2" brass NPT adaptor
707143-8	2" Turbine Flow Meter with 1 1/2" solvent weld Sch 80 PVC adaptor

### **APPLICATION NOTES**

- Turbine meters are not to be used as unions. They must be supported on both ends.
- For proper reading the meter must have 18" of straight pipe the same size as the meter connection before and after the meter.
- If installed in a vertical position, the flow should be from bottom to top or upward.

PW SERIES FLOW METERS ARE MANUFACTURED BY AUTOTROL IN THE USA

102 Charbonnet Road ♦ Duson, Louisiana 70529 ♦ 337 988 2360 ♦ Fax 337 981 7922 wknginfo@waterking.com ♦ Revised 0717/06

DELIVERING EXPERIENCE, QUALITY, AND SERVICE SINCE 1934