

SourceFlex™ System



Model SAS-RC8

Room Control Station

Installation/Operation



EN55103-1 E1-E5; EN55103-2 E1-E4
Typical Performance reflects product at publication time exclusive of EMC data, if any, supplied with product. Specifications are subject to change without notice.

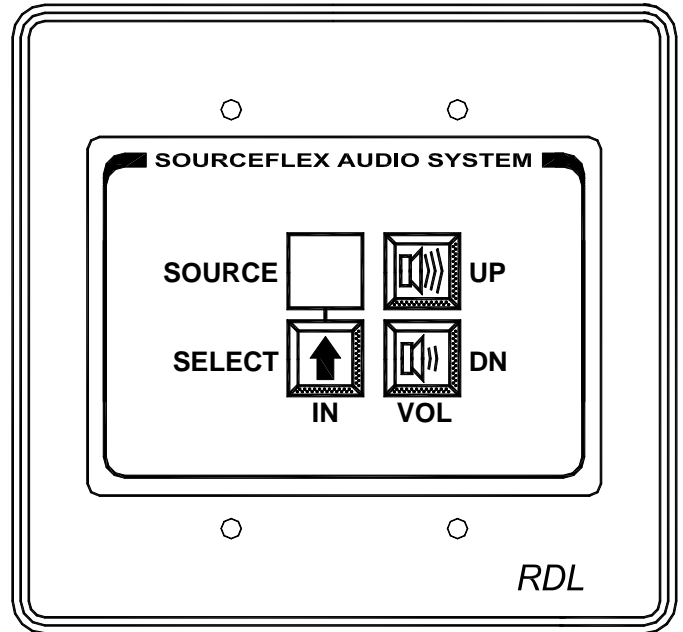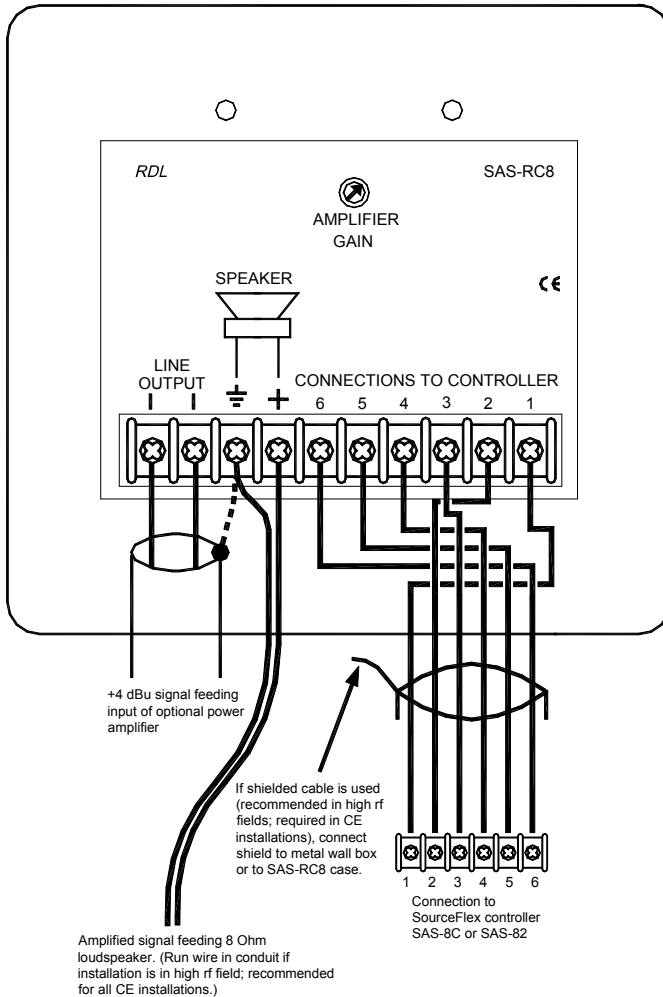

1. With unit powered from a SourceFlex controller, select an active audio source using the button below the display.
2. Ramp the listening volume up to maximum.
3. Set the GAIN control on the back of the SAS-RC8 for the maximum desired listening level from attached loudspeaker.

TYPICAL PERFORMANCE

Line Output:

Amplified Output:

Mounting:

Finish:

+4 dBu balanced (may be connected unbalanced)

2 W RMS into 8 Ω, adjustable (at normal system audio input operating level)

Mounts in RDL WB-2U wall box (US and international walls), or in standard US dual gang electrical box; use RDL MR-2 (available separately) to adapt to US 'square' electrical box

RDL ULTRASTYLE design