


TWIN-CAT-2 Dual Spindle Rewind / Unwind Station (continued)

Label Inspection and Counter Options

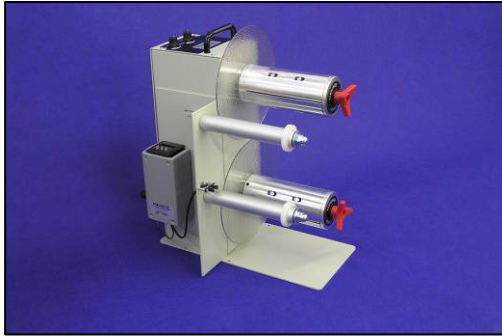

The **Label Inspection** option, **INSP**, adds a Label Inspection Fixture to your **TWIN-CAT-2**. It has two rollers over which your labels run as they are presented for inspection. You can also wind-in or wind-out at the same time as you perform the inspection operation. When inspection is complete, you can conveniently rewind the labels back onto their original Core by just reversing the direction of the Rewind Spindles.


*Shown: Label Inspection & Counter Option **INSP-6** with **PC-3**.*



You can also order a **Label Counter** with your Inspection Station. The **PC-1** counts single-across labels, while the **PC-3** can count single- or multiple-across labels. Count up or count down. You can preset a batch size to optionally stop the **TWIN-CAT-2** automatically when your Preset Count is reached.

Fully Digital Counter! No adjustments required!

DESCRIPTION	MODEL	WIDTH (MAX.)	
Optional Inspection Fixture mounts in minutes on the TWIN-CAT-2. The Fixture includes two smooth rollers that your labels glide over as they are presented for inspection. Bi-directional, variable speed operation of the TWIN-CAT-2 allows control over winding tightness as well. Can be started and stopped with the optional Foot Switch listed below.	INSP-6	6" (152-mm)	
	INSP-8	8" (203-mm)	
	INSP-10	10" (254-mm)	
Optional Digital Preset Counter for opaque labels pre-mounted on the INSP Inspection Station. Includes an External Halt Cable to stop the TWIN-CAT-2 when the desired count is reached. The PC-3 counts multiple-across labels as well as single-across labels.	PC-1 (non-scaling)	NOTE: INSP is required for these Counter Options.	
	PC-3 (scaling)		
Optional Push-to-Run Foot Switch for the TWIN-CAT-2. Operates the External Halt Control on the TWIN-CAT-2. To use the Foot Switch at the same time as the Automatic Stop feature of either of the Preset Counters you must also order the FSPC-TC2 Option immediately below.	FOOTSWITCH		
Option permits simultaneous use of the Foot Switch and the Automatic Stop Feature of the Preset Counters .	FSPC-TC2		
TWIN-CAT-2 with one Gear Motor in the upper position, and one Tension Motor in the lower position. Permits tensioning the label web when the TWIN-CAT-2 is stopped. (LTO-TC2 is not available for TWIN-CAT-2G.)	New! TWIN-CAT-2G	Base Price. You must specify two Core Holders from the previous page.	

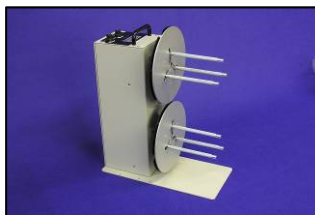

TWIN-CAT-2 with two Universal **ACH-TC2** Core Holders.



TWIN-CAT-2 with one 1.5" "Quick-Chuck" and one 3" "Quick-Chuck."



The optional **FOOTSWITCH** can be used to start and stop the TWIN-CAT-2.

Free consultation 1-877-833-7149
www.labelmate.com