possional audio & sound Engineering Data





CD PLAYER TAPE DECK COMBO Independent Outputs Autoreverse Cassette Deck

Rack Mounting Rack Kit PRM510

General Information

Simultaneous CD Player and Tape Deck Operation Independent CD Player and Tape Deck Outputs Tape Deck CD/Line Record Selector Multifunction Remote Control CD - Tape - Programming Programmable CD Tracks to Tape Dubbing Multi-Repeat Functions: **CD Shuffle Play Single Track Repeat** Point A to Point B Repeat Programmed Tracks Repeat **Entire Disc Repeat Continuous Tape Repeat** Continuous Plav (CD to Tape & Tape to CD) Audible Tape Music Search Headphone Jack with Level Control High Luminosity Digital Fluorescent Display Rack Mount with Optional Kit Environmental Music Systems Background Music Systems Foreground Music Systems PITCH CONTROL

Specifications

CD PLAYER SECTION Frequency Response: Signal to Noise Ratio: **Dynamic Range:** THD: Wow and Flutter: Channel Separation: Output Level: **Digital Filter:** Analog Filter: Sampling Frequency: D/A Converter: Channel Bit Rate: Ch. Modulation Code: Error Correction: Pickup Type:

Objective lens: Laser Type: Wave Length: **TAPE DECK SECTION** Track System: Frequency Response: Metal Tape Chrome Tape Normal Tape Signal to Noise Ratio: Line Input: **Output Level:** Heads: Tape Speed: Tape Pitch Control: Motor: Wow and Flutter: GENERAL Power Requirement: Power Consumption: Terminations: Housing Finish: **Dimensions:**

Net Weight: Rack Mounting:

Engineering leadership in sound products since 1931

10 -20,000 Hz ± 0.5 db 90 db 90 dh 0.02% at 1 Khz Unmeasurable (Quartz accuracy) 75 db 2 Volt RMS 4 times oversampling 3rd order 44.1 Khz 16 bit Linear Channel 4.3218 Mb/sec FFM CIRC Objective Lens Drive, **Optical 3-beam Laser** 2-dimensional Parallel Drive GaAIA type Semiconductor 780 nm

4 Track, 2 Channel Stereo

50 - 15,000 Hz \pm 3 db 50 - 15,000 Hz \pm 3 db 50 - 14,000 Hz \pm 3 db 59 db NR Off, 69 db Dolby NR On 87 Mv at 50 K ohm 460 Mv at 50 K ohm Rotary Record/Play, Erase 4.76 cm/sec, 17/8 IPS \pm 12% Continuously Adjustable DC Servo Controlled 0.08% WRMS

120 Volt - 60 Hz - 230 Volt - 50 Hz 14 Watt RCA Standard Jacks Matte Black 171/8" W., 5¾" H., 11¾" D. (435 X 145 X 290 mm) 11.7 Lbs, (5.3 Kg) PRM510 Rack Kit **(3U) (Optional)**



RV 2.5 FORM NT 253

© copyright Paso Sound Products, Inc.

on Tape Deck only

Specifications are subject to change without notice

TECHNICAL DATA

18 3 00068060 67980 THEAC -----AD-500 Compact Dis: Player/Reverse Cassette . ALL A-S DELETS MAN IN CO. 4 -40 -9 7 3 6 3 -4 -CO-TAPE T 88-88:88 **-** T - 88:88 0 0 SYNCHRO DUBBING START SYSTEM / AUTO TAPE SELECT 1-BIT DAC -9 -. NEV MOON BOURCE DOL BY NA Õ ۲ 1058 ۲ D • 0 6 32 ø 20 Ø 22 4 23 24 25 6 26 27 28 30 29

Front Panel Controls

O POWER switch


- **@** REMOTE SENSOR
- Multi-function display window
 - **(A) REPEAT indicator**
 - (B) Auto space indicator (A. SPACE)
 - © DELETE indicator
 - (D) Time mode indicator
 - (E) Program indicator (PGM)
 - **(F) SHUFFLE indicator**
 - © CD input indicator (IN)
 - (H) TAPE/CD indicator
 - **① REC indicator**
 - (J) Tape PLAY indicator
 - (K) Level meter
 - () Tape counter
 - M INTRO play indicator
 - (N) CD pause/play indicator (II/►)
 - **(1)** Track indicator
 - (P) Time counter
 - **(0)** DUB indicator
 - (R) Tape reverse/pause/forward indicator (◄II►)
- (S) Music calendar
- OPEN/CLOSE button
- G CD play button (►)
- G CD STOP button
- O CD pause button (II)
- Return-To-Zero button (RTZ)
- Counter clear button (CLEAR)
- REC LEVEL control
- Continuous play button (CD-TAPE CONT PLAY)






PASO SOUND PRODUCTS, INC. **4750F GOER DRIVE** CHARLESTON, SOUTH CAROLINA 29406-6511 USA Phone: 843 308 9005 - Fax: 843 308 0904 EMAIL: info@pasosound.com - URL: www.pasosound.com

FORM NT 253 RV 2.5

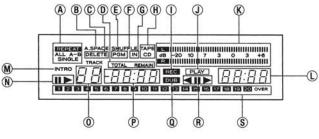

Digital Display

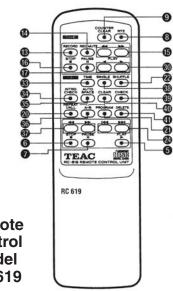

AUTHORIZED DISTRIBUTOR

Remote Control Model **RC 619**

PAD500

M N

110 200

Gm

Disc tray REPEAT 1/ALL button PROGRAM button SHUFFLE button

TIMER switch

CD DUBBING button

RECORD button

@ REC MUTE button

Tape STOP button

(B) Cassette holder

Tape pause button (II)

MUSIC SKIP buttons (I

B Rewind and fast forward/CPS buttons

- SOURCE switch
- Reverse mode switch (REV MODE)
- PITCH CONTROL knob
- OLBY NR switch
- EJECT button
- Tape play buttons (◄/►) PHONES jack
- Headphones LEVEL knob
- TIME button
- INTRO CHECK button
- AUTO SPACE button
- A-B button
- CD SEARCH buttons (<</ >
- SINGLE button
- CHECK button
- CLEAR button
- **DELETE** button

PAD 500

000

since 1931

Printed in USA