


E/Z Temperature Scale

E/Z Temperature Scale

All "Smart" diffusers feature an easy to read room temperature set-point scale. Room temperature adjustments are made by simply turning the VAV room temperature control thermostatic actuator #3 clockwise for a cooler room temperature and counter clockwise for a warmer room temperature. Determine room temperature set-point by aligning the end of the actuator with the indicators on the temperature scale. Each full rotation for each indicator on the temperature scale will equal plus or minus two degrees. For factory set-point of 74 degrees, turn actuator clockwise to stop, then turn counter clockwise three full turns.


Temperature Adjustment Scale



Each indicator equals 2°.

E/Z Temperature Scale - Operational Air Flow

- S - SOLID CENTER PANEL
- C - VAV COOLING CONTROL
- AH - ADJUSTABLE HEATING VOLUME
- AH/I - FULL CLOSED HEATING
- W - FULL OPEN WARM-UP
- P - PERFORATED FACE

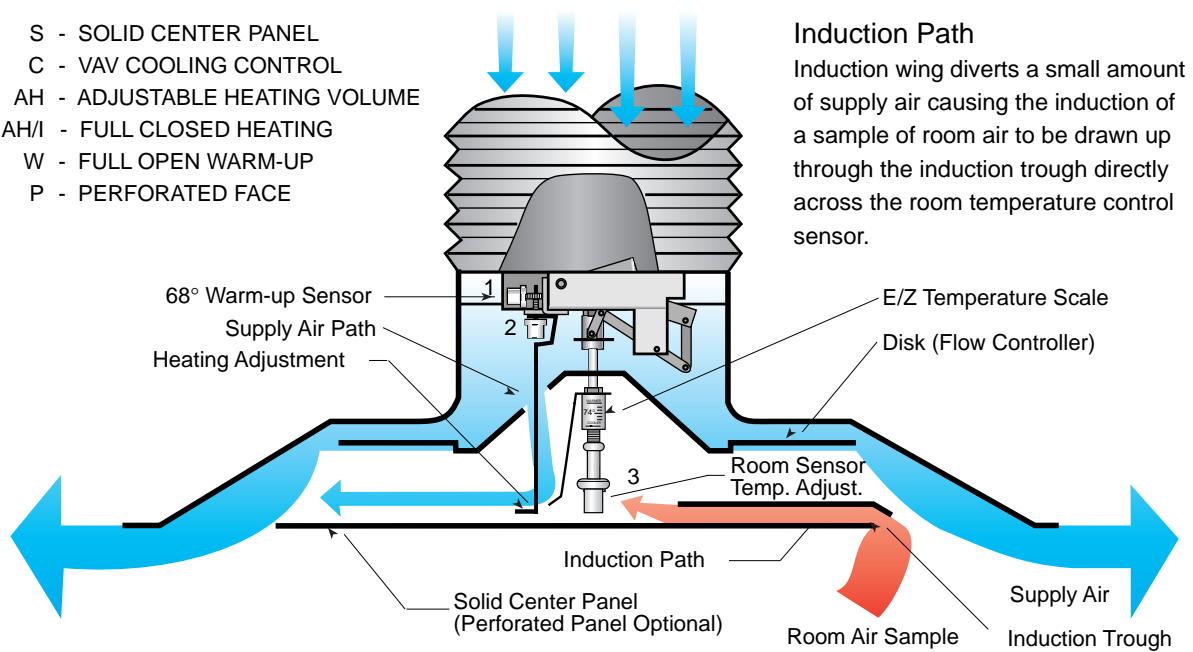

PERFORMANCE AIR PRODUCTS, INC.

45 Commerce Ave. #2, South Burlington, VT 05403 • 802/859-0471 • FAX 802/859-0473 • 800/852-1624

Performance Air Products, Inc., warrants the thermal diffuser for a period of 10 years. The diffusers shall be free from defects in material and workmanship. We agree to repair or replace any defective parts. This warranty excludes shipping charges and field labor required to exchange, test or service the diffuser.