SWAY BRACE - SEISMIC

Fig. 775

Lateral / Longitudinal Brace Clamp

Size Range: Service Pipe: 21/2" through 8" Sch. 10 and Sch. 40 IPS

Service Pipe: $2^{1}/2^{"}$ through 6" Flow Pipe Brace Pipe: 1" or $1^{1}/4^{"}$ Sch. 40 IPS

Material: Carbon steel clamp, ductile iron brace connector

Finish: Plain or Galvanized

Service: Used to rigidly brace piping systems subjected to sway and seismic disturbances. Pipe clamp component of Anvil's 700 series sway brace assembly. Can be utilized as either a lateral brace clamp or a longitudinal brace clamp.

Approvals: UL and ULC Listed (UL 203A:2009), and FM Approved (FM 1950:2010). Complies with seismic bracing requirements of NFPA-13.




- No threading of bracing pipe
- Functions as a lateral or longitudinal brace clamp

Installation Instructions:

- 1. Installation of the pipe must be at a minimum 6" away from a pipe joint.
- 2. Position pipe clamp at desired location and loosely tighten the clamp hex bolts. Ensure that the spacer and brace pipe connector are positioned between the pipe clamp ears.
- 3. Place the Schedule 40 brace pipe into the brace pipe connector until it bottoms out.
- 4. Tighten shear bolt until the head shears off. Then position the brace pipe to the appropriate angle.
- 5. Tighten the pipe clamp hex bolts equally and alternately until metal-to-metal contact is achieved with the following torque values. Clamp Bolt Minimum Torque Values: 2¹/₂" thru 3" Dia. Clamps (80 Ft-Lbs), 4" & 5" Dia. Clamps (100 Ft-Lbs), 6" Dia. Clamp (120 Ft-Lbs), 8" Dia. Clamp (140 Ft-Lbs),
- 6. Note: For 6" and 8" service pipe, a thread lubricant such as Gruvlok® Xtreme™ Lubricant should be used to ease assembly of pipe clamp hex bolts and nuts.

Ordering: Specify service pipe diameter x brace pipe diameter, figure number, name and finish.

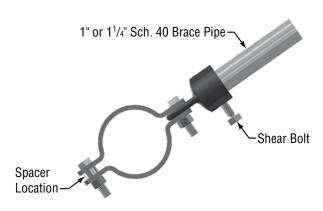

Lateral Brace Orientation
(Brace Pipe Perpendicular to Service Pipe Axis)



Longitudinal Brace Orientation
(Brace Pipe Parallel to Service Pipe Axis)

See page 2 for notes on sway brace-seismic components concerning – installation, performance and warranty.



www.anvilintl.com