-

HYDRANTS

FIG. 5609QT QUARTERHORSE-1/4 TURN HYDRANT W/INTEGRAL VACUUM BREAKER AND EXPOSED HOSE CONNECTION

FUNCTION: For installation in interior or exterior building walls where an exposed hose connection is acceptable. Provides positive non-freeze protection and features an integral vacuum breaker. Adaptable to all types of wall construction.



Integral Vacuum
Breaker Assembly

2 5/16

Key

1/2 Female
NPT Inlet

3/4 Male
NPT Inlet

Side View

Adjustable
Wall Clamp
(Specify -WC)


	4
2 1/2	
	Front View

Fig. 5609QT

WALL THICKNESS	3/4" INLET	APPROX WEIGHT LBS	
-SAP	408.00	7	
04, 06"	541.00	8	
08, 10, 12, 14"	630.00	9	
16, 18, 20, 22"	718.00	10	
24, 26, 28, 30"	810.00	12	

REGULARLY FURNISHED: Bronze

Nickel Plated Quarter Turn Non-Freeze Hydrant with 3/4" Hose Connection, Backer Plate, Integral Vacuum Breaker with Vandal Resistant Cap and "T" Handle Key.

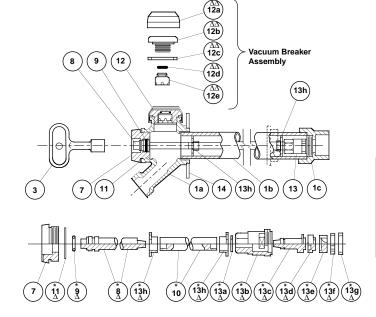

		DRIVEN
OPTIO	DNS:	ADD
-CP	Chrome Plated Face	58.00
-E	Elbow Inlet	29.00
-E1	1" NPT Elbow Inlet	162.00
-HC1	1" Hose Conn Adaptor	133.00
-IC1	1" Male NPT Inlet Connection*	133.00
-MF1	1" Straight Female Inlet	133.00
-PB	Polished Bronze Face	38.00
-SS	Straight Sweat Inlet	N/C
-SS1	1" Straight Sweat Inlet	
-SE	Sweat Elbow Inlet	29.00
-SE1	1" NPT Sweat Elbow Inlet	162.00
-WC	Adjustable Wall Clamp	N/C
-WH	Wheel Handle	

^{*}Add 3/4" to Overall Length When Specified

For Hydrant Parts Repair Kit, See Pg. 340

NOTES:

- Recommended wall opening 2 x 2. Hydrant shall be in the vertical position only, the hose connection must be on the bottom.
- When ordering, specify wall thickness in 02" increment as follows: 04, 06, 08, 10, 12, 14, 16, 18, 20, 22 or 24". When wall clamp -WC is desired, increase wall thickness dimension by 2".
- All Jay R. Smith hydrants are manufactured with "NO-LEAD" brazing rings and USDA approved lubricants.

Seepage of a small amount of water may occur from the vacuum breaker upon the initial opening and closing of this hydrant. This is normal operation.

	HYDRANT PARTS LIST							
ſ	NO.	DESCRIPTION	NO.	DESCRIPTION	NO.	DESCRIPTION		
	1	Head/Casing Assembly	10	Operator Rod	13a	Retaining Ring		
	1a	Head		Face Nut Washer		Valve Body		
	1b	Casing	12	Vacuum Breaker Assembly	13c	Valve Actuator		
	1c	Valve Housing	12a	VB Cap	13d	Nylon Thrust Washer		
	3	Key	12b	VB Body	13e	Rotating Ceramic Disc		
	7	Face Nut	12c	VB Washer	13f	Fixed Ceramic Disc		
	8	Actuator Shaft	12d	VB "O" Ring	13g	Silicon Rubber Seal		
	9	Actuator "O" Ring	12e	VB Piston	13h	Retainer Guide (2)		
ı	-		13	Valve Rody Assembly	14	Backer Plate w/Screws		

Δ These Replacement Parts Available in HPRK-7

^{*} These Parts Accessible from Face of Hydrant by Removing Face Nut.





330

ΔΔ These Replacement Parts Available in HPRK-7VB