


Operating Instructions For

CLIKR™ -5 Cable Remote Control

UR5U-8500L

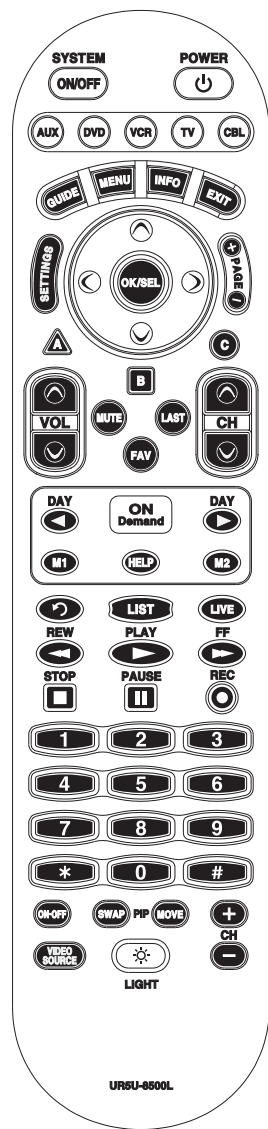

1 Introduction


The CLIKR™-5 UR5U-8500 is designed to operate Scientific-Atlanta, Pioneer Voyager and Pace Micro digital set top boxes (including DVR & HD), plus the majority of TV, VCR, DVD and AUDIO equipment on the market as shown below.

CABLE : Cable Converters **TV** : Televisions
VCR : VCRs and TV/VCRs **DVD** : DVD Players
AUX : Audio Receivers and DVRs, etc.

2 Replacing Batteries

Before you program or operate the remote control, you must install two new AA alkaline batteries.

- STEP1** Remove the battery compartment cover on the back of your remote control.
- STEP2** Check battery polarity carefully, and install the batteries as shown in the illustration below.
- STEP3** Replace the battery compartment cover.

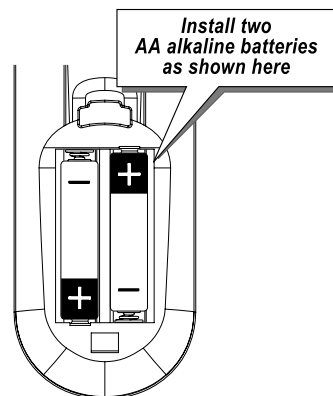

3 Operations

DEFAULT STATE:
Component Default: CABLE
Channel Default: CABLE channel and numbers operate through the CABLE. You have the option of controlling channel and numbers through the TV, VCR or DVD. Refer to section F for programming steps.

Volume Default: CABLE volume and mute operate through the TV. You have the option of controlling volume and mute through the Cable box, VCR or DVD. Refer to section G for programming steps.

4 Button Functions

SYSTEM ON/OFF
 Designed to send Power On/Off commands for up to five Components with one button press. Refer to section E for details.

MENU
 Displays the Applications Menu.

GUIDE
 Displays the program guide listings.

SELECT
 Selects highlighted screen options.

SETTINGS
 Displays settings menu.

MUTE
 Silences the audio. Press to activate. Press again to restore sound to the previous level.

VOLUME ▲/▼
 Raises or lowers the sound level.

FAV
 Displays favorite channels.

ON DEMAND
 Provides direct access to On Demand channel.

DAY ▲/▼
 Skip forward or backward a whole day in the program guide.

M1
 Custom-programmable Macro button.

HELP
 Opens Help. Also available as custom-programmable Macro button.

REPLAY
 Replays the previous few seconds of a program.

 Reserved for future use.

ON-OFF
 Opens or closes the PIP (Picture-in-Picture) window.

VIDEO SOURCE
 Selects the video source.

SWAP
 Swaps the contents of the PIP window and the main viewing screen so that the PIP window displays on the main screen.

POWER
 Allows you to turn your TV, VCR, DVD, AUX and Cable Box On and Off.

AUX, DVD, VCR, TV, CBL
 Used to select the component you want to operate and signals remote control activity.

INFO
 Displays information about the program currently playing or highlighted in the program guide.

EXIT
 Exit from current screen.

PAGE +/-
 Accesses pages above or below the information currently displayed.

CURSOR NAVIGATION PAD (▲, ▼, ◀, ▶)
 Navigate to and highlight an item from the on-screen choices.

A, B, C
 Make direct selections from on-screen menus.

CHANNEL ▲/▼
 Selects the next higher or lower channel.

LAST
 Returns to the previously tuned channel.

M2
 Custom-programmable Macro button.

LIVE
 Displays live television programming.

VCR/DVD/VOD KEYS
 Perform standard VCR and DVD functions when in VCR and DVD mode, and Video-On-Demand functions when in CABLE mode.

NUMBER PAD
 Enter numbers to tune to channels. Also, make numeric entries on on-screen menus. *NOTE: You can also use the CH ▲/▼ or the program guide as alternate ways to tune to channels.*

#
 Reserved for future use.

PIP CH +/-
 Selects the next higher or lower channel in the PIP (Picture-in-Picture) window.

MOVE
 Moves the PIP (Picture-in-Picture) window to another location on the screen.

LIGHT BUTTON
 Press to backlight all keypad buttons. Press again to turn off (or simply wait 10 seconds for automatic shut-off).

5 Programming the Remote Control

There are two ways you can program your CLIKR™-5 remote:

- * **The Pre-Programmed 3-Digit Code Method**
- * **The Auto-Search Method**

The Pre-Programmed Code Method allows you to setup all the buttons at once by entering 3-digit code numbers that correspond to a particular Component's manufacturer/brand, so it's the fastest and easiest of the two methods. (Code Tables are on the backside of this Instruction Sheet.) The Auto-Search Method scans through all the codes in the remote control, one at a time.

IMPORTANT SETUP NOTE!

This pertains to all programming steps. When you are in setup mode, a component LED will light for 30 seconds. If you do not press a button within 30 seconds, the LED light will turn off and exit setup mode and you will need to start over.

A. Pre-Programmed 3-Digit Code Method

STEP1 Turn on the Component you want to program (TV, VCR, DVD or AUX) using your old remote.

STEP2 Press the [COMPONENT] button (TV, VCR, DVD or AUX) to be programmed and [OK/SEL] button simultaneously for 3 seconds. The Component LED light will turn on for 30 seconds indicating the unit is ready to be programmed.

STEP3 Point the remote control toward the Component and enter the 3-digit code number assigned to your brand.

**Note: If the 3-digit code number you just entered is correct, the Component will turn Off. If it did not turn Off, continue entering code numbers listed for that brand until the Component turns Off.*

STEP4 After you've entered the correct code number and the Component has turned Off, press the [POWER] button to turn the Component back On. Now it's time to test the VOLUME and CHANNEL buttons for the TV (or PLAY and STOP buttons for VCR and DVD) to make sure they all work. If any of the functions do not work as they should, repeat from STEP 3 using the next 3-digit code number listed for that brand.

STEP5 Once you have found the correct 3-digit code, save it by pressing the same [COMPONENT] button one more time. The Component LED light will blink twice to confirm that the code was successfully stored.

Now, program the rest of your Components by repeating STEPS 1-5.

**Note: If the Pre-Programmed Method did not work, or if the Code Tables do not list your Component brand, use the Auto-Search Method as explained in Section B.*

B. Auto-Search Method

STEP1 Turn on the Component you want to program (TV, VCR, DVD or AUX) using your old remote.

STEP2 Press the [COMPONENT] button (TV, VCR, DVD or AUX) to be programmed and [OK/SEL] button simultaneously for 3 seconds. The Component LED light will turn on for 30 seconds indicating the unit is ready to be programmed.

STEP3 Point the remote toward the Component and press the [CH▲] or [CH▼] button one step at a time or keep it pressed. The remote will emit a series of ON/OFF commands. Release the [CH▲] or [CH▼] button as soon as the Component turns Off.

STEP4 Test functions. (Same as for 3-Digit Code Programming Method - Section A). If any of the functions do not work as they should, repeat from STEP 3 using [CH▲] or [CH▼] buttons to find the correct code.

STEP5 Save the code. (Same as for 3-Digit Code Programming Method - Section A).

Now, repeat the Auto-Search Method for those Components you could not program earlier with the Pre-Programmed Method.

C. Finding a Component Button's Setup Code Number

If you used the Auto-Search Method to program a Component, you may not know what the correct code number is. Here is a way for you to identify the code number, so you can record it for future reference.

STEP1 Press the [COMPONENT] button (TV, VCR, DVD or AUX) you want to verify and the [OK/SEL] button simultaneously for 3 seconds. The Component LED light will turn on for 30 seconds.

STEP2 Press the [INFO] button and count the number of times the Component LED light blinks. This number indicates the first digit of the code, followed by the second and third, each separated by a one second pause when the LED will turn off.

**Note: 10 blinks represents the number zero.
 Example: One blink, (pause), eight blinks, (pause) and three blinks, indicates code number 183.*

D. AUX Function: Programming a 5th Component

You can take advantage of the AUX function to program a 5th Component such as a second TV, VCR, DVD or Audio Component.

STEP1 Turn on the 5th Component you want to program (TV, VCR, DVD or Audio) using your old remote.

STEP2 Press the [AUX] button and the [OK/SEL] button simultaneously for 3 seconds. The [AUX] Component LED will turn on for 30 seconds.

STEP3 Press the [COMPONENT] button you want to setup. Point the remote control toward the Component and enter the 3-digit code number assigned to your brand.

**Note: If the 3-digit code number you just entered is the correct number, the Component will turn Off. If it did not turn Off, continue entering code numbers listed for that brand until the Component turns Off.*

STEP4 Test functions. (Same as for 3-Digit Code Programming Method - Section A). If any of the functions do not work as they should, you need to find a new code.

STEP5 Once you have found the correct 3-digit code, save it by pressing the [AUX] button one more time. The Component LED light will blink twice to confirm the code was stored. Now when you press the AUX button, all the buttons will work with that 5th Component.

E. Programming the System On/Off Button

This allows you to program the System On/Off button so it can send up to five power On/Off commands with one button press.

STEP1 Press the [CBL] button.
STEP2 Press the [SYSTEM ON/OFF] button and the [OK/SEL] button simultaneously for 3 seconds. The [CBL] button will turn on for 30 seconds.

STEP3 Press the first [COMPONENT] button you want to store in the [SYSTEM ON/OFF] button and then the [POWER] button. Repeat this for other Components until you have stored all the desired power commands into the [SYSTEM ON/OFF] button.

STEP4 Press the [CH+] button to save the power commands you stored. The [CBL] button will blink twice to confirm the commands have been saved.

F. Programming Channel Control

You can program the channel controls (Channel Up, Channel Down and Last) from one Component to operate in another Component mode. Default channel control settings on the remote control are as follows:

CBL : CBL **TV** : CBL **VCR** : CBL
DVD : DVD **AUX** : AUX

If you wish to store the TV channel control in TV mode, use the following steps.

STEP1 Press the [TV] button and the [OK/SEL] button simultaneously for 3 seconds. The [TV] Component LED will turn on for 30 seconds.

STEP2 Press the [VOL -] button.

STEP3 Press the [TV] button again. The Component LED will blink twice to confirm the programming.

To return to original state:

If you wish to restore the CABLE channel control in TV mode, repeat the above steps but press [CBL] in **STEP3**.

G. Programming Volume Control

You can program the volume controls (Volume Up, Volume Down and Mute) from one Component to operate in another Component mode. Default volume control settings on the remote control are as follows:

CBL : TV **TV** : TV **VCR** : TV
DVD : TV **AUX** : AUX

If you wish to store the CBL volume control in CBL mode, use the following steps.

STEP1 Press the [CBL] button and the [OK/SEL] button simultaneously for 3 seconds. The [CBL] Component LED will turn on for 30 seconds.

STEP2 Press the [VOL +] button.

STEP3 Press the [CBL] button. The Component LED will blink twice to confirm the programming.

To return to original state:

If you wish to restore the TV volume control in CBL mode, repeat the above steps but press [TV] in **STEP3**.

H. Programming a 'Macro' or Favorite Channel

In CBL mode, the M1, M2 and HELP buttons can be programmed to act as a 'Macro' or Favorite Channel button. This allows you to send up to 10 commands with one button press.

STEP1 Press the [CBL] button to select the CBL mode.

STEP2 Press the M1, M2 or HELP button and [OK/SEL] button simultaneously for 3 seconds. The [CBL] Component LED will turn on for 30 seconds.

STEP3 Press up to 10 buttons you wish to store. The [CBL] Component LED will blink once for each command entered.

STEP4 Press the [CH+] button to store the commands that were selected. The [CBL] Component LED will blink twice to confirm the storage of commands.

I. Low Battery Warning

When the batteries are low and need to be replaced with fresh batteries, the Component LED lights will blink 2 times in sequence whenever a [POWER] button is pressed to turn on equipment.

J. Memory Lock System

This remote control is designed to retain programmed memory for 10 years even after batteries are removed from the remote control.

K. Record Your Component Set-up Codes

| | | | | |
|-----|---------------------|----------------------|----------------------|----------------------|
| TV | Set-up Code Number: | <input type="text"/> | <input type="text"/> | <input type="text"/> |
| VCR | Set-up Code Number: | <input type="text"/> | <input type="text"/> | <input type="text"/> |
| DVD | Set-up Code Number: | <input type="text"/> | <input type="text"/> | <input type="text"/> |
| AUX | Set-up Code Number: | <input type="text"/> | <input type="text"/> | <input type="text"/> |

6 Set-up Code Tables

| CABLE Converter | | |
|-----------------|---|---------|
| Remote | Converter | Code No |
| URSU-8500L | Scientific-Atlanta Explorer 8000, Pioneer Voyager DVR, Pace Micro DVR Series. | 001 |

TV

| Manufacturer/Brand | Set-Up Code Number |
|--------------------|---|
| ABEX | 025 |
| ADMIRAL | 072 161 160 251 |
| ADVENT | 247 |
| ADVENTURA | 002 |
| AIKO | 103 |
| ALERON | 028 |
| AKAI | 197 146 248 404 405 |
| A MARK | 112 143 |
| AMERICA ACTION | 043 |
| AMPRO | 167 073 |
| AMSTRAD | 052 |
| ANAM | 043 054 056 080 112 131 |
| AOC | 197 112 058 363 |
| APEX DIGITAL | 006 |
| AUDIOVOX | 076 454 388 |
| AVION | 441 |
| BARCO | 233 |
| BELCOR | 116 |
| BELL&HOWELL | 161 072 |
| BLAUPUNKT | 088 |
| BRADFORD | 043 |
| BROKSONIC | 238 |
| BROCKWOOD | 116 |
| CAJRN | 201 |
| CANDLE | 197 002 003 363 |
| CAPEHART | 058 |
| CELEBRITY | 070 |
| CENTURION | 197 |
| CETRONIC | 043 |
| CITIZEN | 197 002 003 043 101 103 143 363 |
| CLARION | 043 |
| CLASSIC | 043 |
| CLP CLASSIC | 161 |
| COLORTYME | 116 197 |
| CONCERGE | 073 |
| CONCERTO | 363 |
| CONTEC | 043 050 051 |
| CORNEA | 116 |
| CORONADO | 143 |
| CRAIG | 043 054 |
| CROSLEY | 164 |
| CROWN | 043 143 |
| CURTIS MATHES | 197 101 143 363 |
| CXC | 043 |
| DAEWOO | 016 043 044 076 103 114 125 127 143 363 |
| DAYTRON | 143 363 |
| DELL | 320 319 284 363 |
| DIMENSIA | 161 |
| DREAMVISION | 235 |
| DUKANE | 025 011 |
| DUMONT | 116 073 |
| DURABRAND | 096 |
| DWIN | 177 257 |
| DYNASTY | 043 |
| DYNATECH | 062 |
| EIKI | 187 |
| ELECTROBAND | 070 |
| ELECTROHOME | 143 024 076 196 |
| ELEKTRA | 072 |
| EMERSON | 028 048 043 155 005 197 047 050 051 076 096 143 151 153 154 363 |
| ENVISION | 116 197 |
| ESA | 323 |
| FISHER | 007 057 |
| FUJITSU | 246 198 346 396 |
| FUNAI | 028 043 052 |
| FUTURETECH | 043 |
| GATEWAY | 242 268 |

TV

| Manufacturer/Brand | Set-Up Code Number |
|--------------------|---|
| GE | 160 144 165 073 197 008 009 034 056 074 130 155 161 363 |
| GEM | 391 |
| GIBRALTER | 116 073 |
| GOLDSTAR | 113 116 102 106 112 119 127 143 363 |
| GRUNPY | 028 043 |
| HALL MARK | 363 |
| HARLEY DAVIDSON | 028 |
| HARVARD | 043 |
| HAVERMY | 081 |
| HELLO KITTY | 076 |
| HIMITSU | 043 |
| HISENSE | 419 |
| HITACHI | 011 166 009 010 012 023 075 143 158 072 363 |
| HP | 378 316 327 421 |
| INFINITY | 164 |
| INFOCUS | 333 230 330 |
| INSIGNIA | 350 400 052 402 403 |
| INTEQ | 073 |
| JANEIL | 002 |
| JBL | 164 |
| JCB | 070 |
| JCPENNEY | 024 197 008 009 030 065 101 143 160 363 |
| JENSEN | 013 |
| JVC | 038 034 070 083 145 199 210 240 406 |
| KAWASHO | 116 070 197 |
| KEC | 043 |
| KENWOOD | 197 070 |
| KLEGG | 466 |
| KLOSS | 002 059 |
| KLOSS NOVABEAM | 002 |
| KMIC | 143 |
| KTV | 043 197 143 154 |
| KURAZAI | 072 |
| LG | 363 113 116 102 106 112 119 127 143 284 |
| LODGENET | 072 |
| LOEWE | 164 |
| LOGIK | 072 |
| LUXMAN | 363 |
| LXI | 166 007 015 052 160 164 251 |
| MAGNAVOX | 164 059 197 003 060 061 063 064 127 022 160 094 226 390 363 |
| MAJESTIC | 161 072 |
| MARANTZ | 197 164 |
| MATSUJI | 164 |
| MATSUSHITA | 080 |
| MAXENT | 242 |
| MEGATRON | 116 197 011 |
| MEMOREX | 007 072 363 |
| MEIZ | 088 |
| MGA | 197 024 028 042 363 |
| MIDLAND | 161 073 |
| MINERVA | 088 |
| MINTEK | 362 |
| MINUTZ | 008 |
| MITSUBISHI | 124 109 024 028 040 042 146 191 363 |
| MONTGOMERY WARD | 161 072 |
| MOTOROLA | 081 |
| MTV | 197 062 101 363 |
| MULTITECH | 043 |
| NAD | 015 025 |
| NEC | 272 130 134 197 040 016 024 056 019 236 237 262 |
| NET TV | 242 |
| NIKEI | 043 |
| NIKKO | 116 197 |
| NTC | 103 |
| NUVISION | 351 |
| OLEVIA | 161 144 160 432 363 |
| ONKING | 043 |
| ONWA | 043 |
| OPTIMUS | 025 |
| OPTONICA | 019 251 |
| OPTOMA | 265 270 |
| ORION | 096 |
| PANASONIC | 080 034 056 092 164 208 |
| PHILCO | 197 003 059 060 064 164 024 056 063 363 |
| PHILIPS | 164 005 093 038 197 003 059 127 206 431 363 |
| PILOT | 116 |
| PIONEER | 234 135 025 197 018 023 116 374 393 272 |
| POLAROID | 388 |

TV

| Manufacturer/Brand | Set-Up Code Number |
|--------------------|---|
| PORTLAND | 143 363 |
| PRISM | 034 |
| PROSCAN | 144 160 161 165 167 |
| PROTON | 131 058 143 171 173 193 363 |
| PROTRON | 302 398 |
| PULSAR | 116 073 |
| QUASAR | 034 056 092 |
| RADIO SHACK | 019 143 043 127 363 |
| RCA | 333 160 165 065 144 161 197 024 056 152 023 074 363 |
| REALISTIC | 007 019 043 047 |
| ROCTEC | 186 |
| RUNCO | 168 169 178 179 180 181 182 073 395 416 |
| SAAMPO | 197 058 242 363 |
| SAMSUNG | 258 050 089 101 105 127 143 160 228 229 363 |
| SAMSUX | 197 |
| SANSEI | 076 |
| SANSUI | 096 |
| SAHYO | 166 007 020 053 057 082 187 |
| SCEPTRE | 276 |
| SCOTCH | 116 197 |
| SCOTT | 028 043 048 143 363 |
| SEARS | 015 030 007 028 057 143 094 160 082 165 166 363 |
| SELECO | 189 200 205 011 |
| SHARP | 251 019 014 028 029 022 143 175 363 |
| SHENG CHIA | 081 |
| SHOGLUN | 116 |
| SIEMENS | 088 |
| SIGNATURE | 072 |
| SIMPSON | 003 |
| SOLE | 231 232 |
| SONY | 001 139 147 126 185 085 213 277 |
| SOUNDESIGN | 028 003 043 363 |
| SPECTRICON | 112 |
| SQUAREVIEW | 052 |
| STARLITE | 043 |
| SSS | 043 363 |
| SUPRA | 116 |
| SUPRE MACY | 002 |
| SUPREME | 070 |
| SVA | 328 |
| SYLVANIA | 197 003 052 059 060 063 064 164 044 160 127 |
| SYMPHONIC | 052 |
| SYNTAX OLEVIA | 161 144 160 432 363 |
| TANDY | 251 |
| TATUNG | 056 062 |
| TECHNICS | 034 080 |
| TECHNOL ACE | 028 |
| TECHWOOD | 363 |
| TEKNIKA | 002 003 24 028 043 072 101 143 363 |
| TELEFUNKEN | 037 046 |
| TELERENT | 072 |
| TERA | 172 |
| TKM | 363 |
| TNCT | 073 |
| TOSHIBA | 138 015 030 007 040 062 101 325 |
| TOTEVISION | 143 |
| TVS | 096 |
| UNIVERSAL | 008 009 |
| VICTOR | 145 |
| VIDEO CONCEPTS | 146 |
| VIDIKRON | 174 188 192 164 |
| VIDEOTECH | 363 |
| VIEWSONIC | 242 389 |
| VIKING | 002 |
| VIZIO | 386 387 |
| WARDS | 008 009 019 028 060 061 063 064 072 074 143 164 034 363 |
| WAYCON | 015 |
| WESTINGHOUSE | 076 280 435 147 |
| YAMAHA | 197 371 372 363 |
| YORK | 363 |
| YUPITERU | 043 |
| ZENITH | 363 073 072 095 103 284 |
| ZONDA | 112 |

VCR

| Manufacturer/Brand | Set-Up Code Number |
|--------------------|--------------------|
| ADMIRAL | 025 053 |

VCR

| Manufacturer/Brand | Set-Up Code Number |
|--------------------|---|
| ADVENTURA | 034 |
| AIKO | 117 |
| AIWA | 034 161 |
| AKAI | 016 146 043 046 124 125 |
| AMERICA ACTION | 117 |
| AMERICAN HIGH | 031 |
| AMPRO | 072 |
| ANAM | 145 |
| ASHA | 040 |
| AUDIO DYNAMICS | 012 023 039 043 |
| AUDIOVOX | 101 |
| BEAUMARK | 040 |
| BROKSONIC | 035 037 129 |
| CALIX | 101 |
| CANON | 028 145 |
| CAPEHART | 108 |
| CCE | 024 117 |
| CITIZEN | 101 117 |
| COLT | 024 |
| CRAIG | 003 022 102 |
| CURTIS MATHES | 041 145 |
| CYBERNEX | 040 |
| DAEWOO | 111 116 117 005 007 010 065 110 110 120 |
| DAYTRON | 108 |
| DBX | 012 023 039 043 |
| DYNATECH | 034 053 |
| ELECTROHOME | 059 |
| ELECTROPHONIC | 101 |
| EMERSON | 006 029 035 017 025 027 034 036 037 046 101 129 131 153 162 116 145 |
| FISHER | 003 010 008 009 |
| FUJI | 145 |
| FUNAI | 034 |
| GARRARD | 034 |
| GE | 072 147 063 107 109 144 145 |
| GO VIDEO | 132 136 155 115 102 |
| GOLDSTAR | 101 106 114 020 012 123 |
| GRADIENTE | 034 |
| HARLEY DAVIDSON | 034 |
| HARMAN KARDON | 012 045 |
| HARWOOD | 024 |
| HITACHI | 004 026 150 018 034 043 063 137 160 020 |
| HQ | 034 |
| INSTANTREPLAY | 145 |
| JCL | 145 |
| JCPENNEY | 012 015 066 101 020 102 |
| JENSEN | 043 |
| JVC | 048 043 130 150 055 060 012 050 152 145 |
| KEC | 101 |
| KENWOOD | 014 048 034 047 |
| KLH | 024 |
| KODAK | 101 145 |
| LG | 101 106 114 020 012 123 |
| LLOYD | 034 |
| LOGIK | 024 |
| LXI | 034 003 009 017 106 |
| MAGN | 102 |
| MAGNAVOX | 067 034 068 041 156 164 145 |
| MARANTZ | 067 069 012 156 145 |
| MARTA | 101 |
| MATSUJI | 027 030 |
| MATSUSHITA | 145 |
| MEI | 145 |
| MEMOREX | 101 003 010 014 034 053 072 102 134 139 145 |
| MGA | 045 046 059 |
| MGN TECHNOLOGY | 040 |
| MINOLTA | 020 |
| MITSUBISHI | 059 061 151 020 045 046 051 049 168 |
| MOTOROLA | 053 145 |
| MYC | 034 102 |
| MULTITECH | 024 034 |
| NEC | 012 023 039 043 048 |
| NIKKO | 101 |
| NOBLEX | 040 |
| NORDMENDE | 043 |
| OLYMPUS | 031 |
| OPTIMUS | 101 |
| OPTONICA | 053 054 |
| ORION | 025 |
| PANASONIC | 066 070 145 083 133 140 157 163 074 167 |

VCR

| Manufacturer/Brand | Set-Up Code Number |
|--------------------|---|
| PENTAX | 020 063 145 |
| PHILCO | 034 067 145 |
| PHILIPS | 067 034 101 054 071 156 145 |
| PILOT | 101 |
| PIONEER | 020 021 048 |
| PORTLAND | 108 |
| PROFITRONIC | 040 |
| PROTEC | 024 |
| PULSAR | 072 |
| QUARTZ | 002 014 |
| QUASAR | 066 145 075 |
| RADIO SHACK | 123 |
| RADIX | 101 |
| RAINDEK | 101 |
| RCA | 107 109 144 147 158 041 145 020 140 034 102 |
| REALISTIC | 003 008 010 014 034 053 054 101 102 145 |
| RICO | 058 |
| RUNCO | 148 |
| SALORA | 014 |
| SAMSUNG | 102 104 113 115 120 032 066 107 109 125 |
| SANKY | 053 |
| SANSUI | 022 043 048 |
| SANYO | 003 010 007 014 134 102 |
| SCOTT | 017 037 120 129 131 |
| SEARS | 003 008 010 014 020 101 009 017 073 120 |
| SHARP | 053 054 159 165 145 |
| SHINTOM | 024 |
| SHOGLUN | 040 |
| SIGNATURE | 034 |
| SINGER | 024 |
| SONY | 001 057 058 052 003 076 154 053 145 |
| SOUNDESIGN | 034 |
| STS | 020 |
| SYLVANIA | 034 059 067 145 |
| SYMPHONIC | 034 |
| TANDY | 010 034 |
| TATUNG | 039 043 |
| TEAC | 034 039 043 |
| TECHNICS | 070 145 |
| TEKNIKA | 019 034 101 145 |
| THOMAS | 034 |
| TMK | 006 |
| TOSHIBA | 131 008 059 047 082 020 120 |
| TOTEVISION | 101 102 |
| UNITECH | 102 |
| VECTOR RESEARCH | 012 |
| VICTOR | 048 |
| VIDEO CONCEPTS | 012 034 046 |
| VIDEOSONIC | 102 |
| VILLAIN | 034 |
| WARDS | 003 020 017 024 034 053 054 131 102 145 |
| WESTINGHOUSE | 024 025 |
| XR-1000 | 024 034 145 |
| YAMAHA | 012 034 039 043 |
| ZENITH | 072 080 056 048 101 034 058 |

VCR-TV/VCR Combos

| Manufacturer/Brand | Set-Up Code Number |
|--------------------|--------------------|
| AMERICA ACTION | 117 |
| DAEWOO | 005 117 |
| EMERSON | 153 |
| FUNAI | 034 |
| GOLDSTAR | 101 123 |
| HARLEY DAVIDSON | 034 |
| HITACHI | 034 |
| JCPENNEY | 101 |
| LG | 101 123 |
| LLOYD | 034 |
| MAGNAVOX | 034 067 |
| MEMOREX | 101 |
| PANASONIC | 070 167 |
| PHILIPS | 034 067 |
| RADIO SHACK | 123 |
| RCA | 034 |
| SEARS | 101 |
| SONY | 057 154 |
| SYLVANIA | 067 |
| SYMPHONIC | 034 |
| THOMAS | 034 |
| ZENITH | 034 |

DVD

| Manufacturer/Brand | Set-Up Code Number |
|--------------------|---------------------|
| AIWA | 146 |
| AKAI | 281 |
| ALLEGRO | 091 |
| ALPINE | 098 |
| APEX DIGITAL | 087 111 115 |
| BLAUPUNKT | 111 |
| BROKSONIC | 130 |
| CINEVISION | 091 |
| COBY | 260 |
| CYBERHOME | 271 |
| DENON | 080 173 138 |
| DURABRAND | 091 |
| DVD 2000 | 017 |
| EMERSON | 091 143 |
| ENTERPRISE | 074 |
| FISHER | 147 |
| FUNAI | 143 |
| GE | 027 |
| GOLDSTAR | 091 |
| GO VIDEO | 137 091 220 221 222 |
| GREENHILL | 111 |
| HARMAN KARDON | 084 140 |
| HITACHI | 101 |
| HITEKER | 087 |
| ILO | 268 |
| INITIAL | 111 |
| INTEGRA | 142 180 280 |
| JBL | 084 |
| JVC | 012 |
| KENWOOD | 151 |
| KISS | 279 |
| KLH | 135 |
| KRELL | 104 |
| LITEON | 264 265 |
| LIXICON | 1 |