

Standard Features (Sizes 1/2" - 4")

- Body and bonnet are of solid PVC
- All wetted parts are of thermoplastic and elastomeric materials for superior corrosion resistance
- A preset constant flow rate is maintained by • automatically regulating orifice opening area, responding to changes of pressure differentials across the valve - see "Principles of Operation " on the following page
- Vertical or horizontal installations
- Flow rate accuracy: Plus or minus six percent of full • scale flow rate (water at ambient temperature)
- Flow rate rangeability: 20 : 1 maximum
- Handwheel permits on/off opening and closing
- Handwheel serves as a mechanism by which the flow rate setting may be adjusted without shutting down the pipeline
- Springs of stainless steel 304 with PCTFE coating tested for long cycle life
- Prescribed flow setting is clearly visible on the indicator at the top

TYPE SIZES



- 1/2", 3/4", 1", 2", 3" , 3", 4" 1/2", 3/4", 1", 2", 3" В
- С
- D

Fluid flows through the valve Flow rate setting range is large (small to large flow rate) Lines with large pressure differentials (upstream vs. downstream) High flow rate



Specifications Sizes: PVC: 1/2", 3/4", 1", 2", 3", 4" Body: PV/C Bonnet: PVC Models: Flanged ANSI Seals: EPDM Springs: Stainless Steel 304 with PCTFE Coating Temperature: 30° – 120° F

Sample Specification

All constant flow valves shall be of solid thermoplastic flanged construction, and all wetted parts shall be of non-metallic materials. Size 1/2" and 3/4" shall be of inline design, while 1" - 4" shall be a "Y" type design. PVC shall conform to ASTM D1784 Cell Classification 12454-A. Spring construction shall be 304 stainless steel with PCTFE coating. All constant flow valves shall have a calibrated flow dial and position indicator. Valve accuracy shall be plus or minus six percent of full scale. Constant flow valve sizes 1/2"-3" shall have a maximum upstream pressure range of 150psi at 120° F and size 4" 70psi at 120° F, as manufactured by Asahi/America, Inc.

*Consult factory

CHARACTERISTICS



Principles of Operation

1. When the upstream fluid pressure, P1, is introduced at the flow control orifice, it exerts a responding pressure on the upper surface of the flange on the piston type valve plug.

2. Likewise, the downstream pressure, P2, exerts a corresponding pressure to the lower surface of the valve plug flange.

3. Thus, when a differential exists between the fluid upstream and downstream of the orifice, the corresponding differential pressure acting on the surfaces of the flange moves the valve plug piston either downward against the force of the spring cartridge or upward by the force of the spring, depending upon the direction of the force induced by the existing differential pressure.

4. This upward or downward movement of the valve plug piston causes the flow orfice to be widened or narrowed accordingly, thus the flow rate of the fluid passing across the orifice is automatically adjusted. For example, if the differential pressure, (P1 - P2) created between the upstream and downstream sides of the orifice increases, the valve plug piston moves downward to narrow the area of the orifice opening and automatically adjusts to the preset flow rate value. The reverse is also true when the differential pressure decreases, piston moves upward increasing the orifice opening area and allowing the fluid flow rate to increase to the preset value.

Parts List (Sizes 1/2" - 3/4")

/2" – 3/4

PARTS											
NO.	DESCRIPTION	PCS.	MATERIAL								
1	Body	1	PVC								
2	Bonnet	1	PVC								
3	Cylinder	1	PVC								
4	Piston	1	PVC								
5	Plug	1	PVC								
6	Orifice	1	PVC								
7	Seat	1	EPDM								
8	Cap Nut	1	PVC								
9	Сар	1	PVC								
10	Spring Base	1	PVC								
11	Stop Ring	1	PVDF								
12	Sleeve	1	Copper Alloy								
13	Spring (A)	1	Stainless Steel 304								
14	Spring (B)	1	Stainless Steel 304								
15	Nut	1	PVC								
16	O-Ring (A)	1	EPDM								
17	O-Ring (B)	1	EPDM								
18	O-Ring (C)	1	EPDM								
19	O-Ring (D)	1	EPDM								
20	Key	2	PP								
21	Thrust Ring	1	PP								
22	Handle Base	1	PVC								
23	Handle Cover	1	PVC								
24	Screw	4	Stainless Steel 304								

* With PCTFE coating

Dimensions (Sizes 1/2" - 3/4") (in.)

NOMINAL SIZE									
INCHES	mm	d	D	с	n	h	L	t	
1/2	15	0.63	3.50	2.38	4	0.62	6.30	0.47	
3/4	20	0.79	3.88	2.75	4	0.62	6.30	0.51	

NOMINA	L SIZE					
INCHES	mm	w	D2	н	H1	н
1/2	15	3.23 X 3.23	4.06	7.76	5.08	2.01
3/4	20	3.23 X 3.23	4.06	7.76	5.00	2.09

NOTE: THE PISTON FOR TYPE B, C AND D DOES NOT HAVE INLET FLUID PASSAGE. THE PRESSURE DIFFERENTIAL,

(P1 – P2), EXERTS DIRECTLY ON THE PLUG SURFACE.



Parts List (Sizes 1" - 4")

PARTS											
NO.	DESCRIPTION	PCS.	MATERIAL								
1	Body	1	PVC								
2	Bonnet	1	PVC								
3	Cylinder	1	PVC								
4	Piston	1	PVC								
5	Plug	1	PVC								
6	Spring Base	1	PVC								
7	Stop Ring	1	PVDF								
8	Orifice	1	PVC								
9	Seat	1	EPDM								
10	O-Ring (A)	1	EPDM								
11	O-Ring (B)	1	EPDM								
12	O-Ring (C)	1	EPDM								
13	Sleeve	1	Copper Alloy								
14	Сар	1	PVC								
15	Key	1	PVC								
16	Thrust Ring	1	PP								
17	Spring (A)	1	Stainless Steel 304*								
18	Spring (B)	1	Stainless Steel 304*								
19	Washer (A)	1	PVC								
20	Washer (B)	2	PVC								
21	Handle Wheel	1	PP								
22	Screw	1	Copper Alloy								
23	Lift Indicator	1	PVC								
24	O-Ring (D)	1	EPDM								

Preset Flow Rates

(AND WORKING DIFFERENTIAL PRESSURE)

NOMINAL SIZE		TYPE	FLOW RATE	RANGEABILITY	Working Differential Pressure	
INCHES	mm		GAL./MIN.		PSI	
1 /0	15	В	0.176 - 3.52	20:1	2.85 - 14.22	
1/2	IJ	С	0.35 - 3.52	10:1	4.27 - 28.45	
2/4	20	В	0.26 - 5.28	20:1	2.85 - 14.22	
3/4	20	С	0.53 - 5.28	10:1	4.27 - 28.45	
	25	А	2.20 - 8.81	4:1	2.85 - 14.22	
1		В	0.441 - 8.81	20:1	2.85 - 14.22	
		С	0.881 - 8.81	10:1	4.27 - 28.45	
		А	8.81 - 35.22	4:1	2.85 - 14.22	
2	50	В	1.76 - 35.22	20:1	2.85 - 14.22	
		С	3.52 - 35.22	10:1	4.27 - 28.45	
		А	22.02 - 88.07	4:1	4.85 - 14.22	
0	00	В	4.403 - 88.07	20:1	2.85 - 14.22	
J	80	С	8.81 - 88.07	10:1	4.27 - 28.45	
		D	66.04 - 132.10	2:1	4.27 - 21.33	
1	100	С	44.03 - 264.20	6:1	4.27 - 28.45	
4	100	D	132.10 - 264.20	2:1	2.85 - 21.33	

1" – 4"

Weight (lbs.)

NOM	INAL SIZE	WT			
INCHES	mm	(Lbs.)			
1/2	15	3.31			
3/4	20	3.31			
1	25	3.31			
2	50	11.02			
3	80	18.74			
4	100	36.38			

* With PCTFE coating





Dimensions (Sizes 1" - 4") (in.)

NOMIN	IAL SIZE		ANSI CLASS 150											Dermon	
INCHES	mm	d	D	С	n	h	/1	/2	L	t	А	в	н	Е	Degree
1	25	0.98	4.25	3.12	4	0.62	1.57	4.72	6.30	0.55	10.71	7.91	8.58	5.91	50
2	50	2.05	6.00	4.75	4	.0.75	2.17	6.89	9.06	0.79	15.35	12.17	12.09	8.27	50
3	80	3.07	7.50	6.00	4	0.75	2.76	8.27	11.02	0.87	19.06	15.24	14.84	8.27	50

NOMIN	IAL SIZE	AN		ANSI CLASS 150		ANSI CLASS 150										Dognoo
INCHES	mm	d	D	С	n	h	11	12	L	t	Α	в	н	Е	Degree	
4	100	3.94	8.66	7.50	8	0.75	3.35	12.4	15.75	0.87	24.53	19.02	17.56	9.84	50	

Caution

- Constant flow valves are intended for "clean fluid" services. Should the possibility of foreign matters exist in the media, a sediment strainer of 60 mesh is to be installed in the upstream of the valve. For added protection, avoid installing valves with bonnet facing downward, regardless of vertical or horizontal installation.
- For the utmost functional accuracy, the following conditions apply:
 - Media specific gravity: Sizes 1/2" 3" up to 1.4, sizes 4" up to 1.1
 - 2. Media viscosity: Maximum 30 cp
 - 3. Working pressures are grouped into four that correlate to working temperatures per the format below.
- For size 4", maximum upstream working pressure is 70psi.
- Make sure the "flow direction" is clearly marked on the valve body before installation.
- Note that flow direction of Type A is different from that of Type B, C and D.
- The valve can be installed either vertically or horizontally, as long as fluid always fills the valve fluid passage.
- Never operate the valves when indicator is out of the gauge range.
- Never attempt to disassemble indicator unit at the top (preset by the factory).
- Never remove valve from pipeline under pressure.
- Always wear protective gloves and goggles.

Tips On Constant Flow Valve

- Keep constant flow rate without power or labor.
- To operate, simply rotate handle clockwise to bring indicator to the designated position.
- Rotate handle clockwise to decrease the flow and counterclockwise to increase.
- To fully close the valve, rotate handle clockwise to bring the indicator to "O" (zero) position.
- To properly set a new flow rate, rotate handle counterclockwise until the indicator goes beyond the intended new rate. Then, reverse (rotate clockwise) to the new rate.
- Indicator must be positioned at "O" (zero) of the gauge, if bonnet is to be disassembled.
- The valves are ideal for:
 - 1. Any constant media supply
 - 2. Well-balanced fluid supply in parallel piping systems
 - 3. Simultaneous and even fluid supply to multi-pipelines, multi-tanks, large and small pools

Available Upstream Pressure Range

(Size 1/2" - 4", Type-A,B,C,D)

BODY MATERIAL		PVC					
TEMPERATURE		35 - 85 F	86 - 105 F	106 - 120 F			
	0-35psi						
UPSTREAM PRESSURE RANGE	35-70psi						
	70-110psi						

Max. Allowable Upstream Pressure

- PVC 1/2" 3"; O 150psi
- PVC 4"; 0 70psi

Troubleshooting

What if fluid flows even when valve is fully closed?

- 1. Either seat or plug is damaged. Replace body or cylinder.
- 2. Foreign material caught between plug and orifice. Clean seat and plug.

What if valve cannot be closed?

1. Foreign material trapped or built up between plug and orifice. Disassemble and clean.

What if fluid leaks outside?

1. O-ring is chemically attacked or damaged. Replace O-ring.

What if flow is extraordinarily small?

- 1. Insufficient differential pressure. Adjust differential pressure.
- 2. Foreign material caught between plug and orifice. Clean.

What if flow rate exceeds the preset range?

- 1. Differential pressure exceeded the range. Adjust differential pressure.
- 2. Damaged or worn plug and/or orifice. Consult factory.
- 3. Foreign material caught between plug and orifice.

Ordering Information

Service Conditions

- 1. Media:_____ Conc:____%
- 2. Specific Gravity_____ Viscosity_____
- 3. Line Temperature: Max.____ (_i F) Line Temperature: Min.____ (_i F)
- 4. Flow Req'd: Max_____ (gpm) Min_____ (gpm)
- 5. Max Line Pressure: Upstream_____ (psi)
- Downstream_____ (psi)
- 6. Min Line Pressure: Upstream_____ (psi)
 - Downstream_____ (psi)

Valve Specifications

- 1. Line Size:_____
- 2. Type:_____
- 3. Temp. Range:_____
- 4. Pres. Range:_____
- 5. Seal Material:
- 6. Connection:_____

NOTE: CONSTANT FLOW VALVES ARE SPECIAL ORDERED FROM JAPAN AND CAN NOT BE ORDERED WITHOUT CUSTOMER PROVIDED SERVICE CONDITIONS

