




# Type E Pressure Relief Valve

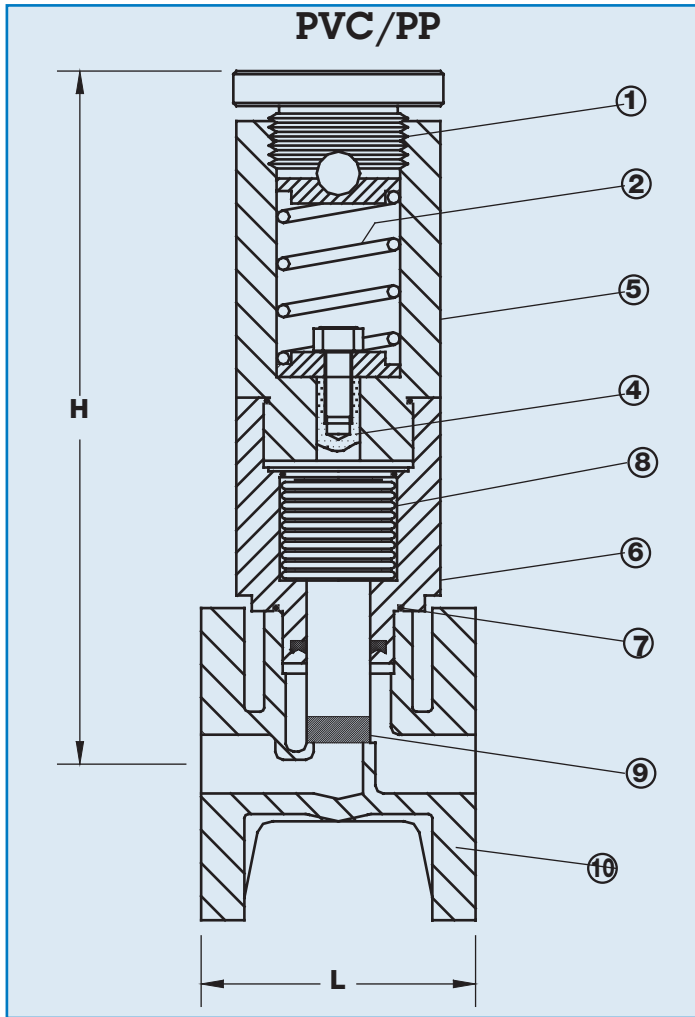


## Dimensions (in.)

NOMINAL SIZE		PVC, PP			PVDF, PTFE	
INCHES	mm	L (Flg)	L (Thd)	H	L (Flg)	H
1/2	15	3.3	3.3	8.3	5.1	8.3
3/4	20	3.7	3.7	8.7	5.9	8.7
1	25	4.3	4.3	9.8	6.3	9.8
1-1/4	32	5.3	5.3	12.2	7.0	12.2

## Cv Values

Cv Values			
1/2	3/4	1	1-1/4
4.7	7	9	18

## Pressure vs Temperature

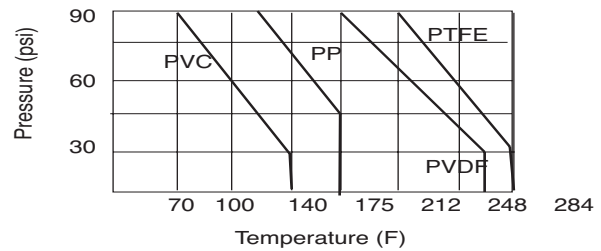

## Troubleshooting

### What if fluid flows even when fully closed?

1. Plug or seat is damaged. Change plug or seat.
2. Foreign matter caught or formed at plug and seat.

### What if the valve does not open?

1. No system pressure.
2. Set pressure set too high for system.

### What if fluid leaks from body?

1. Line pressure not below set pressure.

