

ACTUATORS AND CONTROLS

AE Actuator



How to Order AE Series Electric Actuators

AE - PREFIX	400 - TORQUE (LB - IN)	3 - VOLTAGE	BF - OPTIONS
AE	200	1 = 115 vac	0 = Standard
	400	2 = 24 vac	A = One extra switch & cam*
	600	3 = 220 vac	B = Two extra switches & cams*
	800		C = Three extra switches and cams*
	1000	4 = 12 vdc	D = Heater and Thermostat (15 watt)
	Enter all digits of Torque Value	5 = 24 vdc	F = Motor Brake (115 VAC & 24 VAC Only)
			H = Tropical Heater (15 watts)
			P = Positioner 4-20 mA
			T = Transmitter 4-20 mA

Note: AE will always be the first two characters of the part number, all digits from torque value must be entered into part number (i.e. 400, 1000 etc.) Only use one digit for voltage depiction (i.e. 1-5). For the options listing you may use more than one character, up to three, (i.e. O, AD or BD etc.)

Example:

AE-400-3BF :

400 lb. in.; 220 VAC; 2 extra switches and cams, motor brake

AE-1000-1D :

1000 lb. in.; 115 VAC; Heater and thermostat

- 1 Year warranty on positioner & positioner with transmitter
- Transmitter available with (P) positioner option only
- **Positioner & Transmitter are not CSA listed**
- * Not available with "P" option



For additional information, submittal sheets and manuals, visit www.apollovalves.com

Customer Service (704) 841-6000