


# STANCOR SIMPLEX THREE PHASE CONTROL PARTS REFERENCE (TYPICAL)

ALWAYS SPECIFY VOLTAGE AND PUMP HP WHEN REQUESTING PART NUMBERS

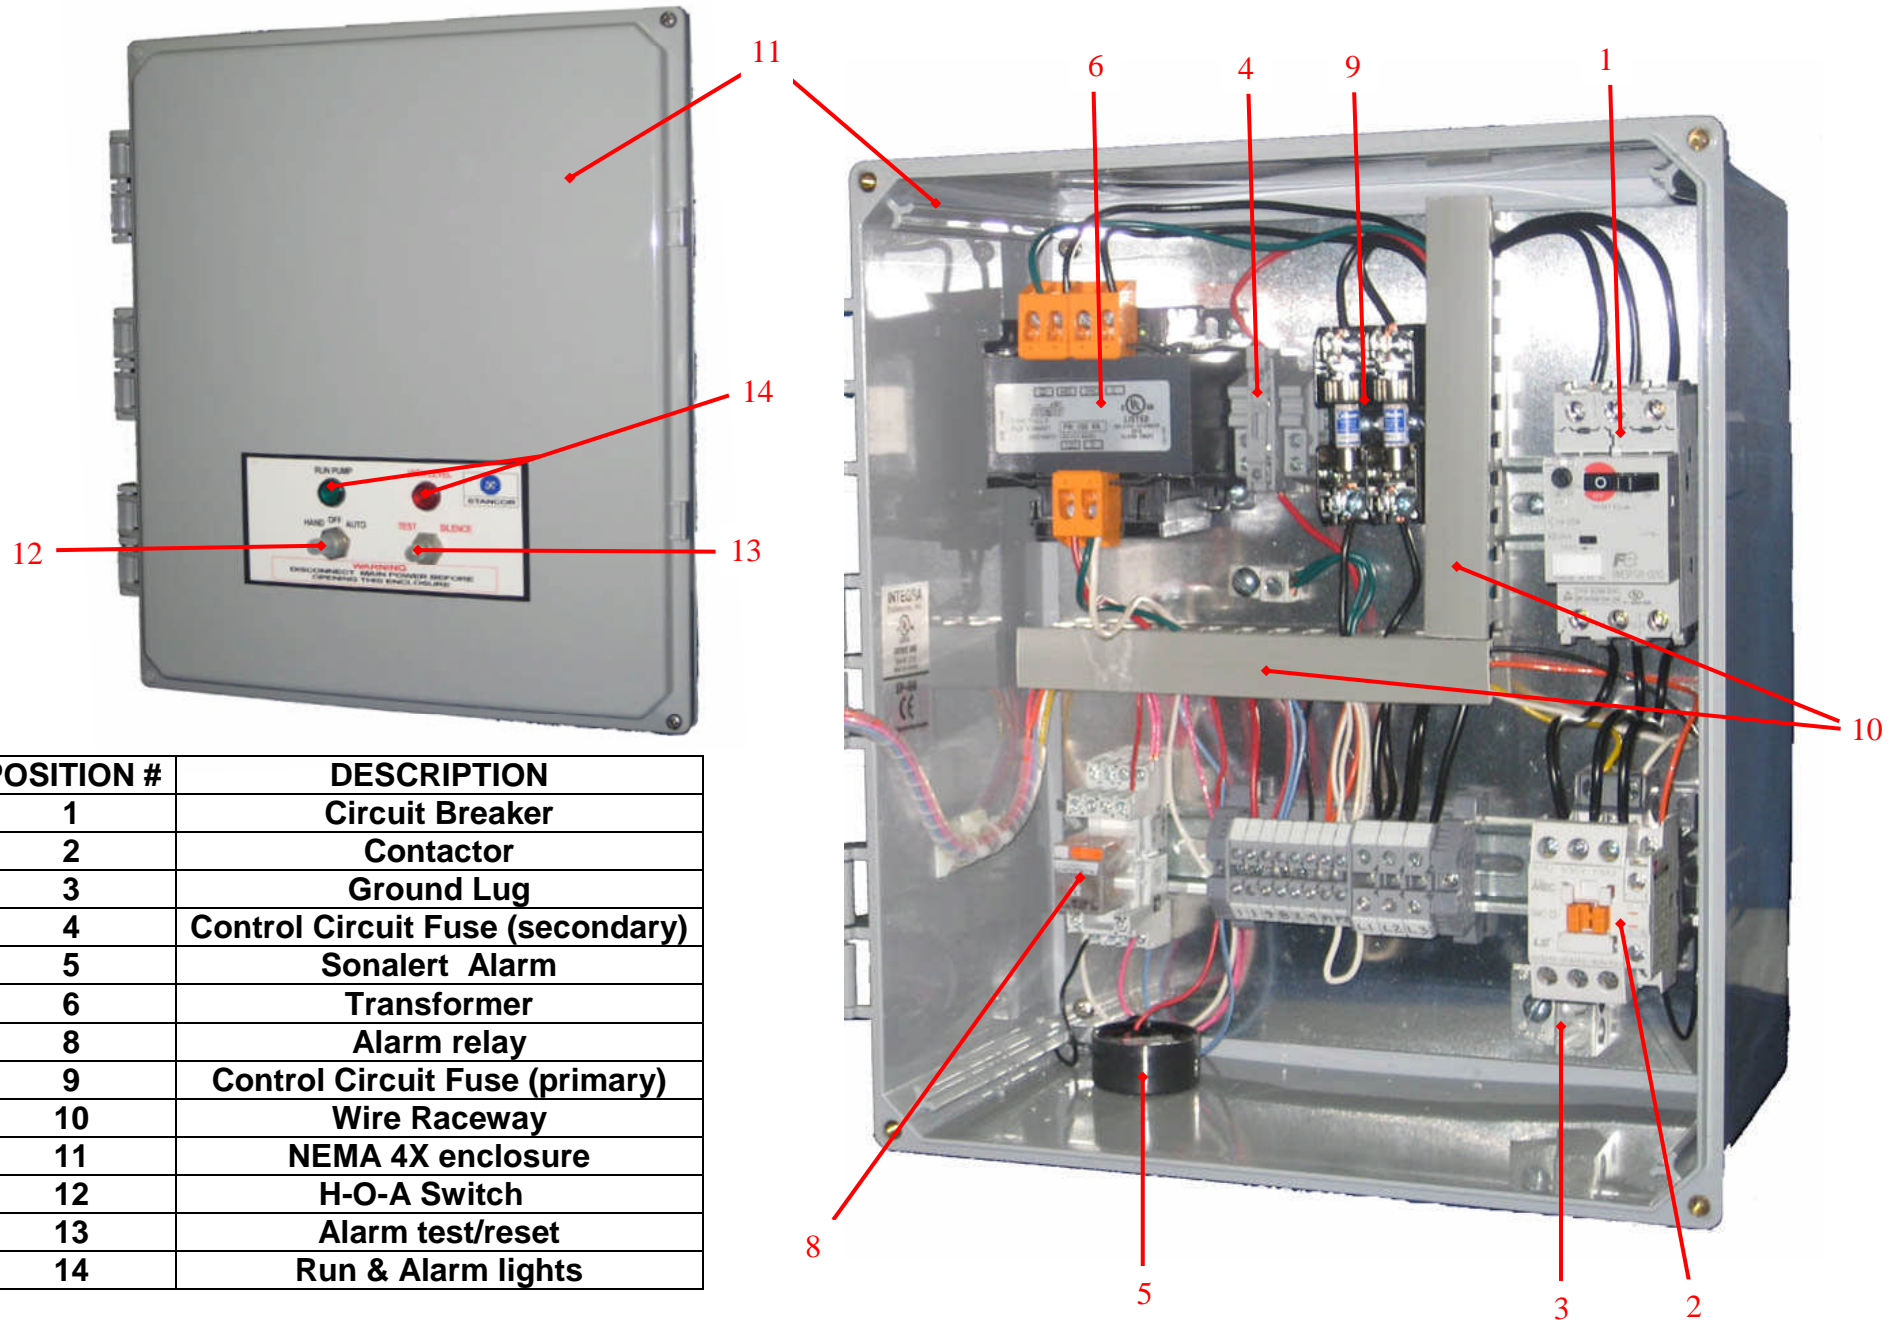

| POSITION # | DESCRIPTION                      |
|------------|----------------------------------|
| 1          | Circuit Breaker                  |
| 2          | Contactor                        |
| 3          | Ground Lug                       |
| 4          | Control Circuit Fuse (secondary) |
| 5          | Sonalert Alarm                   |
| 6          | Transformer                      |
| 8          | Alarm relay                      |
| 9          | Control Circuit Fuse (primary)   |
| 10         | Wire Raceway                     |
| 11         | NEMA 4X enclosure                |
| 12         | H-O-A Switch                     |
| 13         | Alarm test/reset                 |
| 14         | Run & Alarm lights               |