

Boost Pump

ltem	Boost Model	Includes Pump Model	Pump Rotation (from shaft end)	Delivery (gph)
Complete Boost Pump Assembly: (Including motor)	BB-1020M	B2VA-8241-5	R.H.	20
	BH-1030M	H3BA-E100B	R.H.	30
	BH-1070M	H6BA-E100B	R.H.	70
Boost Pump Assembly Less Motor: (Includes Pump, Bracket, Coupling and Motor Mounting Bolts)	BB-1020R	B2VA-8241-5	R.H.	20
	BH-1030R	H3BA-E100B	R.H.	30
	BH-1070R	H6BA-E100B	R.H.	70
Pressure Switch	P/N 128117		40 VA & 150 psi Max.	
Adapter for 48N Motor	P/N 134462			