


Operating Instructions For

CLIKR™ -5 Cable Remote Control

UR5U-8500

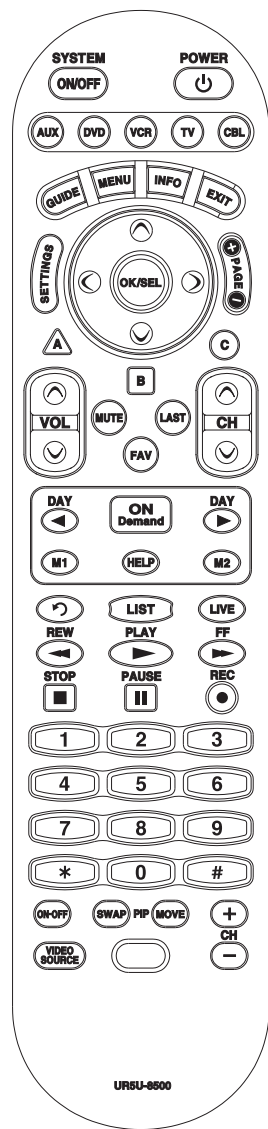

1 Introduction


The CLIKR™-5 UR5U-8500 is designed to operate Scientific-Atlanta, Pioneer, Voyager and Pace Micro digital set top boxes (including DVR & HD), plus the majority of TV, VCR, DVD and AUDIO equipment on the market as shown below.

CABLE : Cable Converters **TV** : Televisions
VCR : VCRs and TV/VCRs **DVD** : DVD Players
AUX : Audio Receivers and DVRs, etc.

2 Replacing Batteries

Before you program or operate the remote control, you must install two new AA alkaline batteries.

- STEP1** Remove the battery compartment cover on the back of your remote control.
- STEP2** Check battery polarity carefully, and install the batteries as shown in the illustration below.
- STEP3** Replace the battery compartment cover.

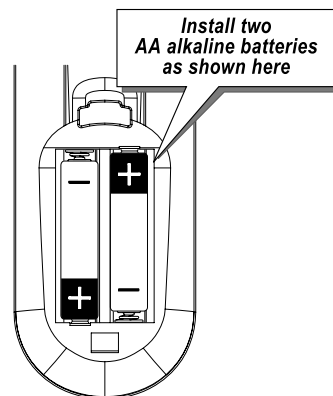

3 Operations

DEFAULT STATES:

Component Default: CABLE
Channel Default: CABLE channel and number keys through the CABLE. You have the option of controlling your CABLE channel and number keys through the TV or VCR. Refer to section F for programming steps.

Volume Default: TV volume and mute keys through the TV. You have the option of controlling your TV volume and mute through the Cable box, VCR or DVD. Refer to section G for programming steps.

4 Button Functions

SYSTEM ON/OFF
Designed to send Power On/Off commands for up to five Components with one button press. Refer to section E for details.

POWER
Allows you to turn your TV, VCR, DVD, AUX and Cable Box On and Off.

AUX, DVD, VCR, TV, CBL
Used to select the component you want to operate and signals remote control activity.

MENU
Displays the Applications Menu.

INFO
Displays Information about the program currently playing or highlighted in the program guide.

GUIDE
Displays the program guide listings.

EXIT
Exit from current screen.

SELECT
Selects highlighted screen options.

PAGE +/-
Accesses pages above or below the information currently displayed.

SETTINGS
Displays settings menu.

CURSOR NAVIGATION PAD (▲, ▼, ◀, ▶)
Navigate to and highlight an item from the on-screen choices.

MUTE
Silences the audio. Press to activate. Press again to restore sound to the previous level.

A, B, C
Make direct selections from on-screen menus.

VOLUME ▲/▼
Raises or lowers the sound level.

CHANNAL ▲/▼
Selects the next higher or lower channel.

FAV
Displays favorite channels.

LAST
Returns to the previously tuned channel.

ON DEMAND
Provides direct access to On Demand channel.

M2
Custom-programmable Macro button.

DAY ▲/▼
Skip forward or backward a whole day in the program guide.

LIVE
Displays live television programming.

M1
Custom-programmable Macro button.

VCR/DVD/VOD KEYS
Perform standard VCR and DVD functions when in VCR and DVD mode, and Video-On-Demand functions when in CABLE mode.

HELP
Opens Help. Also available as custom-programmable Macro button.

NUMBER PAD
Enter numbers to tune to channels. Also, make numeric entries on on-screen menus. NOTE: You can also use the CH ▲/▼ or the program guide as alternate ways to tune to channels.

LIST
Displays a list of programs you have recorded, allowing you to select one for viewing.

#
Reserved for future use.

ON-OFF
Opens or closes the PIP (Picture-in-Picture) window.

PIP CH +/-
Selects the next higher or lower channel in the PIP (Picture-in-Picture) window.

VIDEO SOURCE
Selects the video source.

MOVE
Moves the PIP (Picture-in-Picture) window to another location on the screen.

SWAP
Swaps the contents of the PIP window and the main viewing screen so that the PIP window displays on the main screen.

BLANK BUTTON
Custom-programmable Macro button.

5 Programming the Remote Control

There are two ways you can program your CLIKR™-5 remote:

- * **The Pre-Programmed 3-Digit Code Method**
- * **The Auto-Search Method**

The Pre-Programmed Code Method allows you to setup all the buttons at once by entering 3-digit code numbers that correspond to a particular Component's manufacturer/brand, so it's the fastest and easiest of the two methods. (Code Tables are on the backside of this Instruction Sheet.) The Auto-Search Method scans through all the codes in the remote control, one at a time.

IMPORTANT SETUP NOTE!

This pertains to all programming steps. When you are in setup mode, a component LED will light for 30 seconds. If you do not press a button within 30 seconds, the LED light will turn off and exit setup mode and you will need to start over.

A. Pre-Programmed 3-Digit Code Method

- STEP1** Turn on the Component you want to program (TV, VCR, DVD or AUX) using your old remote.

- STEP2** Press the [COMPONENT] button (TV, VCR, DVD or AUX) to be programmed and [OK/SEL] button simultaneously for 3 seconds. The Component LED light will turn on for 30 seconds indicating the unit is ready to be programmed.

- STEP3** Point the remote control toward the Component and enter the 3-digit code number assigned to your brand.

**Note: If the 3-digit code number you just entered is correct, the Component will turn Off. If it did not turn Off, continue entering code numbers listed for that brand until the Component turns Off.*

- STEP4** After you've entered the correct code number and the Component has turned Off, press the [POWER] button to turn the Component back On. Now it's time to test the VOLUME and CHANNEL buttons for the TV (or PLAY and STOP buttons for VCR and DVD) to make sure they all work. If any of the functions do not work as they should, repeat from STEP 3 using the next 3-digit code number listed for that brand.

- STEP5** Once you have found the correct 3-digit code, save it by pressing the same [COMPONENT] button one more time. The Component LED light will blink twice to confirm that the code was successfully stored.

Now, program the rest of your Components by repeating STEPS 1-5.

**Note: If the Pre-Programmed Method did not work, or if the Code Tables do not list your Component brand, use the Auto-Search Method as explained in Section B.*

B. Auto-Search Method

- STEP1** Turn on the Component you want to program (TV, VCR, DVD or AUX) using your old remote.

- STEP2** Press the [COMPONENT] button (TV, VCR, DVD or AUX) to be programmed and [OK/SEL] button simultaneously for 3 seconds. The Component LED light will turn on for 30 seconds indicating the unit is ready to be programmed.

- STEP3** Point the remote toward the Component and press the [CH▲] or [CH▼] button one step at a time or keep it pressed. The remote will emit a series of ON/OFF commands. Release the [CH▲] or [CH▼] button as soon as the Component turns Off.

- STEP4** Test functions. (Same as for 3-Digit Code Programming Method - Section A). If any of the functions do not work as they should, repeat from STEP 3 using [CH▲] or [CH▼] buttons to find the correct code.

- STEP5** Save the code. (Same as for 3-Digit Code Programming Method - Section A).

Now, repeat the Auto-Search Method for those Components you could not program earlier with the Pre-Programmed Method.

C. Finding a Component Button's Setup Code Number

If you used the Auto-Search Method to program a Component, you may not know what the correct code number is. Here is a way for you to identify the code number, so you can record it for future reference.

- STEP1** Press the [COMPONENT] button (TV, VCR, DVD or AUX) you want to verify and the [OK/SEL] button simultaneously for 3 seconds. The Component LED light will turn on for 30 seconds.

- STEP2** Press the [INFO] button and count the number of times the Component LED light blinks. This number indicates the first digit of the code, followed by the second and third, each separated by a one second pause when the LED will turn off.

**Note: 10 blinks represents the number zero.
Example: One blink, (pause), eight blinks, (pause) and three blinks, indicates code number 183.*

D. AUX Function: Programming a 5th Component

You can take advantage of the AUX function to program a 5th Component such as a second TV, VCR, DVD or Audio Component.

- STEP1** Turn on the 5th Component you want to program (TV, VCR, DVD or Audio) using your old remote.

- STEP2** Press the [AUX] button and the [OK/SEL] button simultaneously for 3 seconds. The [AUX] Component LED will turn on for 30 seconds.

- STEP3** Press the [COMPONENT] button you want to setup. Point the remote control toward the Component and enter the 3-digit code number assigned to your brand.

**Note: If the 3-digit code number you just entered is the correct number, the Component will turn Off. If it did not turn Off, continue entering code numbers listed for that brand until the Component turns Off.*

- STEP4** Test functions. (Same as for 3-Digit Code Programming Method - Section A). If any of the functions do not work as they should, you need to find a new code.

- STEP5** Once you have found the correct 3-digit code, save it by pressing the [AUX] button one more time. The Component LED light will blink twice to confirm the code was stored. Now when you press the AUX button, all the buttons will work with that 5th Component.

E. Programming the System On/Off Button

This allows you to program the System On/Off button so it can send up to five power On/Off commands with one button press.

- STEP1** Press the [CBL] button.
- STEP2** Press the [SYSTEM ON/OFF] button and the [OK/SEL] button simultaneously for 3 seconds. The [CBL] button will turn on for 30 seconds.

- STEP3** Press the first [COMPONENT] button you want to store in the [SYSTEM ON/OFF] button and then the [POWER] button. Repeat this for other Components until you have stored all the desired power commands into the [SYSTEM ON/OFF] button.

- STEP4** Press the [CH+] button to save the power commands you stored. The [CBL] button will blink twice to confirm the commands have been saved.

F. Programming Channel Control

You can program the channel controls (Channel Up, Channel Down and Last) from one Component to operate in another Component mode. Default channel control settings on the remote control are as follows:

CBL : CBL **TV** : CBL **VCR** : CBL
DVD : DVD **AUX** : AUX

If you wish to store the TV channel control in TV mode, use the following steps.

- STEP1** Press the [TV] button and the [OK/SEL] button simultaneously for 3 seconds. The [TV] Component LED will turn on for 30 seconds.

- STEP2** Press the [VOL -] button.
- STEP3** Press the [TV] button again. The Component LED will blink twice to confirm the programming.

To return to original state:

If you wish to restore the CABLE channel control in TV mode, repeat the above steps but press [CBL] in **STEP3**.

G. Programming Volume Control

You can program the volume controls (Volume Up, Volume Down and Mute) from one Component to operate in another Component mode. Default volume control settings on the remote control are as follows:

CBL : TV **TV** : TV **VCR** : TV
DVD : TV **AUX** : AUX

If you wish to store the CBL volume control in CBL mode, use the following steps.

- STEP1** Press the [CBL] button and the [OK/SEL] button simultaneously for 3 seconds. The [CBL] Component LED will turn on for 30 seconds.

- STEP2** Press the [VOL +] button.
- STEP3** Press the [CBL] button. The Component LED will blink twice to confirm the programming.

To return to original state:

If you wish to restore the TV volume control in CBL mode, repeat the above steps but press [TV] in **STEP3**.

H. Programming a 'Macro' or Favorite Channel

In CBL mode, the M1, M2, HELP and BLANK buttons can be programmed to act as a 'Macro' or Favorite Channel button. This allows you to send up to 10 commands with one button press.

- STEP1** Press the [CBL] button to select the CBL mode.

- STEP2** Press the M1, M2, HELP or BLANK button and [OK/SEL] button simultaneously for 3 seconds. The [CBL] Component LED will turn on for 30 seconds.

- STEP3** Press up to 10 buttons you wish to store. The [CBL] Component LED will blink once for each command entered.

- STEP4** Press the [CH+] button to store the commands that were selected. The [CBL] Component LED will blink twice to confirm the storage of commands.

I. Low Battery Warning

When the batteries are low and need to be replaced with fresh batteries, the Component LED lights will blink 2 times in sequence whenever a [POWER] button is pressed to turn on equipment.

J. Memory Lock System

This remote control is designed to retain programmed memory for 10 years even after batteries are removed from the remote control.

K. Record Your Component Set-up Codes

TV Set-up Code Number:
VCR Set-up Code Number:
DVD Set-up Code Number:
AUX Set-up Code Number:

