# **APR CONTROL - R-410A - SPEC. & DIMENSION SHEET**

Model #	Modulation Capacity	Unit Dimensions			<b>Connection Dimensions (OD)</b>				
		x	Y	z	EE	L	м	G	Application
APR-410-1	1.5 tons	8.5"	8"	4"	N/A	3/8"	5/8"	3/8"	<b>G</b> - BOTTOM CONNECTION
APR-410-2	2.5 tons	8.5"	8"	4"	1/4"	3/8"	5/8"	3/8"	<b>G</b> - BOTTOM CONNECTION
APR-410-3	3.5 tons	8.5"	8"	4"	1/4"	3/8"	5/8"	3/8"	<b>G - BOTTOM CONNECTION</b>
APR-410-6	6.5 tons	9.5"	10"	4.5"	1/4"	3/8"	5/8"	5/8"	<b>G</b> - SIDE CONNECTION
APR-410-10	10 tons	12"	11"	5.5"	1/4"	3/8"	7/8"	7/8"	<b>G</b> - SIDE CONNECTION

## The APR Control Hot Gas Valve should be set to begin opening at approximately 118 PSI ~40°F

- SUPPLY BALL SHUT-OFF VALVES FOR ALL CONNECTIONS
- SUPPLY TEE FOR SUCTION LINE CONNECTION
- SUPPLY TEE FOR HOT-GAS CONNECTION
- SUPPLY TEE FOR LIQUID LINE CONNECTION

**APR Control Selection:** 

System or Stage size is reduced by the Modulation Capacity listed above

Oil entrainment in suction line must be addressed

Please refer to Rawal Devices Fast Selection Chart or Consult with Rawal Devices Engineers

### **RAWAL DEVICES, INC.**

Call Tech Support: (800) 727-6447

WWW.RAWAL.COM

#### WHEN REQUIRED, SUPPLY TEE FOR EE CONNECTIONS EXTERNAL EQUILIZERS - EE - HAVE 1/4" SWEAT CONNECTION TEE EE CONNECTIONS INTO SUCTION LINE

BOTH SENSING BULBS ON LIQ INJ VALVE AND HOT GAS VALVE MUST BE ATTACHED AND INSULATED TO SUCTION LINE BETWEEN TEE TO APR CONTROL DISCHARGE COMING FROM TOP OF THE CHAMBER AND COMPRESSOR

### ONLY WHEN NECESSARY:

REMOVE CAPS FROM ADJUSTMENT STEMS PRIOR TO ADJUSTING

TO ADJUST VALVES WHEN FACING ADJUSTING STEM CLOCKWISE DECREASES PRESSURE / TEMPERATURE. COUNTER-CLOCKWISE INCREASES PRESSURE / TEMPERATURE.

