Flare Calibration Tool Software
T1SW1000

SENSTAR™
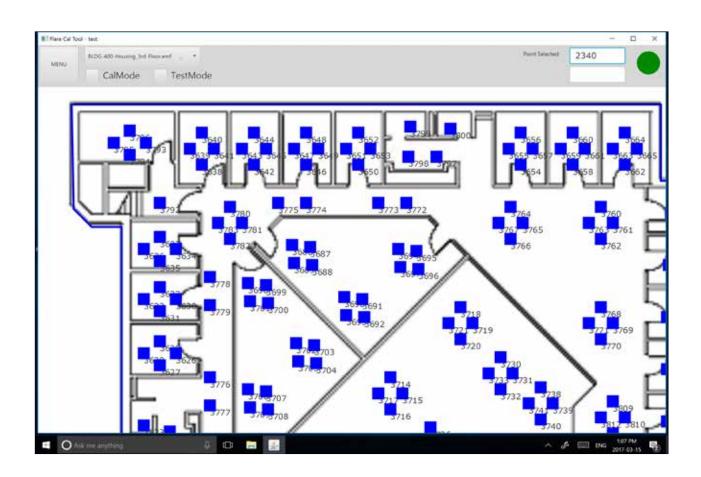
Description

The Flare Calibration Tool is a Windows-based application designed to assist in the calibration of Flare sensor units. Intended to be run on a Windows tablet, the Calibration Tool uses an attached Flare Personal Protection Device (PPD) to generate RF samples at locations throughout the facility.

Minimum System Requirements

- Operating system: Windows 7, 8, or 10
- Hardware: Windows Surface Pro 4 recommended
- Display: 1920x1080 (72 DPI) (minimum resolution)
- Touch screen recommended

See the Flare Datasheet for a full system description.

info@senstar.com • senstar.com

SENSTAR™