

HENRY®



314 ReadySet™

Premixed Mastic Adhesive

Quickly Set Porcelain,
Quarry, Stone,
Ceramic & Mosaic Tile

- Use for setting porcelain, quarry, stone, ceramic & mosaic tile
- Use for walls, floors and countertops
- Ready to use – premixed for easy installation
- Grout in 24 hours

THE PROFESSIONAL'S FORMULA FOR SUCCESS™

HENRY®

314 ReadySet™

HENRY® 314 ReadySet™ Premixed Mastic Adhesive is a premixed mastic adhesive for installing porcelain, quarry, stone, ceramic and mosaic tile over interior walls, floors and countertops. HENRY 314 ReadySet can be used to install tile up to 12"x12" and has excellent grab.

USE FOR:

Installing porcelain, quarry, stone, ceramic and mosaic tile over interior floors, walls and countertops.

BONDS TO: Concrete, concrete block, cement backer boards, drywall, plaster, wood substrates, brick and existing ceramic tile on all grade levels. Glossy painted surface and glazed ceramic tile must be abraded. Do not use over mortar beds, in gang showers, or on walls made of plywood or particleboard.

Do not use to install moisture sensitive stone tile, lug back ceramic tile, pre-grouted wall tile sheets, or porcelain tile over non-porous substrates. Additionally, do not use to install any tile over gypsum backing board or water-resistant gypsum backing board (green board) where there will be direct exposure to water. Do not use for installing tile larger than 6" x 6" on floors, and larger than 12" x 12" on walls. Do not use in areas of constant water immersion, such as fountains or pools.

SURFACE PREPARATION:

Condition the area to be installed, adhesive and tile at 65°F (18°C) or above for 48 hours before, during and 48 hours after installation.

Substrate must be sound, smooth, dry, clean and free of excessive moisture or alkali. Remove dirt, wax, loose paint and all other foreign matter that would interfere with a good bond such as curing agents and sealers.

INSTALLATION:


- Stir any liquid on the surface into the adhesive.
- Full spread adhesive evenly with flat side of the recommended trowel to obtain a good mechanical bond. Do not leave bare spots. Then comb adhesive with the notched side of the trowel.
- Install tile immediately. Working time on concrete is up to 30 minutes. Working time on all other substrates is 40 to 50 minutes. Do not allow adhesive to skin over.
- Push the tile into the adhesive to obtain full transfer onto the back of the tile.

- Allow adhesive to dry 24 hours on walls and 48 hours on floors before grouting. HENRY recommends the use of HENRY Flex Grouts.

COVERAGE:

- Ceramic and porcelain tile (larger than 6" x 6"), and all quarry tile:
1/4" x 1/4" x 1/4" Square-notch trowel
105 sq. ft. / 3.5 gallon
- Ceramic tile (6" x 6" or smaller):
5/32" x 3/16" V-notch trowel
175 sq. ft. / 3.5 gallon

TROWEL SIZES:

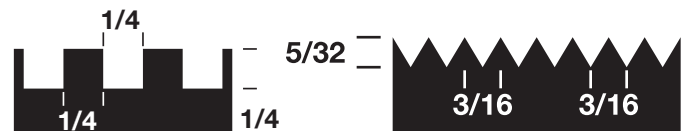

CERAMIC AND PORCELAIN TILE
(LARGER THAN 6" X 6"), and
all quarry tile:
1/4" x 1/4" x 1/4" Square-notch trowel
105 sq. ft. / 3.5 gallon

CERAMIC TILE (6" X 6" OR SMALLER):
5/32" x 3/16" V-notch trowel
175 sq. ft. / 3.5 gallon

CLEAN UP:

Remove wet adhesive residue with a clean, white cloth dampened with soapy water. Make sure to clean tools before adhesive dries.

WARRANTY:

For complete warranty details, contact your dealer or our Customer Service Center at 800-232-4832.

HENRY®

The W.W. Henry Company
400 ARDEX Park Drive
Aliquippa, PA 15001
(724) 203-8000

Customer Service and Technical Information
1-800-232-4832
www.wwhenry.com

HS148 (12/08)

HENRY Commitment

HENRY is committed to helping you get the best results in professionally installed floors. 70 years of experience combined with our relationships with the leading resilient, wood and carpet manufacturers ensure that you receive the products and the support you need to complete the job successfully and profitably.

THE PROFESSIONAL'S FORMULA FOR SUCCESS™