

# HENRY®



## 527 TileFlex Plus™

### Flexible Thinset Mortar

Easily Set Porcelain,  
Quarry, Stone &  
Ceramic Tile

- Sets porcelain, quarry, stone, ceramic & mosaic tile
- Ideal for tile installations over plywood or cement backer boards
- Easy to use – just add water – no additives required
- 3 hour pot life for easy installations

THE PROFESSIONAL'S FORMULA FOR SUCCESS™

# HENRY<sup>®</sup> 527 TileFlex Plus<sup>™</sup>

**HENRY<sup>®</sup> 527 TileFlex Plus<sup>™</sup> Flexible Thinset Mortar is a Portland cement-based, polymer modified thinset mortar for the installation of porcelain, quarry, stone, ceramic and mosaic tile over most interior and exterior surfaces. HENRY TileFlex Plus Thinset Mortar can also be used to install porcelain tile over interior plywood floors.**

#### USE FOR:

- Quarry, ceramic & mosaic tile
- Natural stone (not moisture sensitive)\*
- Porcelain tile (not for use on exterior walls)
- \* For marble and other moisture sensitive tile and stone installations, use HENRY 316 MarbleFlex<sup>™</sup> Marble & Stone Thinset Mortar.

**BONDS TO:** Concrete, cement backer boards, drywall, terrazzo, masonry, exterior grade plywood (interiors only).

#### SURFACE PREPARATION:

All existing surfaces to receive tile must be clean, sound, solid, and free of weak or loose areas, dust, dirt, oil, or any contaminant that may act as a bond breaker. Remove flaking or deteriorating layers. Sealers should be removed. When necessary, surface preparation must be by mechanical means, such as a chisel or sanding. DO NOT SAND OR GRIND CUTBACK ADHESIVE RESIDUE. WET SCRAPE TO A FINE FILM. DO NOT USE SOLVENTS OR ACIDS. Surfaces to receive HENRY TileFlex Plus Flexible Thinset Mortar must be a minimum of 50°F/10°C. The plane of wall surfaces must be plumb and true. Floor surfaces must have minimal variation in the plane or the slope. Should pre-leveling on an interior floor be required, use an appropriate HENRY substrate preparation product. Tiling may proceed as soon as product has cured. Do not install tile directly over expansion joints or other existing moving joints and where substrate materials change composition. (See ANSI A 108 AN-3.7 for further information.)

#### MIXING:

The standard mixing ratio is 7.5 to 8.75 quarts of clean water per 50 lb. bag. For mixing smaller batches, mix 2.25 parts powder with 1 part water by volume. Pour clean water into the mixing container first, then add the HENRY TileFlex Plus Flexible Thinset Mortar. To obtain a stiffer consistency, use the lower mixing ratio. For best results, mix with a mixing paddle and heavy-duty drill. Just prior to application on the substrate, the mixture should be stirred again to ensure a creamy, smooth, lump-free consistency. Setting of tile may commence immediately.

NOTE: The pot life of HENRY TileFlex Plus Flexible Thinset Mortar is 3 hours at 70°F/21°C. If the mortar begins to harden within this time, stir material again before using. DO NOT ADD MORE WATER!

#### INSTALLATION:

After mixing, apply the mortar to the substrate with the flat side of a trowel to obtain a solid mechanical bond. Apply to an area no greater than that which can be covered with tile while the mortar remains plastic (approx. 20 minutes open time, depending on the substrate and job site conditions). Immediately comb the mortar with a notched trowel of sufficient depth to ensure that the tiles are covered uniformly over their entire surface. The type and size of the tiles will dictate the size of the

notched trowel to be used. The position of the tiles may be corrected for approximately 5 to 10 minutes after installation. Rough or uneven substrates may first be treated with a full scratch coat of HENRY TileFlex Plus. Installation of tiles may begin after the scratch coat has hardened overnight.

#### COVERAGE:

- 90 to 100 sq. ft. per 50 lb. bag 1/4" x 1/4" x 1/4" sq. notched trowel
- 70 to 75 sq. ft. per 50 lb. bag 1/4" x 3/8" x 1/4" sq. notched trowel

**COLORS:** Available in Gray and White

#### BACK-BUTTERING:

When setting certain types of tiles, it may be necessary to trowel a layer of mortar on the back of each tile prior to placement on the combed mortar bed in order to achieve the required mortar-to-tile contact. Press each tile firmly into the freshly combed mortar to insure maximum mortar contact with tile. Tile must not be applied to skinned-over mortar.

#### GROUTING:

Tiles can be grouted after 8 hours on walls and 24 hours on floors. HENRY recommends the use of HENRY Flex Grouts.

#### CLEAN UP:

Use clean, damp cloth for clean up. If the material dries, remove by mechanical means.


#### MIXING RATIO:

- 7.5 to 8.75 quarts water per 50 lb. bag
- For smaller batches, mix 2.25 parts powder with 1 part water (by volume).
- Shelf life is one year if unopened. Store in a cool dry place.


#### WARRANTY:

For complete warranty details, contact your dealer or our Customer Service Center at 800-232-4832.

#### TROWEL SIZES:

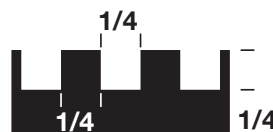

SQ-NOTCH 1/4"D x 1/4"W x 1/4"A  
90-100 sq. ft./50 lb. bag

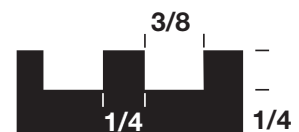

SQ-NOTCH 1/4"D x 3/8"W x 1/4"A  
70-75 sq. ft./50 lb. bag

# HENRY<sup>®</sup>

The W.W. Henry Company  
400 ARDEX Park Drive  
Aliquippa, PA 15001  
(724) 203-8000

Customer Service and Technical Information  
1-800-232-4832  
www.wwhenry.com

HS144 (11/07)

#### HENRY Commitment

HENRY is committed to helping you get the best results in professionally installed floors. 70 years of experience combined with our relationships with the leading resilient, wood and carpet manufacturers ensure that you receive the products and the support you need to complete the job successfully and profitably.

# THE PROFESSIONAL'S FORMULA FOR SUCCESS<sup>™</sup>