


Pressure Drop Chart

Sure Check™ Valves

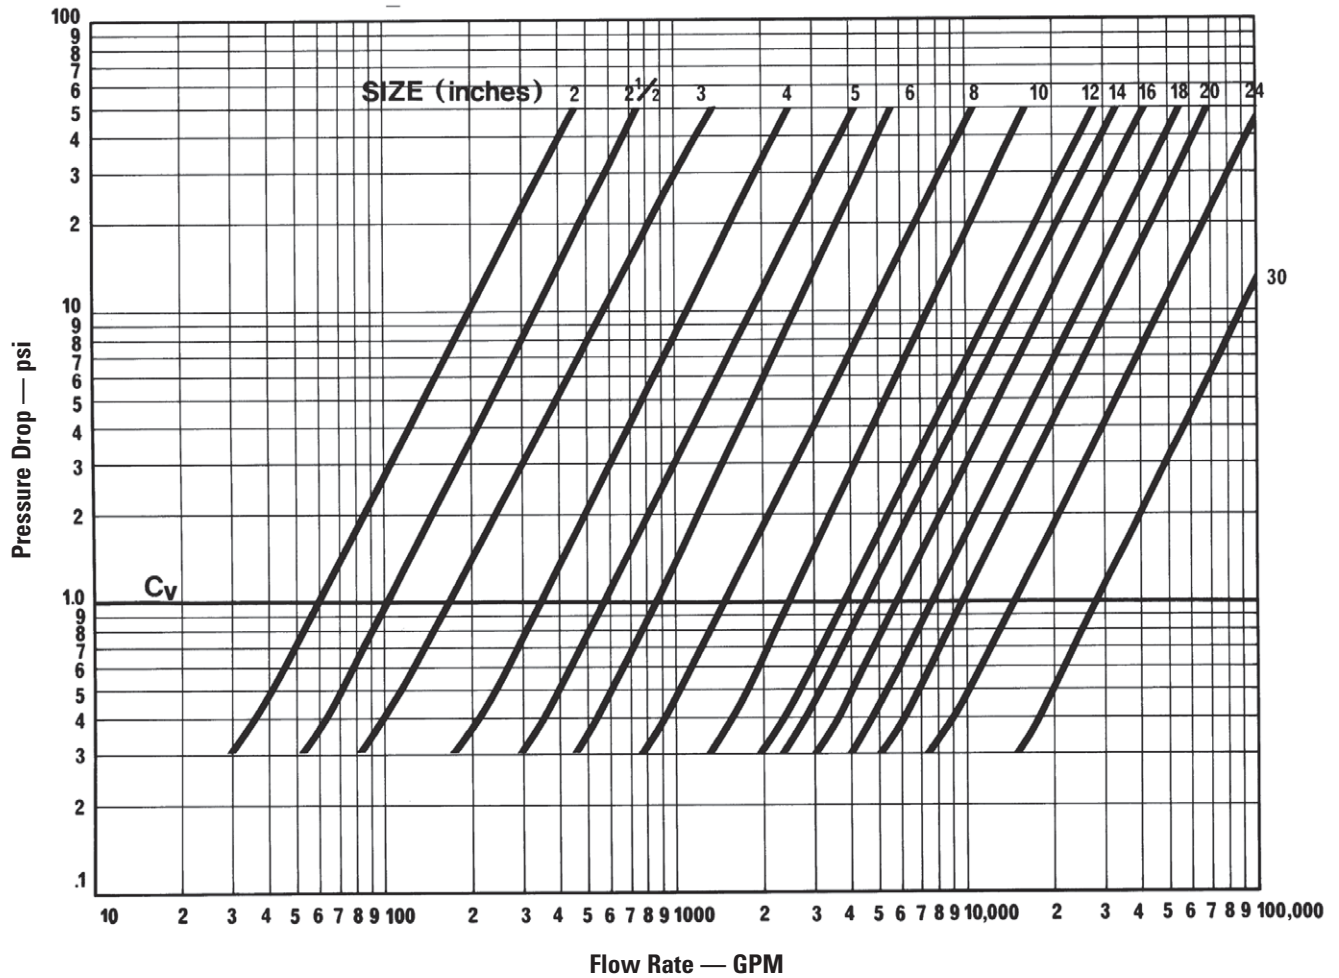

This chart is based on the flow of clean water at ambient temperature. Consult our Engineering Department for pressure drop information for steam, gases or viscous fluids.

Good piping practice recommends placement of check valves a distance equal to 5 to 10 pipe diameters from any turbulence producing device such as elbow, pumps, etc.

Consult factory for pressure drops of sizes larger than 30".

