


HENRY®

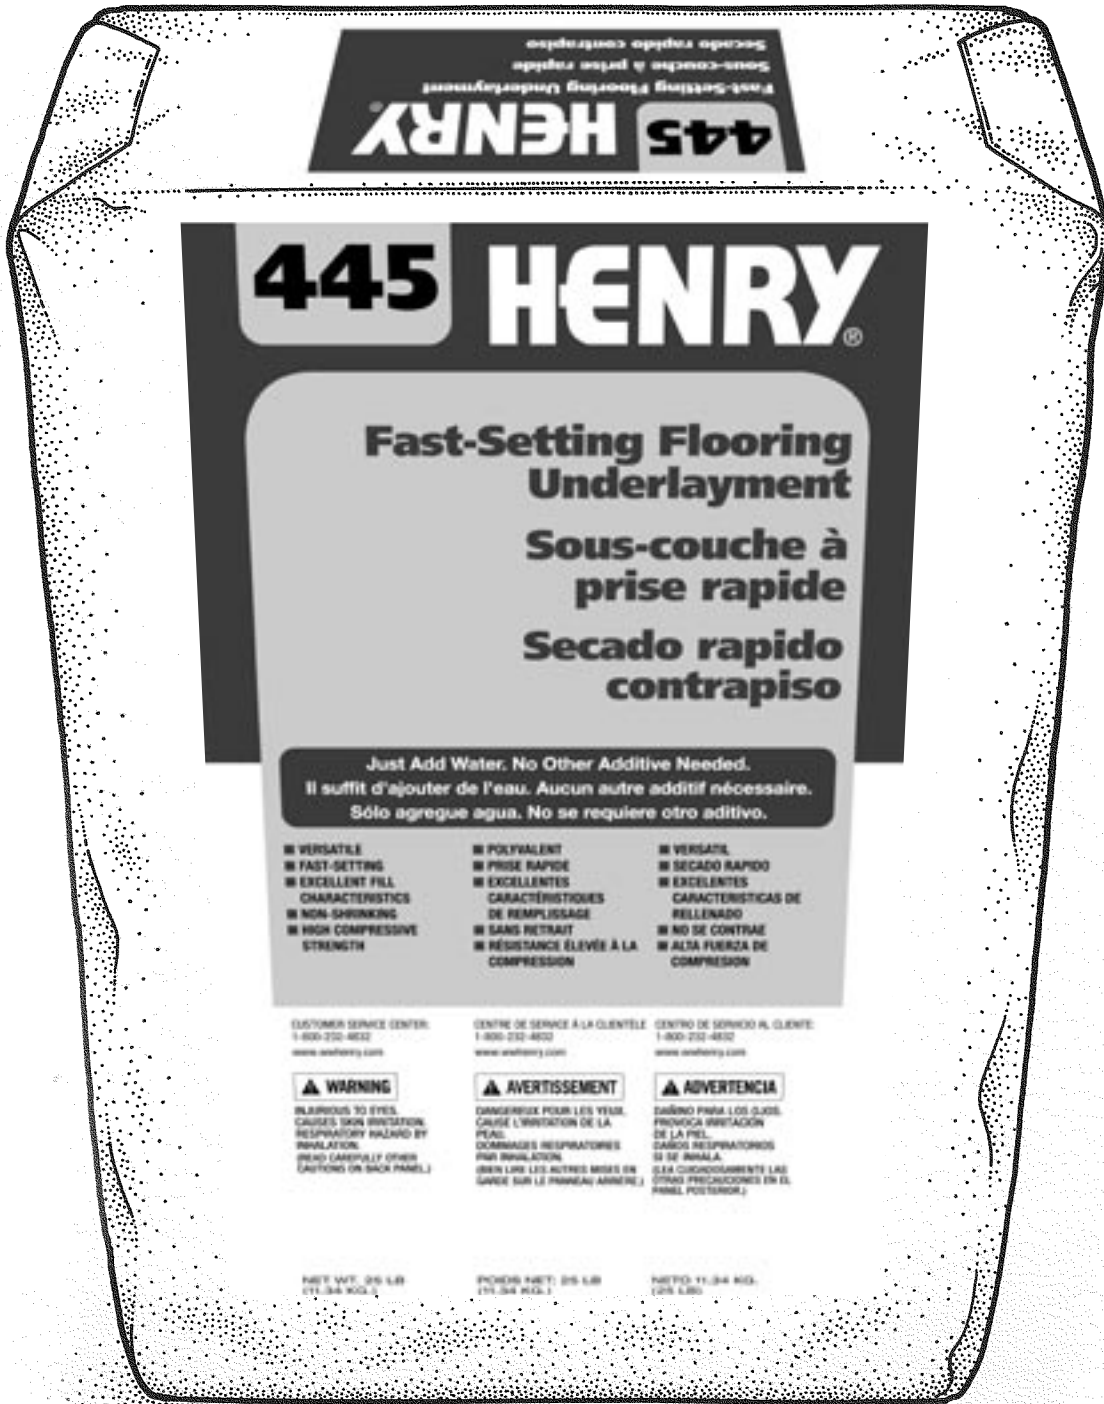

445

Fast-setting, cement-based underlayment

Versatile

Ideal for patching and leveling concrete

Fast-setting

Ready for most flooring in 1-2 hours

Excellent Fill Characteristics

Featheredge to 1" using two 1/2" applications

Non-shrinking

Reduces installation time

High Compressive Strength

Exceeds 4200 psi

Size Available

25 lb. bag

445 HENRY®

Fast-Setting Flooring Underlayment

Sous-couche à prise rapide

Secado rapido contrapiso

Just Add Water. No Other Additive Needed.
Il suffit d'ajouter de l'eau. Aucun autre additif nécessaire.
Sólo agregue agua. No se requiere otro aditivo.

- VERSATILE
- FAST-SETTING
- EXCELLENT FILL CHARACTERISTICS
- NON-SHRINKING
- HIGH COMPRESSIVE STRENGTH

- POLYVALENT
- PRISE RAPIDE
- EXCELLENTE CARACTÉRISTIQUES DE REMPLISSAGE
- SANS RETRAIT
- RÉSISTANCE ÉLEVÉE À LA COMPRESSION

- VERSÁTIL
- SECADO RÁPIDO
- EXCELENTE CARACTERÍSTICAS DE RELLENADO
- NO DE CONTRAHE
- ALTA FUERZA DE COMPRESION

CUSTOMER SERVICE CENTER:
1-800-232-4832
www.henry.com

CENTRE DE SERVICE À LA CLIENTÈLE:
1-800-232-4832
www.henry.com

CENTRO DE SERVICIO AL CLIENTE:
1-800-232-4832
www.henry.com

▲ WARNING

HAZARDOUS TO EYES.
CAUSES SKIN IRRITATION.
RESPIRATORY IRRITANT BY INHALATION.
READ CAREFULLY OTHER
CAUTIONS ON BACK PANEL.

▲ AVERTISSEMENT

DANGEREUX POUR LES YEUX.
CAUSE IRRITATION DE LA PEAU.
DOMMAGES RESPIRATOIRES
PAR INHALATION.
LIRE LES AUTRES MESSAGES EN
GARANIE SUR LE PANNEAU ARRIERE.

▲ ADVERTENCIA

DAÑINO PARA LOS OJOS.
PROVOCA IRRITACION
DE LA PIEL.
DAÑOS RESPIRATORIOS
SI SE INHALA.
LEA CUIDADOSAMENTE LAS
OTRAS PRECAUCIONES EN EL
PANEL POSTERIOR.

NET WT. 25 LB.
(11.34 KG.)

PONDS NET: 25 LB.
(11.34 KG.)

NETO 11.34 KG.
(25 LB.)

THE PROFESSIONAL'S FORMULA FOR SUCCESS™

HENRY® 445

HENRY 445 fast-setting underlayment is The Professional's Formula For Success™ when patching and leveling concrete subfloors on all grade levels. HENRY 445 is a great value for commercial applications.

SUBSTRATE	CEMENT-BASED PATCHES & UNDERLAYMENTS	
	HENRY 445	HENRY 545
	FAST-SETTING FLOORING UNDERLAYMENT	FEATHER EDGE CEMENT PATCH
	Fast Dry	Fast Dry, Feather Edge
Commercial Applications	BETTER	BETTER
Residential Applications	BETTER	BEST
Patch holes and voids in wood	BETTER	BEST
Skim-coat wood underlayments		BEST
Underlayment joints	BETTER	BETTER
Patch concrete on or above grade only	BETTER	BETTER
Patch concrete on all grade levels	BETTER	BETTER
Existing asphalt "cutback" adhesive residue on concrete		BETTER
Ceramic, terrazzo and marble	BETTER	BETTER
Polymeric poured floor	BETTER	BETTER

INSTALLATION TIPS:

- Condition the area to be installed, adhesive, underlayment, and flooring to 65°F (18°C) or above for 48 hours before, during, and for 48 hours after installation. Maximum temperature for use is 90°F (32°C).
- Subfloor must be smooth, sound, dry, clean, and free of dirt, wax, polish, paint, and all other foreign matter which may interfere with a good bond including curing agents and sealers. Concrete must be dry and free of excess alkali.
- Slightly dampen concrete substrates with clean water and apply underlayment while damp. Do not leave standing water.
- For a superior bond, prime wood with HENRY 336 Latex Liquid Additive.
- Mix powder into water slowly and carefully to the proper consistency.
- Can be applied in one layer featheredged to 1/2" thick or two layers to a maximum thickness of 1".
- Mix approximately 25 pounds of powder to 2 1/2 quarts of water. For smaller batches, add 4 parts powder to 1 part water (by volume).
- Mixing containers must be clean as unused material will contaminate newly mixed underlayment.
- Do not add additional water after the proper consistency has been reached. If underlayment starts to set before using, discard and do not attempt to remix.
- Scratch or trowel to the substrate to be certain it wets properly and thus assures good adhesion.
- Start finishing immediately using a steel trowel.
- Do not over-trowel or re-trowel.
- Clean tools with water frequently and dip trowel in water often to make finishing easier.
- All finishing must be done within 20 to 30 minutes. Allow to dry 1 to 3 hours before installing floor covering.
- Clean all tools with water before the material dries.
- Most adhesives will exhibit shorter working times when used over HENRY 445.

SUBSTRATES:

HENRY 445 Fast-Setting Flooring Underlayment will bond to the substrates listed. Specific installation recommendations should come from the flooring manufacturer:

- Interior concrete only
- Wood and wood underlayments; wood should be suspended; not for stripwood floors over 4" wide
- Ceramic tile, terrazzo, marble, and polymeric poured floors
- Primed, poured-in-place gypsum subfloors
- Radiant heated subfloors where the surface temperature does not exceed 85°F (29°C)

HENRY®

The W.W. Henry Company
400 ARDEX Park Drive
Aliquippa, PA 15001
(724) 203-8000

Customer Service and Technical Information
1-800-232-4832
www.wwhenry.com

HENRY Commitment

HENRY is committed to helping you get the best results in professionally installed floors. 70 years of experience combined with our relationships with the leading resilient, wood and carpet manufacturers ensure that you receive the products and the support you need to complete the job successfully and profitably.

HS102 (Rev. A 06/05)

THE PROFESSIONAL'S FORMULA FOR SUCCESS™