
## **GENERAL PURPOSE HAND TOOLS**

## **Screw Extractors**




Catalog No.	Model No.	Screw Diameter		Use Drill		Flute Diameter		Length Overall		Weight		Max. Depth		Std. Pack
		in.	mm	in.	mm	in.	mm	in.	mm	OZ.	g	in.	mm	Fack
35535	1	1/4	6	1/8	3	0.139	3.5	2 <sup>5</sup> /16	59	1/2	14	1	25	6
35540	2	5/16	8	3/16	5	0.205	5.2	23/4	70	1	28	1	25	6
35545	3	3/8	10	1/4	6	0.272	6.9	31/16	78	11/4	35	1	25	6
35550	4	7/16	11	5/16	8	0.338	8.6	35/16	84	13/4	50	1	25	6
35555	5	1/2 -9/16	13 - 14	11/32	9	0.374	9.5	33/4	95	21/4	64	1	25	6
35560	6	5/8	16	7/16	11	0.471	12.0	41/8	105	3	85	2	51	6
35565	7	3/4	19	1/2	13	0.538	13.7	41/2	114	4	113	2	51	6
35570	8	<sup>7</sup> /8 - 1	22 - 25	5/8	16	0.665	16.9	43/4	121	6 <sup>1</sup> / <sub>2</sub>	184	3	76	6

Catalog	Description	Wei	Std.	
No.	2000 ipilon	OZ.	g	Pack
35575	Includes Nos. 3,4 and 5	8	227	1
35580	Inlcudes Nos. 1,2,3,4 and 5	8	227	1

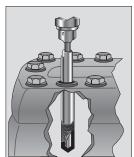

FIRST – Drill a small hole clear through the broken end using a snug fitting RIDGID Drill Guide for precision centering. This centering hole is for the larger drill to follow.

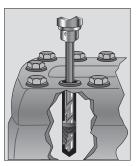

SECOND – Remove Drill Guide. Drill out the small center hole to larger diameter for receiving the "longrip" Extractor.



THIRD – Drive the "longrip" Extractor into the thin hollow shell and turn it out.



## **Model 10 Screw Extractor Set**

Model 10 set contains 20 precision tools — one each of Extractor Models 1 to 5 inclusive with turnuts, drill Models 1 to 5 inclusive, and drill guides Models 921 to 1821 inclusive. Pre-formed plastic box provides convenient storage.

Catalog	Model	Description	Capa	city	Wei	Std.	
No.	No.	Description	in.	mm	lb.	kg	Pack
35585	10	Screw Extractor Set	1/4 -1/2	6 - 13	11/4	0.60	1

## Accessories

Catalog	Model No.	Description	We	Std.	
No.		Description	lb.	kg	Pack
35695	10	Box Only	11/4	0.60	1