

TOLCO™ Fig. 120MJ - Mutt & Jeff “U” Hanger

Size Range: Size 3/4" (20mm) thru 8" (200mm) pipe


Material: Steel

Function: Used to support piping from wood beams where no contraction is expected. Used extensively in automatic fire sprinkler systems. Fig. 120MJ is used when the wood beam is on a diagonal.

Finish: Plain. Contact customer service for alternative finishes and materials.

Order By: Figure number, side length and finish

Part No.	Pipe Size		A		Fastener Size
	in.	(mm)	in.	(mm)	
120MJ-3/4	3/4"	(20)	5/16"	(7.9)	16 x 2*
120MJ-1	1"	(25)	5/16"	(7.9)	16 x 2*
120MJ-1 1/4	1 1/4"	(32)	5/16"	(7.9)	16 x 2*
120MJ-1 1/2	1 1/2"	(40)	5/16"	(7.9)	16 x 2*
120MJ-2	2"	(50)	5/16"	(7.9)	16 x 2*
120MJ-2 1/2	2 1/2"	(65)	3/8"	(9.5)	3/8 x 2 1/2**
120MJ-3	3"	(80)	3/8"	(9.5)	3/8 x 2 1/2**
120MJ-3 1/2	3 1/2"	(90)	3/8"	(9.5)	3/8 x 2 1/2**
120MJ-4	4"	(100)	3/8"	(9.5)	1/2 x 3**
120MJ-5	5"	(125)	1/2"	(12.7)	1/2 x 3**
120MJ-6	6"	(150)	1/2"	(12.7)	1/2 x 3**
120MJ-8	8"	(200)	1/2"	(12.7)	5/8 x 3**

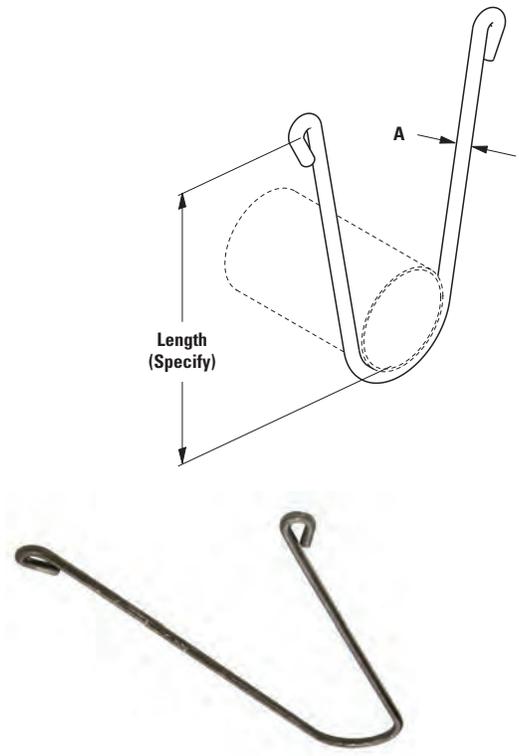

* Drive Screw
** Lag Bolt

TOLCO™ Fig. 120W - Wrap Around “U” Hanger

Size Range: Size 3/4" (20mm) thru 2" (50mm) pipe


Material: Steel

Function: Required for automatic fire protection agencies to be used on the end of branch lines to prevent pipe from whipping vertical and striking ceiling or beam.

Finish: Plain. Contact customer service for alternative finishes and materials.

Order By: Figure number, side length and finish

Part No.	Pipe Size		A		Fastener Size
	in.	(mm)	in.	(mm)	
120W-3/4	3/4"	(20)	5/16"	(7.9)	16 x 2*
120W-1	1"	(25)	5/16"	(7.9)	16 x 2*
120W-1 1/4	1 1/4"	(32)	5/16"	(7.9)	16 x 2*
120W-1 1/2	1 1/2"	(40)	5/16"	(7.9)	16 x 2*
120W-2	2"	(50)	5/16"	(7.9)	16 x 2*

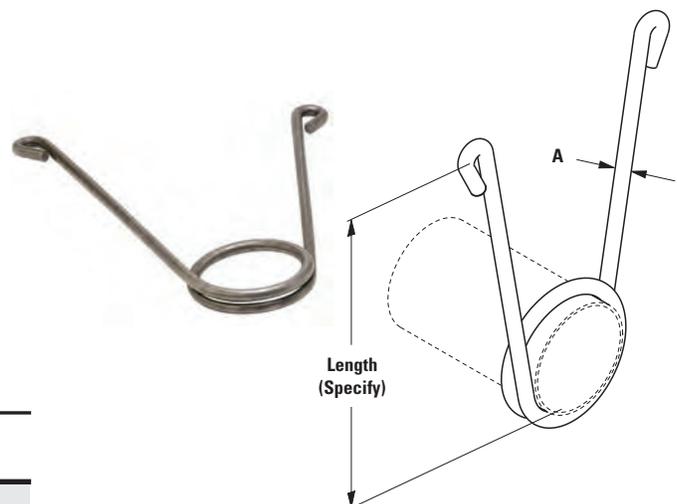

* Drive Screw

Note: 30° leg style for some sizes. Consult factory for availability.

All dimensions in charts and on drawings are in inches. Dimensions shown in parentheses are in millimeters unless otherwise specified.