



# Disposable and Chemical Protective Clothing

**NEW**

## MicroMax<sup>®</sup> VP

Bloodborne Pathogen and  
Chemical Protection all in one garment!

**Page 4**

## CleanMax<sup>®</sup>

Cleanroom Apparel - available in Clean  
Manufactured or Clean Sterile versions

**Page 6**

## MicroMax<sup>®</sup> NS Vend Packs!

Ideally packaged for vending, retail,  
response kits and single use applications

**Page 16**

## PermaSURE<sup>®</sup>

Mobile-friendly online tool that models  
permeation rates and safe-use times for  
over 4,000 chemicals

**Page 34**



# CONTENT

## Disposable Clothing

### 4 MICROMAX® VP

Bloodborne Pathogen and Chemical Protection

### 6 CLEANMAX®

Cleanroom apparel – Clean Manufactured or Clean Sterile configurations

### 16 MICROMAX® NS

Microporous protection from dirt, grease, grime and light chemical splash!

### 18 MICROMAX® NS COOL SUIT

Breathable back panel maximizes comfort!

### 20 MICROMAX®

Added durability for the toughest environments

### 21 SAFEGARD®

Lightweight, breathable protection from 3 tough layers

### 22 SAFEGARD® ECONOMY

SafeGard Protection - Economical Design

### 23 ZONEGARD®

Breathable, Lightweight Protection of Polypropylene

## Chemical Clothing

### 24 CHEMMAX® 1

Your First Level of Chemical Protection

### 26 CHEMMAX® 2

Quality, Value, Durability with the Proven Protection of Saranex® 23P Barrier Film

### 38 CHEMMAX® 3

Advanced Chemical Protection for Industry, Emergency Response and Law Enforcement

### 40 CHEMMAX® 4 PLUS

Superior, Advanced Chemical Protection. Now Supported by PermaSURE®

### 42 INTERCEPTOR® PLUS

First Line Defense Against Extreme Chemical Hazards. Now Supported by PermaSURE®

### 45 COOLVEST™

Chemical Suit Cooling Vest

## FR Disposable Clothing

### 29 PYROLON® PLUS 2

Perfect for use over thermally protective and arc protective clothing!

### 30 PYROLON® CRFR

Chemical Resistance and Flame Resistance in one Disposable Protective Garment

### 32 PYROLON® CBFR

Advanced Chemical Barrier and Flame Resistance for the Highest Chemical Hold-Out



## Resources

- 2 Lakeland® World-Class Sales and Support
- 9 Tips for Cleanroom Apparel Selection
- 10 Sizing Guide and Critical Protection Data
- 11 Lakeland Brand Product Range Overview
- 12 Protection Levels and Seam Styles
- 14 Apparel Selection Guide
- 28 Disposable FR Guide
- 34 PermaSURE® – Mobile-friendly on-line tool that models permeation rates!
- 44 Chemical Suit Options and Accessories





# PROTECTING WORKING PROFESSIONALS SINCE 1982

Lakeland® Industries is a global manufacturer of personal protective equipment, specializing in Disposable and Chemical Protective Apparel, FR/AR Clothing and Protective Gear for First Responders.

For over 35 years Lakeland® has provided products to the working professionals in Electric and Gas Utilities, the Oil and Gas Industry, General Manufacturing, Public Safety and the Petrochemical sectors, keeping workers both safe and comfortable on the job.

# World-Class Sales and Support – all around the globe


At Lakeland® Industries, our number one priority is creating protective garments that protect your people from hazardous particulates, liquids and chemicals, blood, diseases, and even fire and arc flash. Throughout the world, Lakeland® products Protect Your People®.

It's what we do.

Headquartered in Ronkonkoma, New York, since 1982, and supported by a global team in over 18 countries around the world, you can trust our experience, our expertise, and most importantly, our proven track record of developing and delivering superior garments that provide the protection and performance you require on the job, every day.

Lakeland's customers worldwide have access to nearly 4 decades of our expertise developing and supplying products to the Oil and Gas, Petrochemical, Utility, Wind Energy, Healthcare, Cleanroom and hundreds of other Industries around the globe.

Lakeland's Team of Global Experts are ready to assist. Any application. Anywhere.

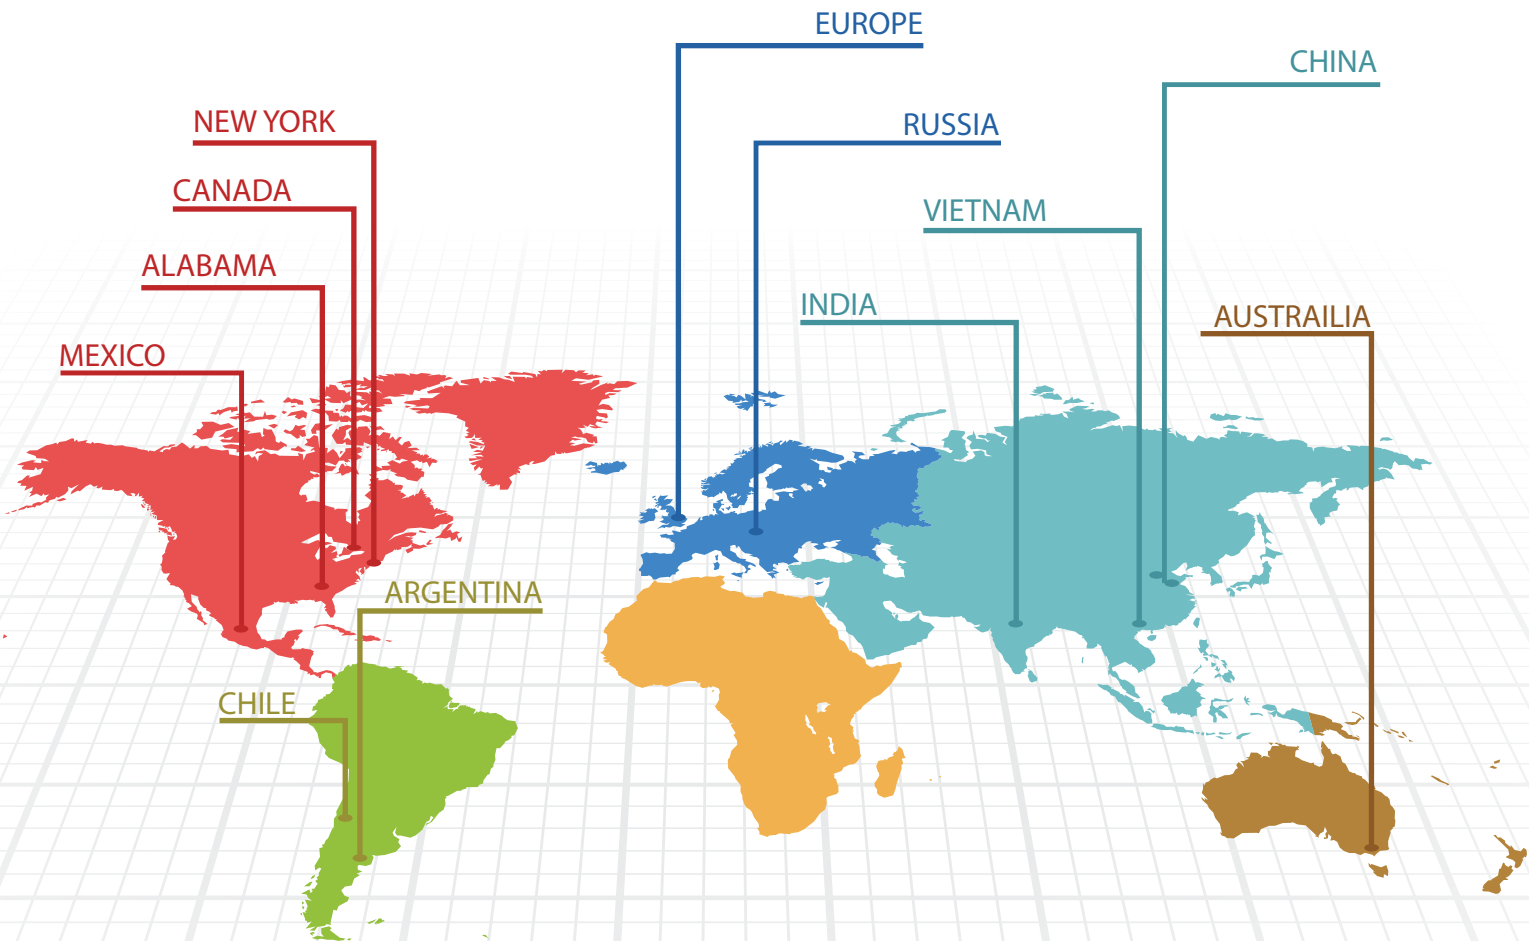



## Global Manufacturing and Design - supporting a worldwide customer network

Lakeland® Industries' products have established and maintained a global reputation for overall quality and are recognized as the industry's gold standard. We design and manufacture a wide variety of technologically advanced protective clothing in our factories around the world.

With manufacturing facilities in the United States, Mexico, China, Vietnam and India, Lakeland® is well positioned to source leading edge materials and produce the most advanced garments available to any region of the globe.

Lakeland's use of advanced technology doesn't stop with product development and design. Lakeland's customers have access to leading edge data and information to assist with proper product selection, calculate safe-use times and even model the effects of environmental changes and how they influence chemical permeation rates.

We Design, We Develop, We Manufacture, and We Deliver.

All to **Protect Your People®**



**NEW**

# MICROMAX<sup>®</sup> VP

Bloodborne Pathogen and Chemical Protection

## MicroMax<sup>®</sup> VP Applications

- Crime Scene Cleanup
- Research Laboratories
- Emergency Medical Response
- Embalming / Forensics



Serged Seam

Passes ASTM F1670/F1671 and Passes ASTM D6978 Fentanyl

MicroMax<sup>®</sup>VP is specifically designed to protect when the risk of blood, body fluids, bloodborne pathogens and viral contamination are the greatest. Ideal for use in crime labs, crime scene clean up and by emergency response personnel.

- Protective hood
- Seamless front reduces risk of contaminant exposure
- Taped storm flap protects zipper
- Elastic back for more comfortable fit
- Passes ASTM F1670/F1671 for Blood and Viral Protection

### MicroMax<sup>®</sup> VP Physical Properties

Physical Property	Test Method	Units	Test Results
Material Thickness	ASTM D1777		15 mil
Material Weight	ASTM D3776		80 gsm
Tensile Strength MD	ASTM D5034	lbs.	36.30 lbs.
Tensile Strength CD	ASTM D5034	lbs.	24.15 lbs.
Elongation MD	ASTM D5034	%	59 Avg.
Elongation CD	ASTM D5034	%	71 Avg.
Water Vapor Transmission Rate	ASTM E96		16 g/sq. meter/ 24 hrs. avg.
Bursting Strength Hydraulic Method	ISO 13938-1		29.4 psi avg.
Burn Test 45°	CPSC16 CFR 1610		Pass
Surface Resistance Requirement for BS EN1149-5:2008 is $\leq 2.5 \times 10^9 \Omega$ .	EN1149	$\Omega$	The test sample meets the requirement $2.4 \times 10^8$

### MicroMax<sup>®</sup> VP Liquid Penetration Data

Physical Property	Test Method	Test Results
Liquid Penetration Using Synthetic Blood	ASTM F1670	Pass
Viral Penetration using $\phi$ X174 bacteriophage suspension	ASTM F1671	Pass

### MicroMax<sup>®</sup> VP ASTM F903 Liquid Penetration Data

Physical Property	Test Method	Test Results
Methanol	ASTM F903	Pass
Ethyl Acetate	ASTM F903	Pass
Sulfuric Acid (97%)	ASTM F903	Pass
Tetrahydrofuran	ASTM F903	Pass
Sodium Hydroxide	ASTM F903	Pass
Acetone	ASTM F903	Pass
Hydrofluoric Acid	ASTM F903	Pass
Acetonitrile	ASTM F903	Pass

For Fentanyl Test Results using ASTM D6978 refer to page 10

# MicroMax<sup>®</sup> VP - Premium Protection from High-Risk Contaminants!



Protective hood

Seamless front reduces the risk of possible contamination from liquid penetration

Taped storm flap keeps contaminants away from zipper

Elastic back gives a more comfortable fit and helps prevent rip-outs

## MicroMax<sup>®</sup> VP Configurations



**Coverall MVP414**

- Zipper closure
- Attached hood
- Boots
- Elastic wrists
- Sizes: S – 5X
- Case Pack: 25



**Coverall MVP428**

- Zipper closure
- Attached hood
- Elastic wrists
- Elastic ankles
- Sizes: S – 5X
- Case Pack: 25

Available with attached boots to help prevent cross-contamination during an event

**NEW**


# CLEANMAX<sup>®</sup>

## Cleanroom Apparel

### CleanMax<sup>®</sup> Applications

Cleanrooms

Pharmaceutical  
Compounding

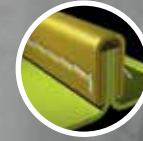

**Bound Seam**



EN ISO 13982-1  
:2004 +A1:2010



EN 13034  
:2005 +A1:2009



EN 1073-2:2002  
TIL = Class 1



EN 14126:2003  
(Type 5B, 6B)


**CE 0321**

Available in Clean Manufactured or  
Clean Sterile configurations

**STERILE R** Irradiation  
Sterilization

### All Lakeland<sup>®</sup> CleanMax<sup>™</sup> Apparel is:

- Chemical Penetration Resistance to oils, bleach and 50% Sodium Hydroxide
- Resistant to blood and body fluid penetration
- Resistant to viral penetration
- Resistant to Blood Borne Pathogens
- IEST-RP-CC003 Category I Particle Cleanliness
- Latex and Silicone Free
- Compatible with ISO Class 4 -8 Cleanrooms and all Controlled Environments
- Individually packaged and protective outer bag for ante areas

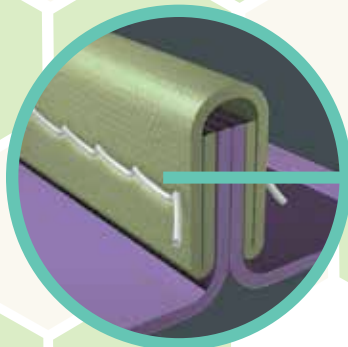

### **Bound Seams**

CleanMax<sup>™</sup> garments feature bound seams, which are precisely sewn with an additional outer binding. This increases seam strength and provides a better barrier from particulates than simple serged seams.

### CleanMax<sup>™</sup> Physical Properties

Physical Property	Test Method	Units	Results
Basis Weight	ASTM D3776	oz/y <sup>2</sup>	1.55 oz/y <sup>2</sup>
Grab Tensile MD	ASTM D5034	lbs.	22.0 lbs.
Grab Tensile XD	ASTM D5034	lbs.	14.0 lbs.
Trapezoidal Tear MD	ASTM D1117	lbs.	9.0 lbs.
Trapezoidal Tear CD	ASTM D1117	lbs.	5.8 lbs.
Ball Burst	ASTM D3787	lbs.	19.0 lbs.
Air Permeability	ASTM D737	cfm	<0.562 cfm/ft <sup>2</sup>
Water Vapor Transmission	ASTM 96-80	g/m <sup>2</sup> -24hrs	663.38
Bacterial Filtration Efficiency	ASTM F2101	%	99.999%
Particle Filtration Efficiency	ASTM F2299	%	99.999%

Both CleanMax<sup>®</sup> Clean Manufactured and CleanMax<sup>®</sup> Sterile meet IEST-RP-C003 Category I particulate cleanliness standards and are ready for immediate use in ISO Class 4 – 8 Cleanrooms



Lakeland® Industries has spent over 30 years being an industry leader protecting people in the workplace and now we've extended our expertise to protect both your people and your cleanroom and/or controlled environment. CleanMax® is a high-quality microporous laminate material that is lightweight and breathable but is impervious to liquids, harsh chemicals and microorganisms.

Both CleanMax® Clean Manufactured and CleanMax® Sterile meet IEST-RP-C003 Category I particulate cleanliness standards and are ready for immediate use in ISO Class 4 – 8 Cleanrooms. All sterile garments are gamma radiation sterilized to a level of 10<sup>-6</sup> SAL (Sterility Assurance Level) . These garments provide excellent

comfort as well as protection, so you can easily don and doff your garments to reduce excursions and risk of contamination.



**Clean Sterile Garments and Packaging**

*CleanMax™ Clean Sterile garments are sterile to a sterility assurance level of 10<sup>-6</sup> SAL, and are compatible with ISO Class 4-8 Cleanrooms and all Controlled Environments*

**Does Your Cleanroom Apparel Meet Current IEST Standards?**

Read our whitepaper and find out...



[lakeland.com/us/cleanroom-whitepaper](http://lakeland.com/us/cleanroom-whitepaper)



**CleanMax® Configurations**



CTL191




CTL417



CTL428



CTL713



CTL903



CTL850

**Clean Manufactured Garments**

**Frock – CTL191CM**

- Mandarin collar
- Zipper closure
- No pockets
- Tunneled elastic wrists with thumb loops
- Sizes: M – 5X
- Case Pack: 30

**Coverall – CTL417CM**

- Zipper closure
- Tunneled elastic on wrists (with thumb loops), ankles, and back half of waist
- Sizes: M – 5X
- Case Pack: 25

**Coverall – CTL428CM**

- Zipper closure
- Attached hood
- Tunneled elastic on wrists (with thumb loops), ankles, and back half of waist
- Sizes: M – 5X
- Case Pack: 25

**Hood – CTL713CM**

- Covers shoulders
- One size
- Ties to customize fit
- Case Pack: 100

**Boot Cover – CTL903CMP**

- Tunneled elastic top
- 19" high
- Non-skid Vinyl sole
- Sizes: S/M, L/XL, 2X
- Case Pack: 50 pair

**Sleeve CTL850CMP-18**

- Bound seams
- Tunneled elastic
- Thumb loops
- Size: 18" length
- Case Pack: 50 pair

**Clean Sterile Garments**



- Clean Sterile**
- Certificate of Radiation included
  - Gamma radiation indicator dots on each package
  - IPA resistant ink

**Coverall – CTL417CS**

- Zipper closure
- Tunneled elastic on wrists (with thumb loops), ankles, and back half of waist
- Sizes: M – 5X
- Case Pack: 25

**Coverall – CTL428CS**

- Zipper closure
- Attached hood
- Tunneled elastic on wrists (with thumb loops), ankles, and back half of waist
- Sizes: M – 5X
- Case Pack: 25

**Hood – CTL713CS**

- Covers shoulders
- One size
- Ties to customize fit
- Case Pack: 100

**Boot Cover – CTL903CSP**

- Tunneled elastic top
- 19" high
- Non-skid Vinyl sole
- Sizes: S/M, L/XL, 2X
- Case Pack: 50 pair

**Sleeve CTL850CSP-18**

- Bound seams
- Tunneled elastic
- Thumb loops
- Size: 18" length
- Case Pack: 50 pair

# CleanMax<sup>®</sup> Features and Benefits

## Clean Manufactured Garments

Garments that are clean manufactured offer significantly less particle counts in contrast to garments that are not clean manufactured.

## Smooth Storm Flap for Added Level of Protection

Very few disposable cleanroom garments have the added protection of a placket storm flap. Covering the zipper further protects the critical chest and front area of the garment from potential particulate breakthrough. Additionally, our storm flap has finished seams so there are no exposed raw edges.

## Thumb Loops

Plastic wrists with thumb loops help secure the coveralls and frocks in place to prevent the potential exposure of skin while worn during normal activities.

## Chemical Penetration Resistance

CleanMax<sup>®</sup> offers chemical penetration resistance to oils, bleach and 50 percent sodium hydroxide.

## Premium Packaging Means Less Wrinkles, Less excursions

Garments are individually packaged and expertly folded to prevent excessive wrinkling and the potential for increased excursions.

Get the added safety of CleanMax<sup>®</sup>, which offers resistance to blood and body fluid penetration, viral penetration and bloodborne pathogens!



## All bound seams

CleanMax<sup>®</sup> garments feature bound seams, which are precisely sewn with an additional outer binding. This increases seam strength and provides a better barrier from break through and protection from strike through than simple serged seams.

## Smooth surface area prevents particles from sticking

CleanMax<sup>®</sup> garments are smoother than other leading brands, which means particulates are less likely to harbor on the garment surface.

## Cuffed ankle allows for six inches of freedom

Expertly folded to reduce surface contamination during the donning process, the cuffed ankle provides six inches of freedom when you are stepping into the gown



Download our FREE Disposable Cleanroom Garment Guide!



[lakeland.com/us/cleanroom-guide](http://lakeland.com/us/cleanroom-guide)

# Disposable Cleanroom Suits: Tips for Cleanroom Apparel Selection

Confidence in your cleanroom starts with understanding how to select the right disposable apparel for your unique needs. Part of the benefit of working with Lakeland® is ongoing access to our team of cleanroom industry experts. In just a few minutes, we will work with you to determine the type of garment required for your application and environment, and discuss how we can help you protect your team effectively with clean-manufactured garments.

## Applications for CleanMax® Cleanroom Apparel

### CleanMax® Sterile

- Aseptic or Terminally Sterile Cleanroom Environments
- ISO Class 4-8 Cleanroom
- Sterility assurance level of  $10^{-6}$  SAL

### Cleanmax® Manufactured

- ISO Class 4-8 or below Non-Aseptic Cleanrooms or Controlled Environments


## Garment Configurations

Apparel	ISO 8	ISO 7	ISO 6	ISO 5 Non-Sterile	ISO 5 Sterile (Aseptic)	ISO 4	ISO 3	
Hair cover	R	R	R	R	R	R	R	AS
Barrier gloves	AS	AS	AS	AS	R	R	R	R
Facial cover	AS	AS	AS	R	R	R	R	AS
Hood	AS	AS	AS	R	R	R	R	AS
Frock	R	R	AS	AS	NR	NR	NR	NR
Coverall	AS	AS	R	R	R	R	R	R
Shoe cover	R	R	AS	AS	NR	NR	NR	NR
Boot	AS	AS	R	R	R	R	R	R
<b>Typical Frequency of Change*</b>	<b>2X/week</b>	<b>2X/week</b>	<b>3X/week</b>	<b>1X/day</b>	<b>Per Entry</b>	<b>Per Entry</b>	<b>Per Entry</b>	<b>Per Entry</b>

Chart shows Lakeland® garments relevant to ISO 5. Recommendations from IEST-RP-CC003.  
**R** = Recommended, **NR** = Not Recommended, **AS** = Application Specific


## CleanMax® vs. Reusables: Which is Better?

Each time a cleanroom garment is handled, a chance for contamination occurs. A reusable garment goes through multiple steps in the laundering process leading to greater risk of contamination.

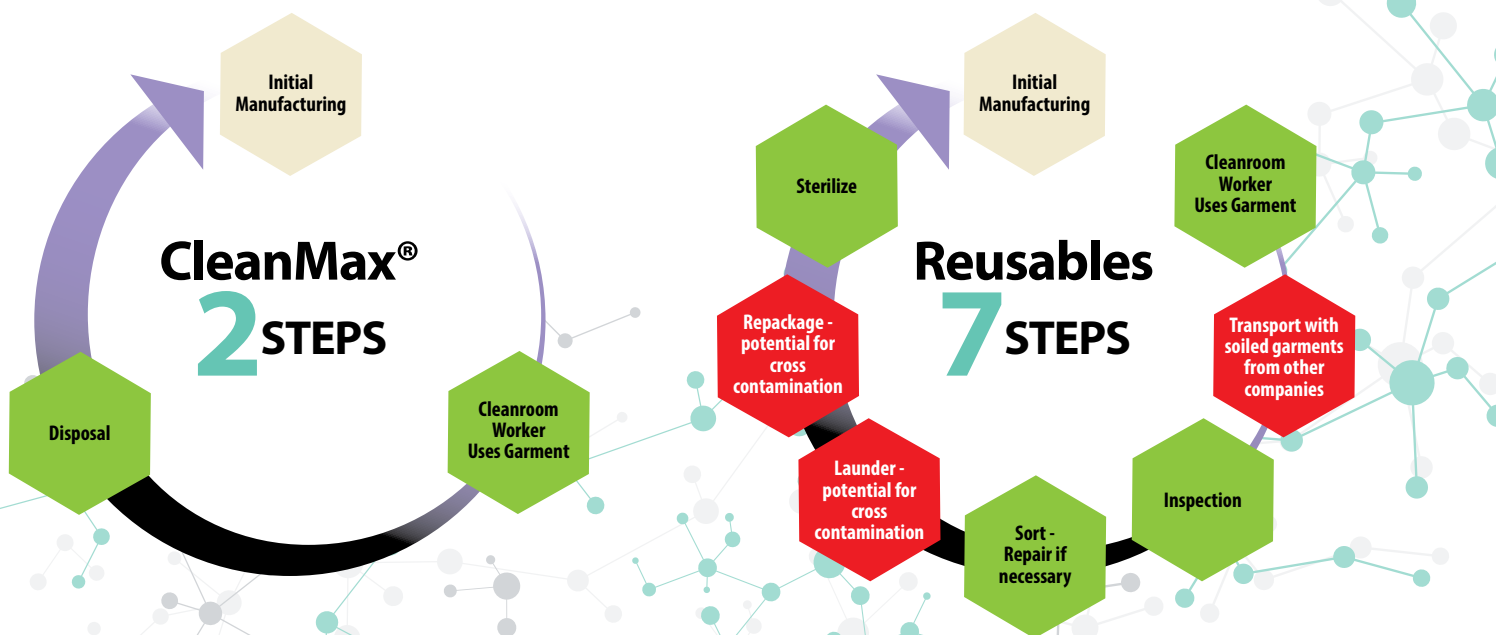

Choose Lakeland® CleanMax® and feel secure in your investment in your most critical assets; your people, your controlled environment and your product

# Lakeland® Brand Disposable/Chemical Sizing Guide

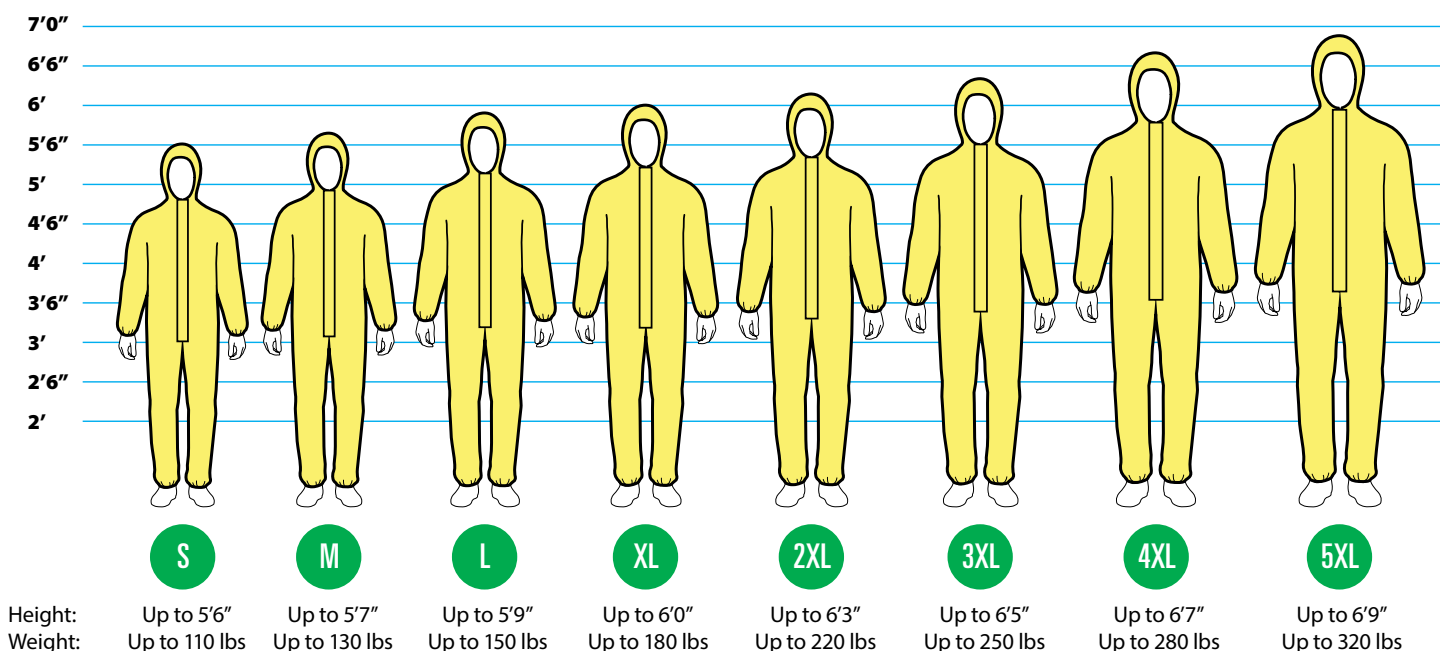

The above chart is a suggested guide for garment selection. Proper fit varies with individual body shape and allowances should be made for clothing that will be worn underneath the garment. **Always choose the larger size should you fall in between the suggested guidelines or are uncertain on which size to select.**

## Critical Protection - Tested Performance

Hazard Type	Lakeland® Brand	Test Method	Test Results
Blood and Infectious Agent	MicroMax® NS	ISO 16604:2004 Protection against Blood and Body Fluids	Pass Class 6 (Maximum Level)
		ISO 22611:2003 Protection against Biologically Contaminated Aerosols	Pass Class 3 (Maximum Level)
Bloodborne Pathogens	MicroMax® NS	ASTM F1670 Liquid Penetration to Synthetic Blood	Pass
	MicroMax® VP	ASTM F1671 Viral Penetration $\phi$ X174 Bacteriophage Suspension	Pass
Pesticide Protection	MicroMax® NS	ASTM F903 Penetration Testing – Diazinon (Roundup)	Pass
Isocyanate Based Paint	MicroMax® NS	ASTM F903 Penetration Testing	Pass
Ammonia – 99% Anhydrous Gas (CAS Number 7664-41-7)	Pyrolon® CBFBR	ASTM F739 Permeation Testing	>480 minutes

## Fentanyl - Testing per ASTM D6978

Lakeland® Brand	Test Drug and Concentration	Minimum Breakthrough Detection Time (Specimen 1/2/3) (Minutes)	Steady State Permeation Rate (Specimen 1/2/3) ( $\mu$ g/cm <sup>2</sup> /minute)	Other Observations
MicroMax VP*	Fentanyl Citrate Injection, 100 mcg/2mL	>240	NA	Slight swelling; no degradation
ChemMax® 1**	Fentanyl Citrate Injection, 100 mcg/2mL	>240	NA	Slight swelling; no degradation

\*MicroMax® VP fabric holds out liquid Fentanyl, but is only recommended for Fentanyl in powder form due to serged seam construction

\*\* ChemMax® 1 has >240 min hold out for liquid Fentanyl; Taped/Sealed Seam Garments are recommended for Fentanyl in liquid form

Users should also ensure the gloves they are using for chemotherapy have been tested against the most recent standards. The current standard for exam gloves used in chemotherapy is ASTM D6978-05 "Standard Practice for Assessment of Resistance of Medical Gloves to Permeation by Chemotherapy Drugs."

Prior to ASTM D6978-05 many exam gloves were tested against ASTM F739 "Resistance of Protective Clothing Materials to Permeation by Liquids or Gases Under Conditions of Continuous Contact". ASTM D6978-05 uses ASTM F739 as a test method, but has a chemical permeation requirement that is 10 times more stringent than what is required by ASTM F739. Users of gloves tested under ASTM D6978-05 have a higher level of confidence that the gloves they are using are tested to the current, more stringent ASTM standard."

# Lakeland® Brand Product Range Overview

## CHEMICAL PROTECTION

### Interceptor® Plus

Interceptor® Plus achieves the highest levels of chemical protection required for extremely hazardous areas, including Level A HazMat response. All supported by PermaSURE.

### ChemMax® 4 Plus

ChemMax® 4 Plus fabric incorporates a 6 layer protective barrier system and is supported by the PermaSURE Toxicity Risk Modeler Software Application.

### ChemMax® 3

ChemMax® 3 barrier film is soft and durable while providing superior protection from both chemicals and chemical warfare agents, all while backed by the PermaSURE database of 4,000+ chemicals.

### ChemMax® 2

ChemMax® 2 fabric is built with the proven protection of Saranex 23P barrier film to provide superior and economical chemical protection.

### ChemMax® 1

ChemMax® 1 fabric is comprised of a polyethylene (PE) barrier film and a continuous filament polypropylene nonwoven fabric. Lightweight and durable protection for most industrial acid and base chemicals.

## FLAME RESISTANT PROTECTION

### Pyrolon® CBRF

Pyrolon® CBRF offers the highest level of chemical protection for harsh environments that also require Flame Resistant apparel due to flash fire concerns.

### Pyrolon® CRFR

Pyrolon® CRFR fabric utilizes a 2.5 mil proprietary FR barrier film to provide chemical protection for primary FR/AR garments that won't melt or drip in a flash fire scenario.

### Pyrolon® Plus 2

Pyrolon® Plus 2 provides highly breathable, secondary FR protection, to keep primary FR/AR garments free from contamination by dirt, grease, oil, hydraulic fluid and other dry particulate, aerosol and light liquid hazards.

## DISPOSABLE PROTECTION

### MicroMax® VP

MicroMax®VP garments are specifically tailored for protection from the risk of blood, body fluids and bloodborne pathogens. ASTM F1670/F1671 for blood and viral and designed with no exposed seams or points for liquid penetration on the forward-facing portion of the garment.

### MicroMax®

The MicroMax® family of fabrics are all based upon a spunbond polypropylene layer with a laminated microporous film. Dry particulate filtration to 1.0 micron and passes ASTM F1670/F1671 for bloodborne pathogens make the MicroMax line ideal choice blood, grease, paint, pesticides and light chemical splash.

### SafeGard®

SafeGard® fabric is a layering of Spunbond-Meltblown-Spunbond polypropylene filaments to provide breathable protection against aerosols and light liquids, as well as particle filtration down to 10.0 microns.

### ZoneGard®

ZoneGard® fabric is lightweight, highly breathable polypropylene fabric. Ideal protection for dirt, dust and other dry particulates.

# Lakeland® Brand Protection Levels and Seam Styles

Product Applications	General Protection				Aerosol/Spray			
	Dirt, Oil and Grease	Hazardous Dry Particulate	Non-Hazardous Liquids	Welding, Cutting and Grinding	Non-Hazardous Liquids	Paint, Hazardous Liquids	Dry Particles	Flammable Environment
MicroMax® NS	●	●	●		●	●	●	
MicroMax® NS Cool Suit	●	●	●		●	●	●	
MicroMax®	●	●	●		●	●	●	
MicroMax® VP								
CleanMax®								
SafeGard® SMS	●	●	●		●	●	●	
Economy SMS	●	●			●	●	●	
Pyolon® Plus 2 *	●	●		●		●	●	●
ZoneGard® Polypropylene	●				●			
Pyolon® CRFR *		●	●		●	●		●
Pyolon CBFR		●	●					●
ChemMax® 1		●	●		●	●	●	
ChemMax® 2					●	●	●	
ChemMax® 3						●		
ChemMax® 4 Plus								
Interceptor® Plus**								

\* Must be worn over thermally protective clothing, such as flame resistant cottons, aramids or mono acrylics.  
 \*\* Interceptor meets the requirements of NFPA 1991 limited flash fire for escape only option.

## Product Seam Availability

Product	Serged Seam	Bound Seams	Heat Sealed Seams	Heat Sealed Plus Seams
MicroMax® NS	●			
MicroMax® NS Cool Suit	●			
MicroMax®	●			
MicroMax® VP	●			
CleanMax®		●		
SafeGard® SMS	●			
Economy SMS	●			
Pyolon® Plus 2	●			
ZoneGard® Polypropylene	●			
Pyolon® CRFR			●	
Pyolon CBFR			●	
ChemMax® 1	●	●	●	
ChemMax® 2		●	●	
ChemMax® 3			●	
ChemMax® 4 Plus			●	
Interceptor® Plus			●	●


The Seam You Choose is Determined By **Your Work Environment and Your Potential Risk of Hazard Exposure!**



Chemical Splash			Hazmat		Critical Environment / Biohazard				
Low Exposure, Low Risk	High Exposure, High Risk	Flammable Liquids	Hazmat, Maritime	Hazmat Non-Certified	Paint Booth	Bloodborne Pathogens	Waste Water Treatment	Flash Fire Chemical	Clean Room
●					●	●	●		
					●				
●					●	●	●		
●						●			
									●
								●	
●	●	●		●				●	
●	●	●		●				●	
●	●			●	●	●	●		
●	●			●	●	●	●		
	●		●	●		●	●		
				●		●	●		
	●		●	●				●	




**Serged Seam**  
*Low Risk of Hazardous Exposure*

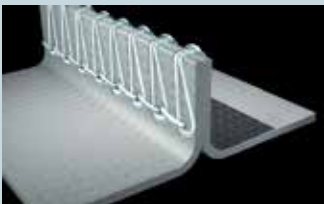

A serged seam joins two pieces of material with a thread that interlocks. This is an economical stitching method for general applications. This stitching method is generally not used for chemical protective clothing. It is more commonly found on disposable clothing where dry particulates are a concern.




**Bound Seam**  
*Moderate Risk of Hazardous Exposure*

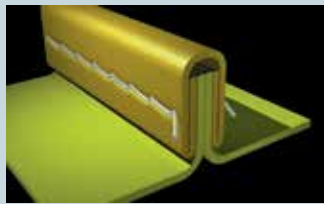

A bound seam joins two pieces of material with an overlay of similar material and is chain stitched through all layers for a clean finished edge. This provides increased holdout of liquids and dry particulates.




**Heat Sealed Seam**  
*High Risk of Hazardous Exposure*

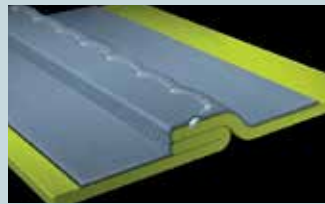

A heat sealed seam is sewn and then sealed with a heat activated tape. This method provides liquid proof seams, and is especially useful for Level A and B chemical protective clothing.







**Heat Sealed Plus Seam**  
*Maximum Risk of Hazardous Exposure*

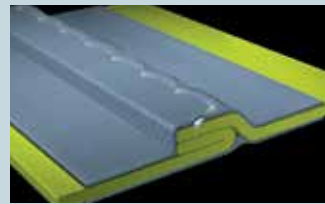

This is the ultimate and strongest seam that Lakeland® offers. The seam is sewn and then heat sealed on the outside and inside to offer the highest strength and chemical resistance.

# Lakeland® Brand Apparel Selection Guide

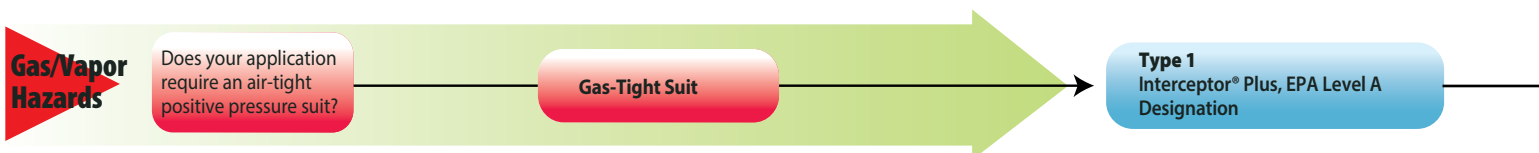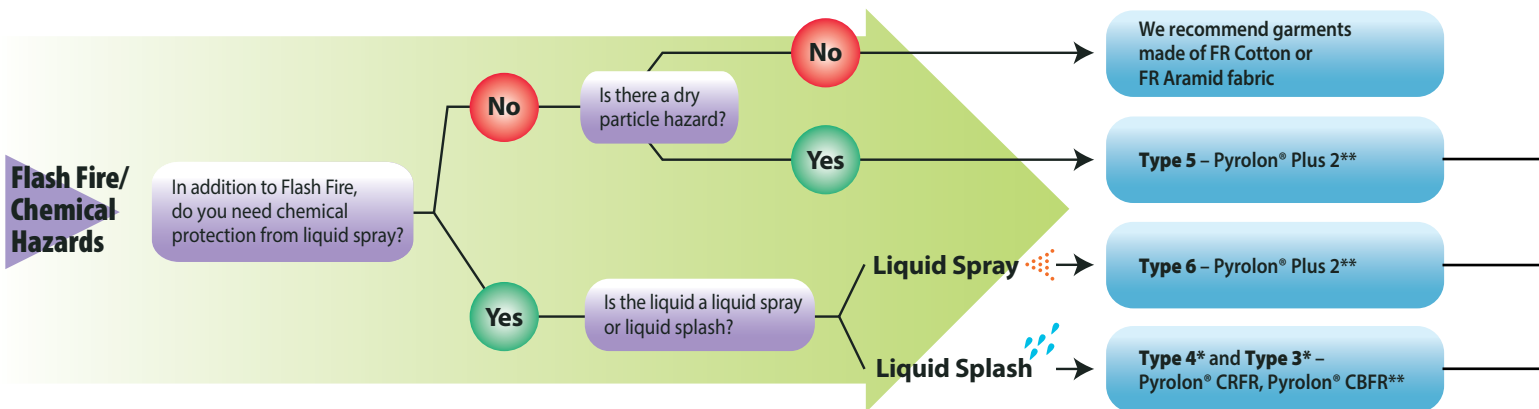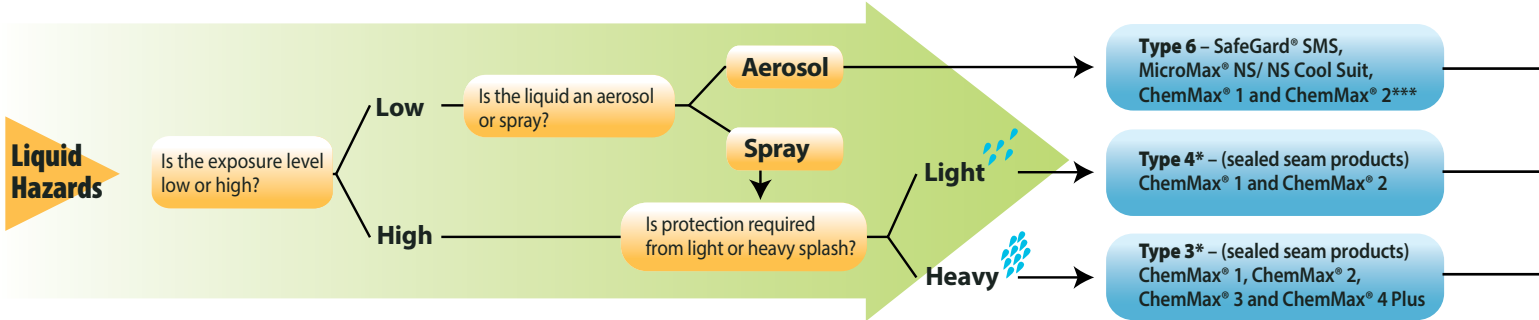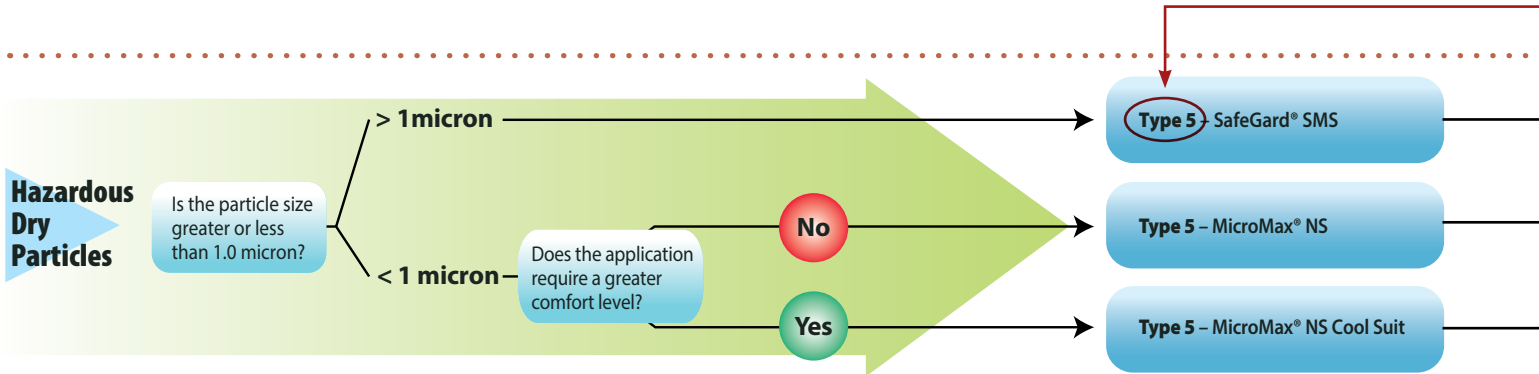


\* For details on Type 4 and Type 3 solutions, contact your Lakeland® Sales Representative or call Customer Service at 800-645-9291.

\*\* Must be worn over thermally protective clothing, such as fire resistant cottons, aramids or modacrylics.

\*\*\* Refer to permeation data for which ChemMax® is indicated for a given hazard.



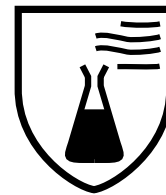


## ISO 16602

### What does garment "Type" stand for?

The ISO 16602 standard is based upon a system of **Types** and **Classes**. The garment "Type" designation is based upon the physical state of the hazard.



Limited protection against liquid mist

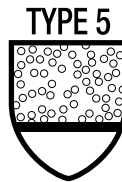

Protection against airborne solid particulate chemicals



Protection against liquid aerosols



Protection against pressurized liquid chemicals



Non gas-tight protection



Gas-tight protection against chemicals and vapors and toxic particles

LOWEST PROTECTION

HIGHEST PROTECTION

SafeGard® SMS  
Page 21

MicroMax® NS  
Page 16

MicroMax® NS  
Cool Suit  
Page 18

MicroMax® VP  
Page 4

MicroMax® NS  
Page 18

MicroMax®  
Page 20

SafeGard® SMS  
Page 21

MicroMax® NS  
Page 16

MicroMax® NS  
Cool Suit  
Page 18

ChemMax® 1  
Page 24

ChemMax® 2  
Page 26

ChemMax® 1  
Page 24

ChemMax® 2  
Page 26

ChemMax® 1  
Page 24

ChemMax® 2  
Page 26

ChemMax® 3  
Page 38

ChemMax® 4  
Plus  
Page 40

Pyrolon®  
Plus 2  
Page 29

Pyrolon®  
Plus 2  
Page 29

Pyrolon® CRFR  
Page 30

Pyrolon® CBR  
Page 32

Interceptor®  
Plus  
Page 42

This is a general guide to selecting garments only and should not be used as the definitive or only tool in garment selection. It is the responsibility of the user to select garments or products which are appropriate for each intended use and which meet all specified government and industry standards.

# MICROMAX<sup>®</sup> NS

Microporous protection from dirt, grease, grime and light chemical splash!

## MicroMax<sup>®</sup> NS Applications

- Light Chemical Handling
- Sandblasting/Abrasives
- Dirt, Oil and Grease



Serged Seam

### MicroMax<sup>®</sup> NS Features:

- Economical
- Lightweight
- Features high MVTR (Moisture Vapor Transmission Rate)
- Protection from dry particulates and light liquid splash

**NEW**

### Retail Vending Convenience Pack!

Lakeland<sup>®</sup> now offers select styles of our MicroMax<sup>®</sup> NS coveralls in a convenient, vacuum-sealed package. Each pack contains a single coverall, ideally sized for

most vending applications, retail or showroom display, and conveniently sized to be a part of any specialty use or preparedness kit.

**Package Size:** Approximately 4.5" wide x 6.6" high x 2" deep  
**Available Sizes:** SM – 5X  
**Packaging:** 50 individual packs per case

**Available Styles:**  
 CTL412V, CTL414V, CTL417V, CTL428V



### MicroMax<sup>®</sup> NS Physical Properties

Physical Property	Test Method	Units	Test Results
Basis Weight	ASTM D3776	oz/y <sup>2</sup>	1.55 oz/y <sup>2</sup>
Grab Tensile MD	ASTM D5034	lbs.	22.0 lbs.
Grab Tensile XD	ASTM D5034	lbs.	14.0 lbs.
Trapezoidal Tear MD	ASTM D1117	lbs.	9.0 lbs.
Trapezoidal Tear CD	ASTM D1117	lbs.	5.8 lbs.
Ball Burst	ASTM D3787	lbs.	19.0 lbs.
Air Permeability	ASTM D737	cfm	<0.562 cfm/ft <sup>2</sup>
Surface Resistance	EN1149	Ω	Pass

### MicroMax<sup>®</sup> NS ASTM F903 Penetration Data

Chemical Tested	Concentration %	Test Time – Minutes	Test Results
Diazinon (Roundup)	100%	60	Pass
Motor Oil-40 wt.	100%	60	Pass
Bleach-household	100%	60	Pass
Isocyanate Based Paint	100%	60	Pass
Sodium Hydroxide	50%	60	Pass
Sodium Hypochlorite	10%	60	Pass
Synthetic Blood	Challenge Fluid Liter – 3.20 x 108 (PFU/mL)	Assay Results PFU/mL <1	Pass

## MicroMax® NS Configurations

**Lab Coat  
CTL101**

- Snap closure
  - 2 pockets
  - Long sleeve
- Sizes: S – 5X  
Case Pack: 30

**Lab Coat  
CTL104**

- Snap closure
  - 2 pockets
  - Long sleeve
  - Elastic wrists
- Sizes: S – 5X  
Case Pack: 30

**Lab Coat  
CTL112**

- Snap closure
  - No pockets
  - Long sleeve
  - Elastic wrists
- Sizes: S – 5X  
Case Pack: 30

**Lab Coat  
CTL140**

- Snap closure
  - No pockets
  - Long sleeves
- Sizes: S – 5X  
Case Pack: 30

**Frock  
CTL190**


- Mandarin collar
  - 5 snaps
  - No pockets
  - Elastic wrists
- Sizes: S – 5X  
Case Pack: 30

**Frock  
CTL191**

- Mandarin collar
  - Zipper closure
  - No pockets
  - Elastic wrists
- Sizes: S – 5X  
Case Pack: 25

**Shirt  
CTL201**

- Snap closure
  - Long sleeves
- Sizes: S – 5X  
Case Pack: 50

**Pants  
CTL301**

- Elastic waist
- Sizes: S – 5X  
Case Pack: 50

**Coverall  
CTL412**

- Zipper closure
- Sizes: S – 5X  
Case Pack: 25

**Coverall  
CTL414**


- Zipper closure
  - Attached hood
  - Boots
  - Elastic wrists
- Sizes: S – 5X  
Case Pack: 25

**Coverall  
CTL417**

- Zipper closure
  - Elastic wrists
  - Elastic ankles
- Sizes: S – 5X  
Case Pack: 25

**Coverall  
CTL428**


- Zipper closure
  - Attached hood
  - Elastic wrists
  - Elastic ankles
- Sizes: S – 5X  
Case Pack: 25

**Apron  
CTL601**

- Sewn ties
- Sizes: 28" w x 36" l  
Case Pack: 100

**Apron  
CTL603**

- Sewn ties
- Sizes: 28" w x 44" l  
Case Pack: 100

**Hood  
CTL713**

- Elastic face
  - Covers shoulders
- One size  
Case Pack: 250

**Sleeve  
CTL850P-18**

- Elastic ends
- Sizes: 18" length  
Case Pack: 100 pair

**Shoe Cover  
CTL901P**

- Elastic ankles
- 901NSP (non-skid)**
- Style 901 – standard version
  - Style 901NS – gray non-skid version
- Sizes: S/M, L/XL, 2X  
Case Pack: 200 pair

**Boot Cover  
CTL903P**

- Elastic top
- 903NSP (non-skid)**
- 17" high
  - Style 903 – standard version
  - Style 903NS – gray non-skid version
- Sizes: S/M, L/XL, 2X  
Case Pack: 200 pair

**Shoe Cover  
CTL904P**

- Vinyl sole
- Sizes: S/M, L/XL, 2X  
Case Pack: 200 pair

**Boot Cover  
CTL905P**

- Elastic top
  - 17" high
  - Vinyl sole
- Sizes: S/M, L/XL, 2X  
Case Pack: 200 pair

There is no detectable presence/absence of silicone using FTIR analysis for MicroMax NS fabric or other materials used in MicroMax NS garments such as elastic wrists and ankles, or zippers. All test method acceptance criteria were met. Test method STP0021 Rev 06 was performed in compliance with US FDA good manufacturing practice (GMP) regulations 21 CFR Parts 210, 211 and 820.

# MICROMAX<sup>®</sup> NS COOL SUIT

Breathable back panel  
maximizes comfort!

## MicroMax<sup>®</sup> NS Cool Suit Applications

Paint Spray

Sandblasting/Abrasives

Power Washing



Serged Seam

### MicroMax<sup>®</sup> NS Cool Suit Features:

- SMS back panel increases breathability and provides a barrier to particulates and aerosol mist
- Elastic back waist provides improved comfort
- Front and sides material provides protection from dirt, liquids and light chemical splash
- Storm flap over zipper protects against splashes

MicroMax<sup>®</sup> NS Cool Suit  
is the perfect solution for  
spray applications!

Attached hood fits perfectly around  
most respirators

Breathable back panel material  
keeps you cool

Elastic cuffs on sleeves and ankles helps  
seal out spray-over



### MicroMax<sup>®</sup> NS Cool Suit Configurations



**Coverall  
COL412**

- Zipper closure
- Sizes: S – 5X
- Case Pack: 25




**Coverall  
COL428**

- Zipper closure
- Attached hood
- Elastic wrists
- Elastic ankles
- Sizes: S – 5X
- Case Pack: 25

The Cool Suit breathable back panel provides  
efficient cooling while the front and sides offer  
light barrier protection from liquids and splash

# MicroMax® NS Cool Suit ... All-In-One Protection and Comfort!

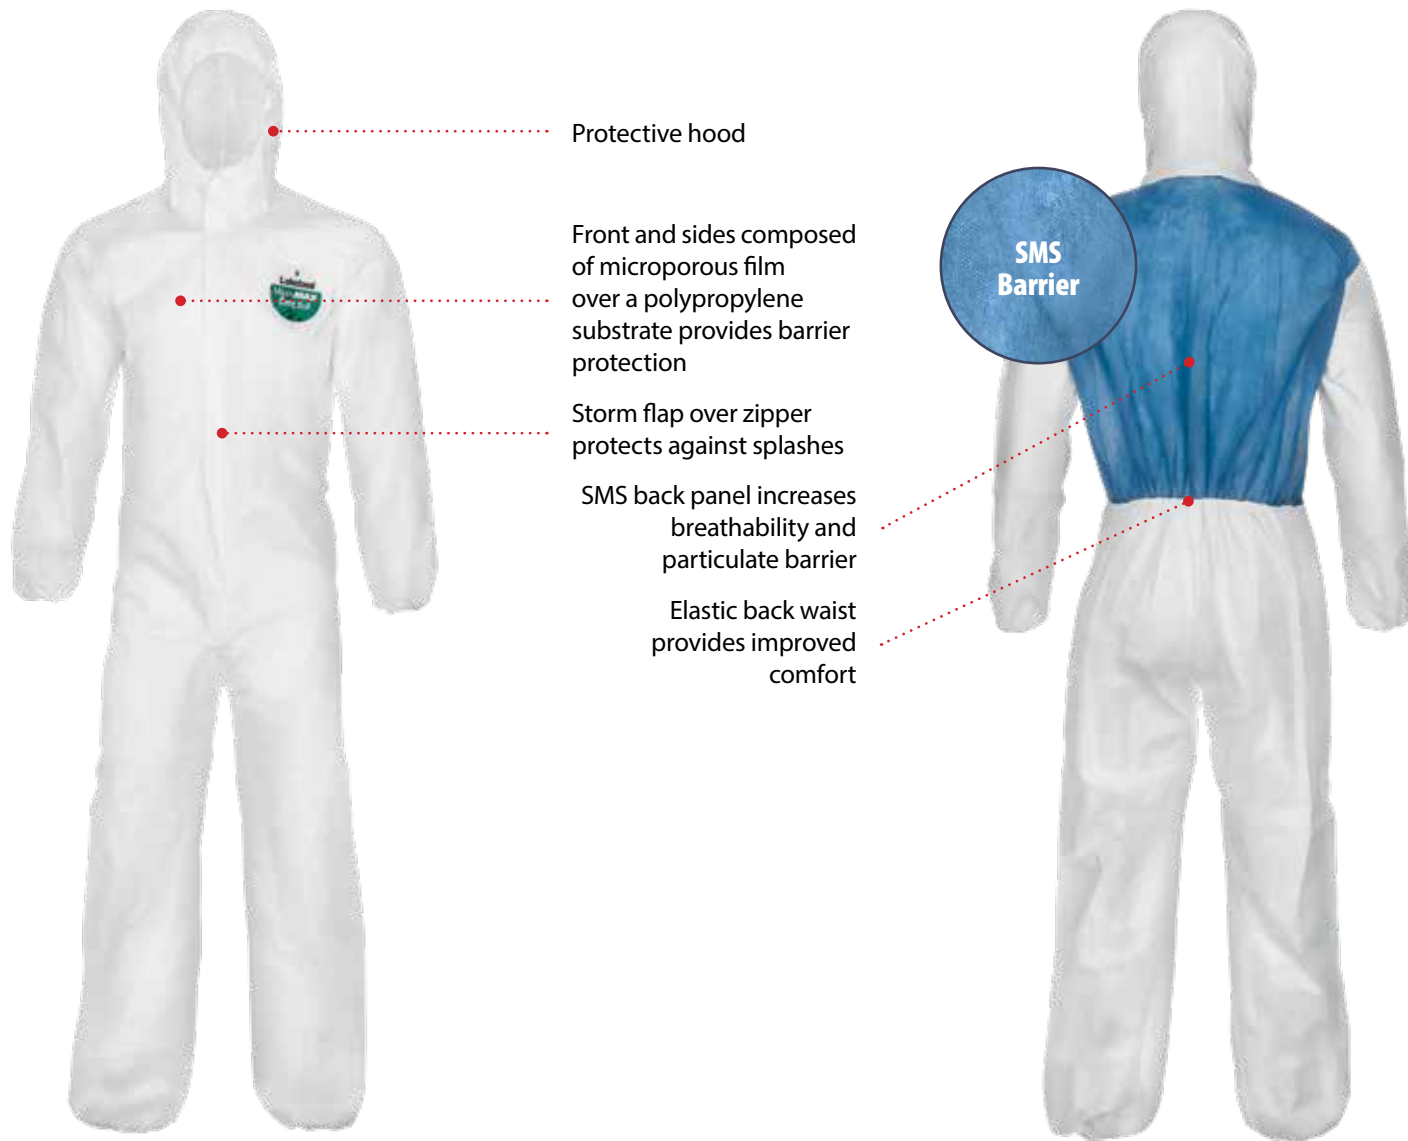

## MicroMax® NS Cool Suit Physical Properties

Physical Property	Test Method	Units	Test Results
Basis Weight	ASTM D3776	oz/y <sup>2</sup>	1.85 oz/y <sup>2</sup>
Strip Tensile MD	ASTM D5035	lbs.	11.3 lbs.
Strip Tensile XD	ASTM D5035	lbs.	6 lbs.
Tensile Strength MD	ASTM D5034	lbs.	24.4 lbs.
Tensile Strength XD	ASTM D5034	lbs.	16.2 lbs.
Trap/Tear MD	ASTM D1117	lbs.	10.8 lbs.
Trap/Tear XD	ASTM D1117	lbs.	5.4 lbs.
Ball Burst	ASTM 3787	lbs.	25.1 lbs.
Taber Abrasion	ASTM 3884	cycles	1062 cycles
Mocon-Breathability			5031
Air Permeability	ASTM D737	cfm/ft <sup>2</sup>	<0.562
Surface Resistance	EN1149	Ω	Pass
Hydrostatic Resistance	ASTM 4157	cfm	127+
Flammability Pass		lbs.	16 cfr 1610 cii

## MicroMax® NS Cool Suit ASTM F903 Penetration Data

Chemical Tested	Concentration %	Test Time – Minutes	Test Results
Diazinon (Roundup)	100%	60	Pass
Motor Oil-40 wt.	100%	60	Pass
Bleach-household	100%	60	Pass
Isocyanate Based Paint	100%	60	Pass
Sodium Hydroxide	50%	60	Pass
Sodium Hypochlorite	10%	60	Pass
Blood	Challenge Fluid Liter – 3.20 x 108 (PFU/mL)	Assay Results PFU/mL <1	Pass

# MICROMAX<sup>®</sup>

Added durability for the toughest environments

## MicroMax<sup>®</sup> Applications

Dirt, Oil and Grease

Hazardous Dry Particulate

Non-hazardous Liquids



Serged Seam


### MicroMax<sup>®</sup> Features:

- Rip-stop nylon scrim adds strength and durability
- Liquid under pressure will not pass through fabric
- Ideal for Isocyanate paint
- Proven protection for Pesticide Spraying

### MicroMax<sup>®</sup> Physical Properties

Physical Property	Test Method	Units	Test Results
Basis Weight	ASTM D3776	oz/y <sup>2</sup>	2.10 oz/y <sup>2</sup>
Grab Tensile MD	ASTM D5034	lbs.	32.4 lbs.
Grab Tensile XD	ASTM D5034	lbs.	32.6 lbs.
Trapezoidal Tear MD	ASTM D5733	lbs.	5.1 lbs.
Trapezoidal Tear CD	ASTM D5733	lbs.	6.2 lbs.
Surface Resistance	EN1149	Ω	Pass

### MicroMax<sup>®</sup> Configurations



**Coverall TG412**

- Zipper closure
- Sizes: S – 5X  
Case Pack: 25



**Coverall TG414**

- Zipper closure
  - Attached hood
  - Boots
- Elastic wrists  
Sizes: S – 5X  
Case Pack: 25



**Coverall TG417**

- Zipper closure
  - Elastic wrists
  - Elastic ankles
- Sizes: S – 5X  
Case Pack: 25



**Coverall TG428**

- Zipper closure
  - Attached hood
  - Elastic wrists
  - Elastic ankles
- Sizes: S – 5X  
Case Pack: 25

### MicroMax<sup>®</sup> ASTM F903 Penetration Data

Chemical Tested	Concentration %	Test Time – Minutes	Test Results
Diazinon (Roundup)	100%	60	Pass
Motor Oil-40 wt.	100%	60	Pass
Bleach-household	100%	60	Pass
Isocyanate Based Paint	100%	60	Pass
Sodium Hydroxide	50%	60	Pass
Sodium Hypochlorite	10%	60	Pass
Blood	Challenge Fluid Liter – 3.20 x 108 (PFU/mL)	Assay Results PFU/mL <1	Pass

# SAFEGARD®

Lightweight, breathable protection  
from 3 tough layers

## SafeGard® Applications

Dirt, Oil and Grease

Aerosol Mist



Serged Seam

### SafeGard® Features:

- Deluxe pattern coveralls feature
  - hip pocket
  - chest pocket
  - elastic back
- Aerosol mist protection
- Ideal for dry particulate
- Breathable Protection

### SafeGard® Physical Properties


Physical Property	Test Method	Units	Test Results
Basis Weight	ASTM D3776	oz/y <sup>2</sup>	1.5 oz/y <sup>2</sup>
Grab Tensile MD	ASTM D5034	lbs.	25 lbs.
Grab Tensile XD	ASTM D5034	lbs.	20 lbs.
Trap Tear MD	ASTM D5733	lbs.	7.9 lbs.
Trap Tear XD	ASTM D5733	lbs.	6.7 lbs.

### SafeGard® Configurations



#### Labcoat

- Snap closure
- 2 pockets
- Long sleeve
- White only
- Sizes: S – 5X
- Case Pack: 30



#### Coverall

- Zipper closure
- Sizes: S – 5X
- Case Pack: 25



#### Coverall

- Zipper closure
- Attached hood
- Boots
- Elastic wrists
- Sizes: S – 5X
- Case Pack: 25



#### Coverall

- Zipper closure
- Elastic wrists
- Elastic ankles
- Sizes: S – 5X
- Case Pack: 25



#### Coverall

- Zipper closure
- Attached hood
- Elastic wrists
- Elastic ankles
- Sizes: S – 5X
- Case Pack: 25



Most SafeGard® SMS garments are available in white or Sky Blue. For Sky Blue, add a "B" at the end of the style number.

# SAFEGARD® ECONOMY

SafeGard Protection -  
Economical Design

SafeGard® Economy  
Applications

- Dirt, Oil and Grease
- Hazardous/Non-hazardous  
Dry Particulates
- Aerosol Mist



Serged Seam


## SafeGard® Economy Features:

- SafeGard Protection - Ideal for dry particulate and light aerosol mist
- Standard coverall design
- Available in White or Blue

## SafeGard® Economy SMS Physical Properties

Physical Property	Test Method	Units	Test Results
Basis Weight	ASTM D3776	oz/y <sup>2</sup>	1.5 oz/y <sup>2</sup>
Grab Tensile MD	ASTM D5034	lbs.	25 lbs.
Grab Tensile XD	ASTM D5034	lbs.	20 lbs.
Trap Tear MD	ASTM D5733	lbs.	7.9 lbs.
Trap Tear XD	ASTM D5733	lbs.	6.7 lbs.

## SafeGard® Economy Configurations



**Coverall  
E8412**

- Zipper closure
- Sizes: S – 5X
- Case Pack: 25



**Coverall  
E8414**

- Zipper closure
- Attached hood
- Boots
- Elastic wrists
- Sizes: S – 5X
- Case Pack: 25



**Coverall  
E8417**

- Zipper closure
- Elastic wrists
- Elastic ankles
- Sizes: S – 5X
- Case Pack: 25



**Coverall  
E8428**

- Zipper closure
- Attached hood
- Elastic wrists
- Elastic ankles
- Sizes: S – 5X
- Case Pack: 25



All Economy SMS garments are available in White or Blue. For Blue, add a "B" at the end of the style number



# ZONEGARD®

The Breathable, Lightweight Protection of Polypropylene

ZoneGard® Applications

Dirt, Oil and Grease



Serged Seam


### ZoneGard® Features:

- Highly breathable
- Great for dirty, grimy environments
- Economical

### ZoneGard® Physical Properties

Physical Property	Test Method	Units	Test Results
Basis Weight	ASTM D3776	oz/y <sup>2</sup>	1.25 oz/y <sup>2</sup>

### ZoneGard® Configurations



**Coverall C2412**

- Zipper closure
- Sizes: S – 5X
- Case Pack: 25



**Coverall C2414**

- Zipper closure
- Attached hood
- Boots
- Elastic wrists
- Sizes: S – 5X
- Case Pack: 25



**Coverall C2417**

- Zipper closure
- Elastic wrists
- Elastic ankles
- Sizes: S – 5X
- Case Pack: 25



**Coverall C2428**

- Zipper closure
- Attached hood
- Elastic wrists
- Elastic ankles
- Sizes: S – 5X
- Case Pack: 25



**Sleeve C2850P-18**

- Elastic ends
- Sizes: 18" length
- Case Pack: 100 pair




**Shoe Cover C2901P**

- Elastic ankles
- Sizes: S/M, L/XL, 2X
- Case Pack: 200 pair



**Bouffant Hat 801-21**

- Bouffant hat
- Sizes: 21"
- Case Pack: 100

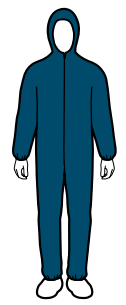

ZoneGard® coveralls are available in White or Navy. For Navy, add an "N" to the end of the style number

# CHEMMAX<sup>®</sup> 1


Your First Level of Chemical Protection

## ChemMax<sup>®</sup> 1 Applications

Waste Water Treatment

High and Low PH Chemicals


Hazardous Liquid Spray

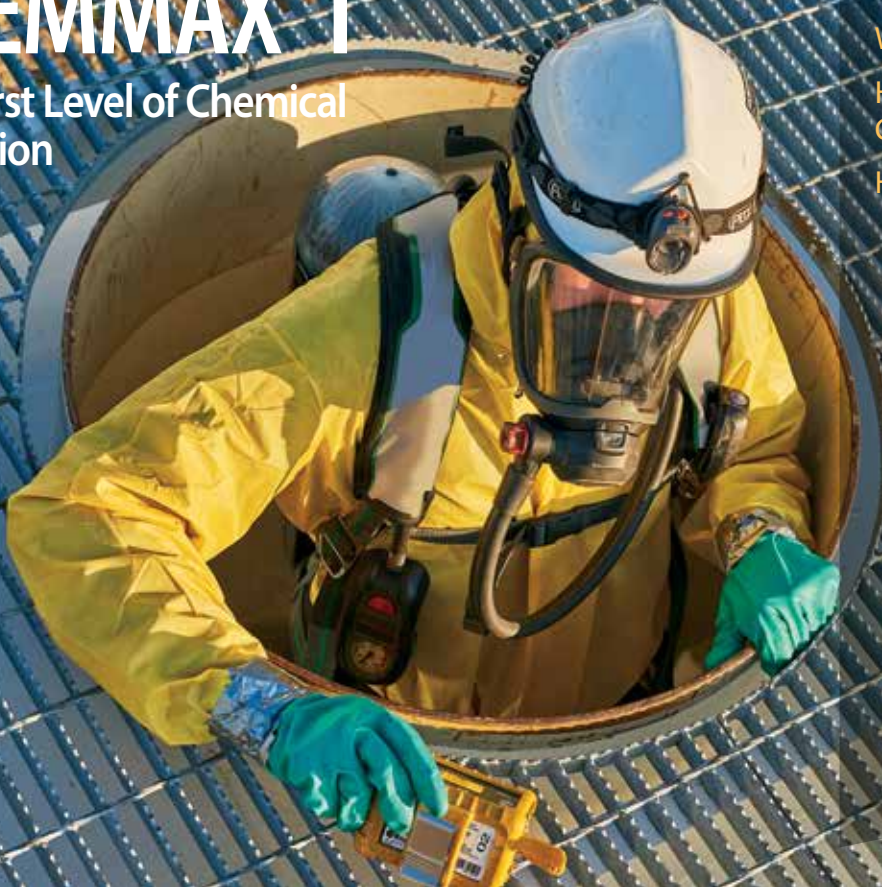

Serged Seam



Bound Seam

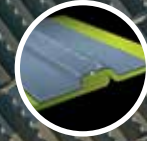


Heat Sealed Seam

ChemMax<sup>®</sup> 1 is constructed with a unique polyethylene barrier film and a continuous filament polypropylene nonwoven fabric. ChemMax<sup>®</sup> 1 garments bar many harmful contaminants from penetrating to inner clothing. Available with serged, bound and sealed seams for scalability.

ChemMax<sup>®</sup> 1 provides economical, lightweight protection against most industrial acid and base chemicals. Bloodborne pathogen and viral protection make it a cost-effective option for waste water treatment facilities. ChemMax<sup>®</sup> 1 also meets the requirements of EN-1149 for Electrostatic Properties.

## ChemMax<sup>®</sup> 1 Coveralls




**Coverall C1S412Y**

**Serged Seam**

- Zipper with storm flap

Sizes: S – 5XL  
Case Pack: 25




**Coverall C1S414Y**

**Serged Seam C1B414Y**

**Bound Seam**

- Zipper with storm flap
- Attached hood
- Attached boots
- Elastic wrists

Sizes: S – 5XL  
Case Pack: 25




**Coverall C1S417Y**

**Serged Seam C1B417Y**

**Bound Seam**

- Zipper with storm flap
- Elastic wrists
- Elastic ankles

Sizes: S – 5XL  
Case Pack: 25




**Coverall C1S428Y**

**Serged Seam C1B428Y**

**Bound Seam**

- Zipper with storm flap
- Attached hood
- Elastic wrists
- Elastic ankles

Sizes: S – 5XL  
Case Pack: 25



**Coverall C1T110Y**

**Sealed Seam**

- Collar
- Storm flap over zipper.
- Elastic wrists
- Elastic ankles

Sizes: S – 5XL  
Case Pack: 6



**Coverall C1T130Y**

**Sealed Seam**

- Zipper with storm flap
- Elastic face
- Elastic wrists
- Elastic ankles

Sizes: S – 5XL  
Case Pack: 6



**Coverall C1T150Y**

**Sealed Seam**

- Zipper with storm flap
- Attached hood
- Elastic wrists
- Attached boots

Sizes: S – 5XL  
Case Pack: 6



**Coverall C1T151Y**

**Sealed Seam**

- Respirator-fit hood
- Storm flap over zipper
- Elastic face and wrists
- Attached boots

Sizes: S – 5XL  
Case Pack: 6

## ChemMax® 1 Brand Features


Infectious Disease and Bloodborne Pathogen tested (sealed seam configuration)

Available in multiple seam configurations

Excellent Protection for High and Low PH Chemicals (Acids and Bases)


Passes ASTM D6978 Fentanyl

### ChemMax® 1 Configurations




**Gown  
C1S27Y**

- Open back
  - Long sleeve
  - Elastic wrists
  - Sewn ties
- Sizes: 30" x 40"  
Case Pack: 50




**Apron  
C1S650Y**

- Sewn ties
- Sizes: 28" x 36"  
Case Pack: 100




**Apron  
C1B657Y**

- Long sleeves
  - Waist ties
- Sizes: 28" x 53"  
Case Pack: 50




**Sleeve  
C1S850YP-18**

- Elastic ends
- Sizes: 18" length  
Case Pack: 100 pair



**Shoe Cover  
C1S901YP**

- Elastic ankles
- Sizes: S/M, L/XL, 2X  
Case Pack: 200 pair



**Boot Covers  
C1S903YP**

- Elastic top
  - 17" high
- Sizes: S/M, LG/XL, 2X  
Case Pack: 200 pair

### ChemMax® 1 Physical Properties

Property	Test Method	Units	ChemMax® 1
Basis Weight	ASTM D3776	oz./sq. yd	2.29
Grab Tensile MD	ASTM D5034	pounds	35
Grab Tensile XD		pounds	27
Trapezoidal Tear MD	ASTM D5733	pounds	13.8
Trapezoidal Tear XD		pounds	14.2
Ball Burst	ASTM D751	pounds	25.5

### Permeation Data for ASTM Recommended List of Chemicals for Evaluating Protective Clothing Materials (ASTM F1001)

Challenge Chemical	CAS Number	Physical State	ChemMax® 1
Acetone	67-64-1	Liquid	imm.
Acetonitrile	75-05-8	Liquid	imm.
Ammonia Gas	7664-41-7	Gas	imm.
1,3-Butadiene Gas	106-99-0	Gas	imm.
Carbon Disulfide	75-15-0	Liquid	imm.
Chlorine Gas	7782-50-5	Gas	imm.
Dichloromethane	75-09-2	Liquid	imm.
Diethylamine	109-89-7	Liquid	imm.
Dimethyl Formamide	68-12-2	Gas	40 minutes
Ethyl Acetate	141-78-6	Liquid	imm.
Ethylene Oxide Gas	75-21-8	Gas	imm.
n-Hexane	110-54-3	Liquid	imm.
Hydrogen Chloride Gas	7647-01-0	Gas	imm.
Methanol	67-56-1	Liquid	imm.
Methyl Chloride Gas	74-87-3	Gas	imm.
Nitrobenzene	98-95-3	Liquid	45 minutes
Sodium Hydroxide, 50%	1310-73-2	Liquid	320 minutes
Sulfuric Acid, 96%	7664-93-9	Liquid	315 minutes
Tetrachloroethylene	127-18-4	Liquid	imm.
Tetrahydrofuran	109-99-9	Liquid	imm.
Toluene	108-88-3	Liquid	imm.

### For Fentanyl Test Results using ASTM D6978 refer to page 10

ND = None Detected

> = greater than

L = liquid

G = gas

Numbers reported are averages of samples tested by the ASTM F739 test method.

Sample results vary and therefore averages for these results are reported.

### Warnings:

1. ChemMax® 1 is not flame resistant and should not be used around heat, flame sparks, or in potentially flammable or explosive environments.

2. Garments made of ChemMax® 1 should have slip resistant or anti-slip materials on the outer surface of boots, shoe covers or other garment surfaces in conditions where slipping could occur.

**Note:** Chemical Resistance Data is in accordance with ASTM F-739 test method. Testing is performed on fabric samples only, not finished garments. Sources for all test data are independent laboratory conditions and not actual use conditions.

# CHEMMAX<sup>®</sup> 2

## ChemMax<sup>®</sup> 2 Applications


Chemical Mixing and Handling

Environmental Clean Up

Hazardous Material Remediation



Bound Seam

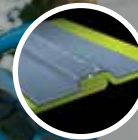

Heat Sealed Seam

## Quality, Value, Durability with the Proven Protection of Saranex<sup>®</sup> 23P Barrier Film

ChemMax<sup>®</sup> 2 is useful in protecting against hazardous chemicals and contaminants found in the work place and is a superior and economical chemical protective suit developed using the knowledge and expertise that you have come to expect from Lakeland<sup>®</sup>.

The unparalleled strength and softness features a Saranex<sup>®</sup> 23P film on two layers of a unique bi-component spunbond nonwoven substrate which provides protection for chemical mixing and handling, environmental clean-up, hazardous materials remediation and response, pharmaceutical manufacturing, spray painting and general industry.

### ChemMax<sup>®</sup> 2 Coveralls



**Coverall C2B414**  
**Bound Seam**

- Zipper with storm flap
  - Attached hood
  - Attached boots
  - Elastic wrists
- Sizes: S – 5XL  
Case Pack: 12



**Coverall C2B417**  
**Bound Seam**

- Zipper with storm flap
  - Elastic wrists
  - Elastic ankles
- Sizes: S – 5XL  
Case Pack: 12



**Coverall C2B428**  
**Bound Seam**

- Zipper with storm flap
  - Attached hood
  - Elastic wrists
  - Elastic ankles
- Sizes: S – 5XL  
Case Pack: 12



**Coverall C2T110**  
**Sealed Seam**

- Collar
  - Storm flap over zipper.
  - Elastic wrists
  - Elastic ankles
- Sizes: S – 5XL  
Case Pack: 6



**Coverall C2T132**  
**Sealed Seam**

- Respirator fit hood
  - Zipper with storm flap
  - Elastic face
  - Elastic wrists
  - Elastic ankles
- Sizes: S – 5XL  
Case Pack: 6



**Coverall C2T151**  
**Sealed Seam**

- Respirator fit hood
  - Zipper with storm flap
  - Attached hood
  - Elastic wrists
  - Attached boots
- Sizes: S – 5XL  
Case Pack: 6



**Coverall C2T165**  
**Sealed Seam**

- Respirator fit hood
  - Storm flap over zipper
  - Attached boots with boot flaps
  - Velcro<sup>®</sup> closure over zipper
- Sizes: S – 5XL  
Case Pack: 6

## ChemMax® 2 Brand Features


Moderate to high level chemical protection

Bound and sealed seam configurations

2-layer (PP/PE) substrate

20% stronger than competitive fabrics


### ChemMax® 2 Configurations



#### Apron C2B657

##### Bound Seam


- Long sleeves
- Waist ties
- Sizes: 28" x 53"
- Case Pack: 50



#### Apron C2T730

##### Sealed Seam

- Long sleeves
- Elastic wrists
- Hook and loop straps at neck
- Material ties in back
- Sizes: 28" x 53"
- Case Pack: 12



#### Boot Covers C2T740P

##### Sealed Seam

- Elastic top
- 17" high (extends over calf)
- Sizes: S/M, LG/XL, 2X
- Case Pack: 12 pair



#### Sleeve C2B850P-18

##### Bound Seam

- Elastic ends
- Sizes: 18" length
- Bound Seam Case Pack: 100 pair
- Sealed Seam Case Pack: 12 pair

### ChemMax® 2 Encapsulated Suits



#### Level B Encapsulated Suit C2T400 - Flat Back

- Rear entry
- Flat back
- 48" zipper
- Storm flap
- 20 mil Vinyl face shield
- Elastic wrists
- 1 exhaust port with shroud
- Air tube inlet
- Attached sock boots with boot flap
- Suit is not gas/vapor tight
- Sizes: M – 4XL
- Case Pack: 3



#### Level B Encapsulated Suit C2T450 - Expanded Back

- Rear entry
- Expanded back
- 48" zipper
- Double storm flap with hook and loop
- 20 mil Vinyl face shield
- Elastic wrists
- 2 exhaust ports with shroud
- Air tube inlet
- Attached sock boots with boot flap
- Suit is not gas/vapor tight
- Sizes: M – 4XL
- Case Pack: 3

### ChemMax® 2 Physical Properties

Property	Test Method	Units	ChemMax® 2
Basis Weight	ASTM D3776	oz./sq. yd	4.3
Grab Tensile MD	ASTM D5034	pounds	47
Grab Tensile XD		pounds	33.9
Trapezoidal Tear MD	ASTM D5733	pounds	29.95
Trapezoidal Tear XD		pounds	12.47
Ball Burst	ASTM D751	pounds	48
Surface Resistance	EN1149	Ω	Pass

### Permeation Data for ASTM Recommended List of Chemicals for Evaluating Protective Clothing Materials (ASTM F1001)

Challenge Chemical	CAS Number	Physical State	ChemMax® 2
Acetone	67-64-1	Liquid	9
Acetonitrile	75-05-8	Liquid	<15
Ammonia Gas	7664-41-7	Gas	15
1,3-Butadiene Gas	106-99-0	Gas	>480
Carbon Disulfide	75-15-0	Liquid	imm.
Chlorine Gas	7782-50-5	Gas	>480
Dichloromethane	75-09-2	Liquid	imm.
Diethylamine	109-89-7	Liquid	imm.
Dimethyl Formamide	68-12-2	Gas	18
Ethyl Acetate	141-78-6	Liquid	21
Ethylene Oxide Gas	75-21-8	Gas	24
n-Hexane	110-54-3	Liquid	21
Hydrogen Chloride Gas	7647-01-0	Gas	>410
Methanol	67-56-1	Liquid	>480
Methyl Chloride Gas	74-87-3	Gas	>480.
Nitrobenzene	98-95-3	Liquid	45
Sodium Hydroxide, 50%	1310-73-2	Liquid	>480
Sulfuric Acid, 98%	7664-93-9	Liquid	>480
Tetrachloroethylene	127-18-4	Liquid	imm.
Tetrahydrofuran	109-99-9	Liquid	imm.
Toluene	108-88-3	Liquid	imm.

ND = None Detected

> = greater than

L = liquid

G = gas

Numbers reported are averages of samples tested by the ASTM F739 test method.

Sample results vary and therefore averages for these results are reported.

#### Warnings:

1. ChemMax® 2 is not flame resistant and should not be used around heat, flame sparks, or in potentially flammable or explosive environments.
2. Garments made of ChemMax® 2 should have slip resistant or anti-slip materials on the outer surface of boots, shoe covers or other garment surfaces in conditions where slipping could occur.

**Note:** Chemical Resistance Data is in accordance with ASTM F-739 test method. Testing is performed on fabric samples only, not finished garments. Sources for all test data are independent laboratory conditions and not actual use conditions.

**NEW**

ChemMax® 2 Bound Seam coveralls now feature blue binding for easier identification.



# DISPOSABLE FR

## Why Wear an FR Disposable Over Your Primary FR Clothing?

Flame resistant disposables are intended to provide liquid and dust protection when worn over a primary thermal protective garment. To keep your new, primary FR clothing clean and free of contaminants, make sure that you are selecting the correct disposable garment for your application.

Standard disposables are made from polypropylene or polyethylene (or both). These are thermoplastic derivatives of oil, both of which are flammable materials that will ignite, melt and burn. Any fabric that melts and drips in the event of an electric arc or flash fire should not be worn over primary FR garments.

Repellency is also a critical attribute to consider when selecting an FR disposable garment. Understand the repellency performance of your disposable garment to ensure that possible flammable contaminants are not soaking through to your primary FR clothing. Make sure that your FR disposable has the repellency to keep grease, hydraulic fluid and other harmful contaminants from compromising your primary protective clothing.

Don't be misled by others citing the NFPA 701 curtain and drapery standard for their flammability performance. All Pyrolon® products are designed to be worn over primary protective flame resistant clothing, are tested to ASTM F1930 and meet the NFPA 2113 requirements for section 5.1.9.

## Know the Facts!

Get the FR protection you demand. Lakeland® has produced a video which demonstrates the superiority of Pyrolon® Plus 2 vs. competing fabrics. Don't settle for substandard FR PPE that can be downright dangerous to wear. Visit the Lakeland® website at [www.lakeland.com](http://www.lakeland.com), or scan the QR code on this page.



[lakeland.com/us/pyrolon-alt](http://lakeland.com/us/pyrolon-alt)

# PYROLON® PLUS 2

Perfect for use over thermally protective and arc protective clothing!

## Pyrolon® Plus 2 Applications

Dirt, Oil and Grease

Hazardous Dry Particulates

Flammable Environment



Sewn Seam

- Second generation Pyrolon® Plus 2 offers wet or dry strength superior to that provided by other traditional Flame Resistant disposables
- Meets the NFPA 2113 requirements for section 5.1.9.
- ANSI/ISEA 203 Certified
- Pyrolon® Plus 2 is breathable, making this a cool and comfortable garment to wear.


Pyrolon® Plus 2 can be used in work environments where hazardous or non-hazardous contaminants may be present.

Pyrolon® Plus 2 is certified to the ANSI/ISEA 203-2018 American National Standard for Secondary Single-Use Flame Resistant Protective Clothing for Use Over Primary Flame Resistant Protective Clothing.

## Pyrolon® Plus 2 Physical Properties


Physical Property	Test Method	Units	Test Results
Basis Weight	ASTM D3776	oz./sq. yd	2.4 oz/y <sup>2</sup>
Grab Tensile MD	ASTM D5034	lbs.	31.0 lbs.
Grab Tensile XD	ASTM D5034	lbs.	20.0 lbs.
Trapezoidal Tear MD	ASTM D5733	lbs.	4.5 lbs.
Trapezoidal Tear CD	ASTM D5733	lbs.	5.6 lbs.
Air Permeability	ASTM D737	cfm	52 cfm
Char Length MD	ASTM D6413	inches	3.70 inches
Char Length XD	ASTM D6413	inches	3.70 inches
Ignition Point	–	degrees F	1000° F
Surface Resistance	EN1149	Ω	Pass

## Pyrolon® Plus 2 Configurations



**Coverall**  
**7412**  
**7412B**

- Zipper closure
- Sizes: S – 5X  
Case Pack: 25



**Coverall**  
**7414**  
**7414B**

- Zipper closure
  - Attached hood
  - Boots
  - Elastic wrists
- Sizes: S – 5X  
Case Pack: 25



**Coverall**  
**7417**  
**7417B**

- Zipper closure
  - Elastic wrists
  - Elastic ankles
- Sizes: S – 5X  
Case Pack: 25




**Coverall**  
**7428**  
**7428B**

- Zipper closure
  - Attached hood
  - Elastic wrists
  - Elastic ankles
- Sizes: S – 5X  
Case Pack: 25



**Labcoat**  
**7101**  
**7101B**

- Snap closure
  - 2 pockets
  - Long sleeve
- Sizes: S – 5X  
Case Pack: 30




**Hood**  
**7713B**

- Elastic face
  - Covers shoulders
  - One size
  - Available in Blue only
- Case Pack: 250



**Boot Cover**  
**7903BP**

- Elastic top
  - 17" high
  - Available in Blue only
- Sizes: S/M, L/XL, 2X  
Case Pack: 200 pair

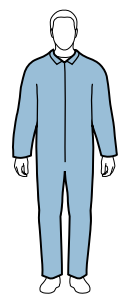

Pyrolon® Plus2 coveralls and lab coats are available in White or Blue. For Blue, add an "B" to the end of the style number

# PYROLON® CRFR

Chemical Resistance and Flame Resistance in one Disposable Protective Garment

## Pyrolon® CRFR Applications

- Petrochemical
- Flammable Liquid Handling
- Drug Lab Investigation



Heat Sealed Seam

Pyrolon CRFR is the Chemical Resistant and Flame Resistant disposable option designed to protect your Primary FR and ARC Rated Garments when chemical splash is a concern. Pyrolon CRFR garments bar contaminating flammables like paint, oil and grease, hazardous liquids and contaminants, and dry particulates from penetrating to inner Primary Protective Garments, potentially saturating them with flammable substances.

Pyrolon CRFR is designed to be worn over Primary FR/AR Protective Clothing for environments where flash fire is a concern. Utilizing Pyrolon CRFR when both chemical splash and flash fire are a concern helps the wearer meet the NFPA 2113 requirements for section 5.1.9.

### Pyrolon® CRFR Coveralls



**Coverall 51100**

- Collar
  - Storm flap over zipper
  - Open wrists
  - Open ankles
  - Hemmed cuff
- Sizes: S - 5XL  
Case Pack: 6



**Coverall 51110**

- Collar
  - Storm flap over zipper
  - Elastic wrists
  - Elastic ankles
- Sizes: S - 5XL  
Case Pack: 6



**Coverall 51130**

- Hood
  - Storm flap over zipper
  - Elastic face
  - Elastic wrists and ankles
- Sizes: S - 5XL  
Case Pack: 6



**Coverall 51150**

- Hood
  - Storm flap over zipper
  - Elastic face and wrists
  - Attached boots
- Sizes: S - 5XL  
Case Pack: 6



**Coverall 51166**

- Respirator fit hood
  - Storm flap over zipper
  - Elastic wrists
  - Attached Boots
- Sizes: S - 5XL  
Case Pack: 6

### Pyrolon® CRFR Brand Features:

Combines Chemical Resistance with Flame Resistance

Does Not Melt or Drip

Meets the NFPA 2113 Requirements for Section 5.1.9

Penetration Data for ASTM F903 Standard Chemicals





**Secondary  
FR and  
Chemical  
Protective  
Garment**

**Primary FR  
Protective  
Garment**

**Pyrolon® CRFR helps reduce Total Body Burn!**

*Pyrolon® CRFR third party testing by North Carolina State University to ASTM F1930 confirms:*

Material	Body Burn Results
6.5 oz. Westex® DH alone	16.4% total body burn
Pyrolon® CRFR over 6.5 oz. Westex® DH	15.84% total body burn

**Pyrolon® CRFR Physical Properties, 2.5 Mil**

Physical Property	Test Method	Units	Test Results
Basis Weight		oz./sq. yd	4.92
Grab Tensile MD		lbs.	34
Grab Tensile XD		lbs.	27
Mullen Burst		lbs./sq.in.	35
Char Length MD		inches	4.7
Char Length XD		inches	4.5
Afterflame		seconds	<2
Charge Decay	NFPA 99		Pass
Surface Resistance	EN1149	Ω	Pass

**Pyrolon® CRFR Penetration Data, 2.5 Mil, ASTM F903**

Challenge Chemical	CAS Number	Physical State	Penetration Result
Acetone	67-64-1	Liquid	>60
Acetonitrile	75-05-8	Liquid	>60
Benzene	71-43-2	Liquid	>60
Carbon Disulfide	75-15-0	Liquid	>60
Diesel Fuel	N/A	Liquid	>60
Diethylamine	109-89-7	Liquid	>60
Crude Oil	N/A	Liquid	>60
Ethyl Acetate	141-78-6	Liquid	>60
n-Hexane	110-54-3	Liquid	>60
Hexamethylene Diisocyanate	822-06-0	Liquid	>60
Hydrochloric Acid	7647-01-0	Liquid	>60
Methanol	67-56-1	Liquid	>60
Methyl Ethyl Ketone (MEK)	78-93-3	Liquid	> 60
Methyl Isobutyl Ketone	108-10-1	Liquid	>60
Monochlorobenzene	108-90-7	Liquid	>60
n-Butyl Acetate	123-86-4	Liquid	>60
Orthodichlorobenzene, Grade F	95-50-1	Liquid	>60
Polychlorinated Biphenyl (PCB)	92-52-4	Liquid	> 60
Sodium Hydroxide, 50%	1310-73-2	Liquid	>60
Sulfuric Acid, 98%	7664-93-9	Liquid	45
Surrogate Gasoline (Toulene 50%) (Isooctane 50%)	108-88-3 540-84-1	Liquid	> 60
Tetrachloroethylene	127-18-4	Liquid	>60
Toluene	108-88-3	Liquid	>60
Trichlorobenzene Mixture	Mixture	Liquid	>60
Xylene	1330-20-7	Liquid	>60

*Note: Chemical Resistance Data is in accordance with ASTM F903 test method. Testing is performed on fabric samples only, not finished garments. Sources for all test data are independent laboratories. All tests were performed under laboratory conditions and not actual use conditions.*

**Pyrolon® CRFR Configurations**



**Apron  
51730**

- Long sleeve
  - Elastic wrists
  - 32" length
- Sizes: S-4X  
Case Pack: 12




**Jacket  
51250**

- Collar
  - Elastic wrists
  - Double storm flap
  - Hook and loop closure
- Sizes: S - 5XL  
Case Pack: 6



**Pant  
51300 Pant**

- Elastic waist
  - Elastic ankles
- Sizes: M-4X  
Case Pack: 6



**Boot Covers  
51740P**

- Elastic top
  - 17" high
- Sizes: One size  
Case Pack: 12 pair

# PYROLON® CBFR

Advanced Chemical Barrier and Flame Resistance for the Highest Chemical Hold-Out

## Pyrolon® CBFR Applications


- Ammonia
- Hydrofluoric Acid
- Petrochemical



Heat Sealed Seam

Pyrolon CBFR - Advanced chemical protection and self-extinguishing FR protection. Designed to be worn over primary FR protective clothing, for environments where both chemical exposures and flash fire are a concern. This advanced chemical barrier is self-extinguishing, won't melt or drip, and meets the NFPA 2113 requirements for section 5.1.9.

**Pyrolon CBFR is your choice for protection in harsh chemical environments for the likes of Ammonia, Hydrofluoric Acid and other serious chemicals where workers need chemical protection over primary FR protective garments.**

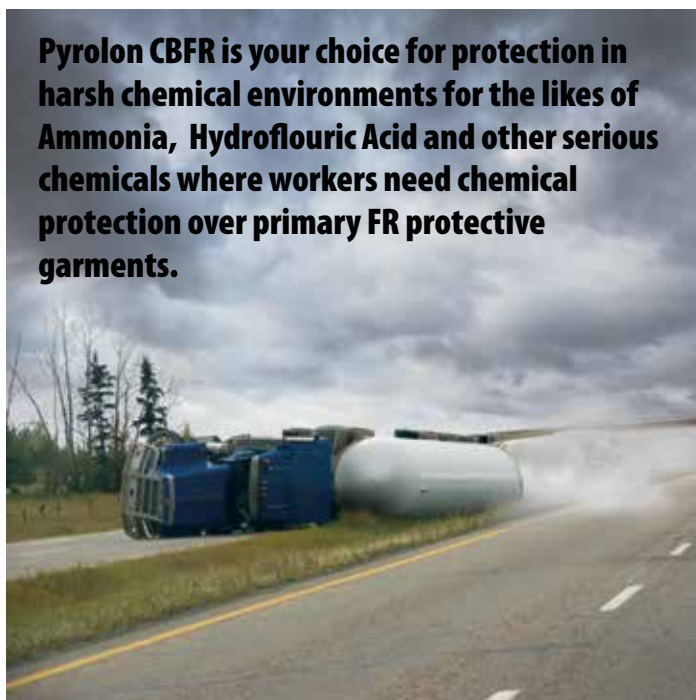

Respirator fit hood

Tape sealed seams

Protective storm flap over zipper

Styles with and without attached boots

**Secondary FR and Chemical Protective Garment**

**Primary FR Protective Garment**



## Pyrolon® CBFR Brand Features:

Combines Advanced Chemical Barrier with Flame Resistance


Higher Chemical Hold-out Than CRFR

Chemical Permeation Data Available

Lower Predicted Body Burn when Paired with Lakeland's 6.5 oz. Westex® DH FR Coverall

ANSI/ISEA 203 for Secondary Single-Use Flame Resistant Protective Clothing for Use Over Primary Flame Resistant Protective Clothing

### Pyrolon® CBFR Configurations



**Coverall 52151**

- Respirator-fit hood
  - Storm flap over zipper
  - Elastic face and wrists
  - Attached boots
- Sizes: S - 5XL  
Case Pack: 6



**Coverall 52132**

- Respirator-fit hood
  - Storm flap over zipper
  - Elastic face, wrists and ankles
- Sizes: S - 5XL  
Case Pack: 6

### Pyrolon® CB-FR Physical Properties Physical Properties

Physical Property	Test Method	Units	Test Results
Basis Weight	ASTM D3776	oz./sq. yd	7.16 oz/y2
Thickness	ASTM D1777	mils	12
Grab Tensile MD	ASTM D5034	lbs.	55.2 lbs.
Grab Tensile XD	ASTM D5034	lbs.	42.88 lbs.
Mullenburst	ASTM D3786	psi	32.5
Trapezoidal Tear MD	ASTM D5587	lbs.	16.28 lbs.
Trapezoidal Tear CD	ASTM D5587	lbs.	24.08 lbs.
Surface Resistance	EN1149	Ω	Pass

### Pyrolon® CB-FR Permeation Testing - ASTM F1001

Chemical	CAS Number	Physical State	Concentration	ASTM F739	EN 369
Acetone	67-64-1	Liquid	99%	>480	>480
Acetonitrile	75-05-8	Liquid	99%	>480	>480
Acrylonitrile	107-13-1	Liquid	99%	>480	>480
Benzene	71-43-2	Liquid	99%	>480	>480
Carbon Disulfide	75-15-0	Liquid	99%	>480	>480
Crude Oil	Various	Liquid	Mixture	58	>480
Dichloromethane	75-09-2	Liquid	99%	>480	>480
Diesel Fuel	Various	Liquid	Mixture	>480	>480
Diethylamine (DEA)	109-89-7	Liquid	99%	130	309
Dimethylformamide (DMF)	68-12-2	Liquid	99%	>480	>480
Ethyl Acetate	141-78-6	Liquid	99%	>480	>480
Gasoline	Various	Liquid	Mixture	138	>480
Hydrofluoric Acid	7664-39-3	Liquid	48%	>480	>480
n-Hexane	110-54-3	Liquid	99%	>480	>480
Methanol	67-56-1	Liquid	99%	25	33
Nitrobenzene	98-95-3	Liquid	99%	>480	>480
Sodium Hydroxide, 50%	1310-73-2	Liquid	50%	>480	>480
Sulfuric Acid 93.1% 66°B	7664-93-9	Liquid	93%	>480	>480
Tetrachloroethylene (perc)	127-18-4	Liquid	99%	>480	>480
Tetrahydrofuran (THF)	109-99-9	Liquid	99%	13	21
Toluene	108-88-3	Liquid	99%	>480	>480
<b>Gases</b>					
Ammonia Anhydrous	7664-41-7	Gas	99%	>480	>480
1, 3-Butadiene inhibited 99%	106-99-0	Gas	99%	>480	>480
Chlorine 99.5%	7782-50-5	Gas	99%	>480	>480
Ethylene Oxide 99.7%	75-21-8	Gas	99%	>480	>480
Hydrogen Chloride 99%	7647-01-0	Gas	99%	182	>480
Methyl Chloride 99.5%	74-87-3	Gas	99%	>480	>480

Note: Chemical Resistance Data is in accordance with ASTM F739 test method. Testing is performed on fabric samples only, not finished garments. Sources for all test data are independent laboratories. All tests were performed under laboratory conditions and not actual use conditions.

### Pyrolon® CB-FR Predicted Body Burn when worn over a Lakeland® 6.5 oz. Westex® DH FR Coverall (includes the head)

**6.5 oz. Westex® DH coverall alone – 16.4% Total Body Burn**

Burn	2nd Degree	3rd Degree	Average
Garment 1	0%	6.56%	6.56%
Garment 2	0.82%	6.56%	7.38%
Garment 3	2.46%	6.56%	9.02%
<b>Overall Average</b>			<b>7.65%</b>

**NEW**

# PERMASURE<sup>®</sup>

A free, mobile-friendly online tool that models permeation rates!

Using Technology to Determine Safe-Use Times for over 4,000 Chemicals

**PermaSURE<sup>®</sup>**


PermaSURE<sup>®</sup> is a free, mobile-friendly online tool that models permeation rates and provides safe-use times by incorporating environmental, temperature and chemical exposure factors. It is a state-of-the-art technology developed initially by leading Polymer chemists for defense forces to quickly determine which suits are needed for various chemical warfare agents and dual use chemicals. It is based on the known molecular characteristics and behavior of 4000+ chemicals interacting with Lakeland's specific chemical fabrics.

- Helps determine which suit is optimal for the various chemicals used.
- Easy input of suit type, exposure time, temperature and chemical.
- Provides calculation of how much the chemical has permeated.
- Calculates safe-use time and takes into account environmental temperature and the toxicity thresholds of specific chemicals.
- Alarm sounds on mobile device when safe use time limit is being approached.
- Provides instant basic chemical hazard data and single-click links to detailed online safety data sheets.
- Over 4000 chemicals in the database.
- Robust documentation capabilities.

## Understanding "Breakthrough" in Permeation Testing: How Long Am I Safe?

"Breakthrough" in Permeation test reports is often used to estimate a safe-use time, but according to the test standards, permeation testing is designed for fabric comparison only.

**The use of permeation testing data can result in misleading conclusions about how long a worker is safe!**

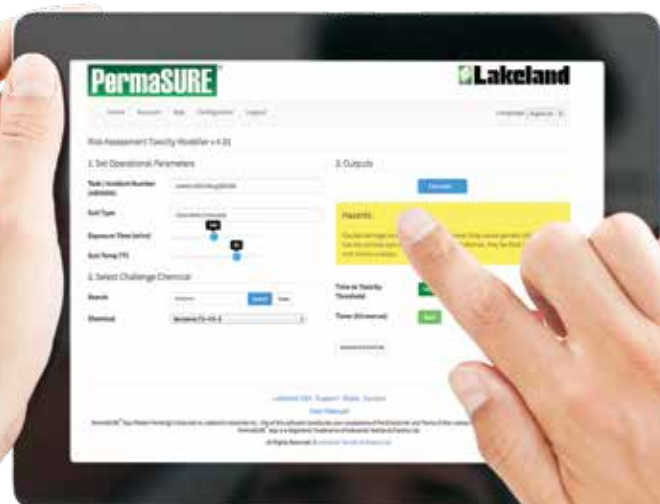


### What does a permeation test tell you?

'Breakthrough' in a permeation test report is not recorded when the chemical first breaks through the fabric, but instead, when the permeation rate reaches 0.1ug/min/cm<sup>2</sup>, and in the controlled environment of a lab with ambient temperature of 73° F.

### What a permeation test **DOES NOT** tell you:


The first actual point of 'breakthrough' or exposure may occur well before the 'breakthrough' test report indicates, especially when environmental temperatures exceed 73° Fahrenheit.

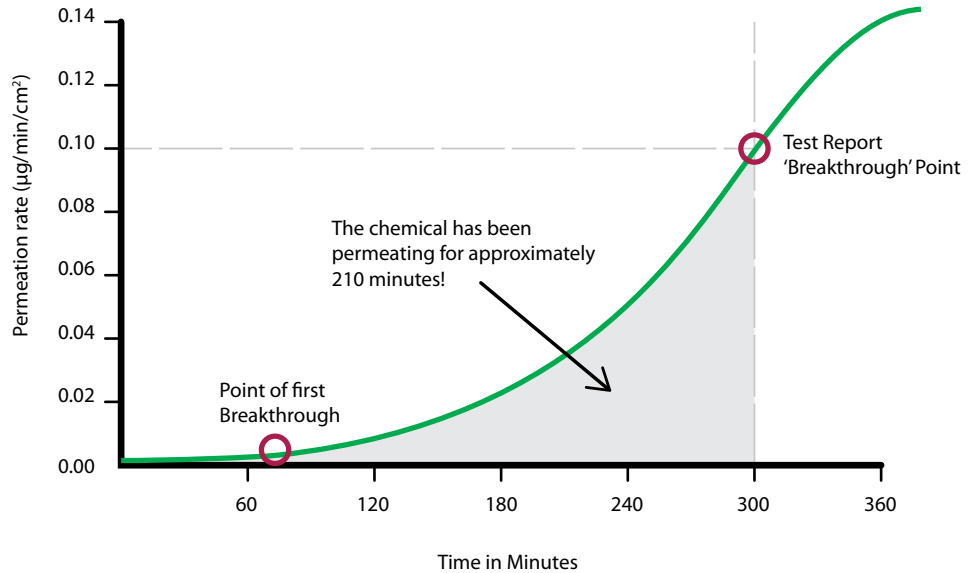

### Does a permeation test account for the following?

- "Real World" ambient or actual suit temperature? – **NO**
- Faster permeation at higher temperatures due to increased molecular volatility? – **NO**
- Toxicity level of the specific chemical? – **NO**
- Amount permeated? – **NO**

### For Example:

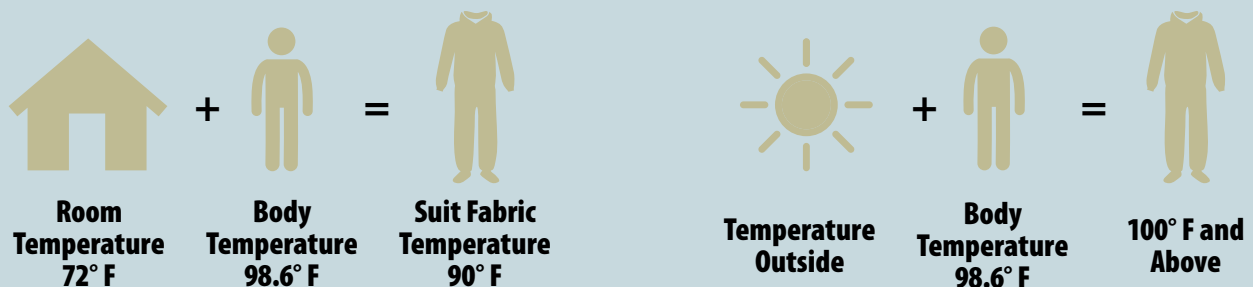

If your worker is in an environment where the room temperature is 72° Fahrenheit and his body temperature is 98.6° Fahrenheit, the temperature of the suit fabric will quickly approach 90° F. Out in the sun in the summer, suit temperature can quickly soar well over 100° F. The permeation rate of many chemicals can increase exponentially with even a modest rise in temperature of the suit fabric.

**Differences in the toxicity levels of chemicals mean that similar doses can vary significantly in how harmful they are. Toxicity must be taken into account when determining safe use times.**

Recent modifications to NFPA 1991 highlight a paradigm shift from using “normalized breakthrough times,” to compare fabrics, to cumulative permeate. Determining the amount of cumulative permeate moves us closer to determining the dosage the wearer is being exposed to and how that should best be accounted for.

## Permeation and Temperature:

The concentration and temperature of a chemical plays a critical role in permeation rate.

Unless otherwise requested, all permeation testing is conducted at 73° F so that data is collected under constant conditions. This is important because the permeation test was designed and intended to be used for a relative comparison between different fabrics. This is clearly stated in the test method.

### Important temperature considerations include:

- Higher environmental temperatures can result in accelerated breakthrough, while lower temperatures potentially can lead to a slower breakthrough for certain chemical and material combinations.
- Some chemicals are in a solid state at 73° Fahrenheit, making permeation testing data and safe-use time recommendations inapplicable.
- Work environment and body temperature, and their impact on garment temperature, are not considered when “Breakthrough” times are used as the sole indicator of safe use times.

To properly evaluate safe-use time, it is essential that you take the temperature factors for your unique working environment into consideration.

## How Do You Calculate A Safe-Use Time?

Safe-use time must account for: specific chemical permeation behavior, chemical state, amount of chemical available for exposure, temperature, permeation rate, toxicity and area of suit likely to be exposed.

<b>1</b> <b>Calculate Volume Permeated</b>	<b>Permeation Rate</b> <b>X</b>	<b>Duration of Exposure</b> <b>X</b>	<b>Area of Suit Exposed</b> <b>=</b>	<b>Volume Permeated</b>
	As permeation rate per unit area varies over time an average can be calculated - or use the maximum rate for a wide safety margin	The time the suit may be exposed to the chemical - how long the task will take.	The total area of the suit that might be contaminated.	
<b>2</b> <b>Compare with Chemical Toxicity Limit</b>	<b>Is the volume permeated greater or less than the chemical toxicity limit?</b>			
	<b>Volume Permeated &lt; Toxicity Limit = SAFE</b>		<b>Volume Permeated &gt; Toxicity Limit = NOT SAFE</b>	
<b>3</b> <b>Consider Environmental Factors</b>	<b>Chemical State</b>	<b>Room Temperature</b>	<b>Outside Temperature</b>	<b>Body Temperature</b>
	Evaluate environmental temperature to determine the exact effects on suit temperature and how that impacts permeation for the chemical being used and calculate a more accurate safe-use time.			

## Lakeland's Innovative Technology Helps You Manage Risk by Accurately Monitoring Safe-Use Time

Make the best chemical protective garment selection with the ability to assess toxicity risk and better protect the health of your workers — for more than 4000 chemicals!

Traditional “breakthrough” testing data shows, that in the majority of cases, the performance of Lakeland® garments is as good or better than other brands’ offerings.

Lakeland’s ChemMax® 3, ChemMax® 4 Plus and Interceptor® Plus match or outperform the competition when it comes to:

- Cost
- Comfort
- Chemical Barrier
- Design features and options

But with Lakeland’s ChemMax® 3, ChemMax® 4 Plus and Interceptor® Plus, you get the added bonus of PermaSURE®.

PermaSURE® is a free, mobile-friendly online tool that models permeation rates and provides safe-use times by incorporating environmental, temperature and chemical exposure factors. It is a state-of-the-art technology developed initially by leading Polymer chemists for defense forces to quickly determine which suits are needed for various chemical warfare agents and dual use chemicals. It is based on the known molecular characteristics and behavior of 4000+ chemicals interacting with Lakeland’s specific chemical fabrics.

PermaSURE® provides users with both toxicity information and a guide as to how long one can be exposed to a chemical before harmful toxicity limits are reached. It is also an effective tool to aid safety professionals in collecting and recording the necessary documentation when an incident occurs. It allows for desktop contingency planning for spills and clean ups under varying climatic conditions so that procedures can be written for specific conditions.



### PermaSURE® Fills a Great Need for Companies That:

- Need to know which suit is optimal for the various chemicals they use.
- For hazmat teams who may not know what the chemical is before they arrive on the scene, and must quickly determine what to wear.
- Reduces the uncertainty from variables that are not taken into account using breakthrough times or cumulative permeate, like the effect of temperature and toxicity, so that good decisions on what suit to wear and for how long are easier to make.

### PermaSURE® Key Features:

- Easy input of suit type, exposure time, temperature and chemical.
- PermaSURE® provides calculation of how much the chemical has permeated.
- Calculates safe-use times and takes into account environmental temperature and the toxicity thresholds of specific chemicals.
- Alarm sounds on mobile device when safe use time limit is being approached.
- Provides instant basic chemical hazard data and single-click links to detailed online safety data sheets.
- Over 4000 chemicals in the database.
- Robust documentation capabilities.



# PermaSURE®


**Please contact a Lakeland® representative today to learn more about the ChemMax Plus line of products, PermaSURE® and to schedule a more detailed discussion on the benefits of choosing Lakeland® chemical protective clothing with the added safety of PermaSURE®.**

# CHEMMAX<sup>®</sup> 3

Advanced Chemical Protection for Industry, Emergency Response and Law Enforcement

## ChemMax<sup>®</sup> 3 Applications

- Toxic Industrial Chemicals
- Chemical Warfare Agents
- Fentanyl Protection



Heat Sealed Seam

ChemMax<sup>®</sup> 3 uses the latest technology to produce a superior chemical protective product. Durable and lightweight, ChemMax<sup>®</sup> 3 provides a barrier against a broad spectrum of toxic industrial chemicals, dual-use chemicals, chemical warfare agents and other harmful contaminants.

The multi-layer film is applied to a heavy polypropylene non-woven for increased strength and durability. The barrier film is significantly softer than other products on the market, resulting in a quiet, more comfortable garment.

### ChemMax<sup>®</sup> 3 Coveralls



#### Coverall C3T110

##### Sealed Seam

- Collar
- Storm flap over zipper.
- Elastic wrists
- Elastic ankles
- Sizes: S – 5XL
- Case Pack: 6



#### Coverall C3T132

##### Sealed Seam

- Respirator-fit hood
- Zipper with storm flap
- Elastic face
- Elastic wrists
- Elastic ankles
- Sizes: S – 5XL
- Case Pack: 6



#### Coverall C3T151

- Respirator-fit hood
- Storm flap over zipper
- Elastic face
- Elastic wrists
- Attached boots
- Sizes: S – 5XL
- Case Pack: 6



#### Coverall C3T165

- Attached respirator-fit hood
- Double storm flap
- Hook and loop closure
- Elastic face and wrists
- Attached boots with boot flaps
- Sizes: S – 5XL
- Case Pack: 6



#### Coverall C3T166

- Respirator fit hood
- Double storm flap over zipper
- Elastic wrists and ankles
- Velcro<sup>®</sup> closure over zipper
- Sizes: S – 5XL
- Case Pack: 6



**IDEAL FOR LAW ENFORCEMENT**




## ChemMax® 3 Brand Features

Excellent chemical barrier

Chemical warfare agent tested

Fabric is lighter weight and more flexible than all major competitors

### Encapsulated Suits

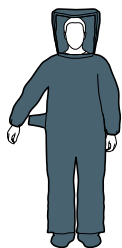

#### Encapsulated Suit C3T400

- Rear entry/Flat back
- 48" zipper/Storm flap
- 20 mil Vinyl face shield
- Elastic wrists
- 1 exhaust port/shroud
- Air tube inlet
- Attached sock boots with boot flap
- Suit is not gas/vapor tight

Sizes: S – 5XL  
Case Pack: 1



#### Encapsulated Suit C3T450 – Level B

- Rear entry
- Expanded back
- 48" zipper
- Double storm flap
- 20 mil Vinyl face shield
- Elastic wrists
- 2 exhaust ports/shroud
- Attached sock boots with boot flap
- Suit is not gas/vapor tight

Sizes: S – 5XL  
Case Pack: 1

### ChemMax® 3 Configurations



#### Jacket C3T250

- Collar
- Elastic wrists
- Double storm flap
- Hook and loop closure


Sizes: S - 5XL  
Case Pack: 6



#### Pant C3T320

- Elastic waist
- Elastic ankles

Sizes: M-4X  
Case Pack: 6



#### Hood Long Bib Style C3T716

- Long Bib Style
- 20 mil Vinyl lens
- 1" hook and loop side straps

Case Pack: 250



#### Boot Covers C3T740P

- Elastic top
- 17" high

Sizes: One size  
Case Pack: 12 pair

### ChemMax® 3 Physical Properties

Property	Test Method	Units	ChemMax® 3
Basis Weight	ASTM D3776	oz./sq. yd	4.5
Grab Tensile MD	ASTM D5034	pounds	58.7
Grab Tensile XD		pounds	42.2
Trapezoidal Tear MD	ASTM D5733	pounds	25.6
Trapezoidal Tear XD		pounds	19.8
Ball Burst	ASTM D751	pounds	54.5
Surface Resistance	EN1149	Ω	Pass

### Permeation Data for ASTM Recommended List of Chemicals for Evaluating Protective Clothing Materials (ASTM F1001)

Challenge Chemical	CAS Number	Physical State	ChemMax® 3
Acetone	67-64-1	Liquid	>480
Acetonitrile	75-05-8	Liquid	>480
Ammonia Gas	7664-41-7	Gas	>480
1,3-Butadiene Gas	106-99-0	Gas	>480
Carbon Disulfide	75-15-0	Liquid	178
Chlorine Gas	7782-50-5	Gas	>480
Dichloromethane	75-09-2	Liquid	>480
Diethylamine	109-89-7	Liquid	imm.
Dimethyl Formamide	68-12-2	Gas	>480
Ethyl Acetate	141-78-6	Liquid	>480
Ethylene Oxide Gas	75-21-8	Gas	>480
n-Hexane	110-54-3	Liquid	>480
Hydrogen Chloride Gas	7647-01-0	Gas	>480
Methanol	67-56-1	Liquid	>480
Methyl Chloride Gas	74-87-3	Gas	>480.
Nitrobenzene	98-95-3	Liquid	>480
Sodium Hydroxide, 50%	1310-73-2	Liquid	>480
Sulfuric Acid, 98%	7664-93-9	Liquid	>480
Tetrachloroethylene	127-18-4	Liquid	>480
Tetrahydrofuran	109-99-9	Liquid	320
Toluene	108-88-3	Liquid	>480

ND = None Detected

> = greater than

L = liquid

G = gas

Numbers reported are averages of samples tested by the ASTM F739 test method.

Sample results do vary and therefore averages for these results are reported.

#### Warnings:

1. ChemMax® 3 is not flame resistant and should not be used around heat, flame sparks, or in potentially flammable or explosive environments.
2. Garments made of ChemMax® 3 should have slip resistant or anti-slip materials on the outer surface of boots, shoe covers or other garment surfaces in conditions where slipping could occur.

**Note:** Chemical Resistance Data is in accordance with ASTM F-739 test method. Testing is performed on fabric samples only, not finished garments. Sources for all test data are independent laboratory conditions and not actual use conditions.

Powered By

**PermaSURE®**

# CHEMMAX<sup>®</sup> 4 PLUS

Superior, Advanced Chemical Protection.  
Now Supported by PermaSURE<sup>®</sup>

ChemMax<sup>®</sup> 4 Plus  
Applications

Hazardous Materials  
Response

Toxic Industrial Chemicals  
Petrochemical

Heat Sealed  
Seam



ChemMax 4 Plus is the next generation of ChemMax<sup>®</sup> 4 fabrics and provides a new gateway to extensive chemical data like you've never had before. ChemMax 4 Plus is superior, advanced chemical protection, and is at the top-of-the-line for chemical protective clothing. Constructed with a 6-layer protective system, it will stand up to the toughest and most hazardous chemical environments.

ChemMax 4 Plus products offer heat sealed seams with a range of configurations including coveralls with respirator-fit hoods and encapsulated suits, all compatible with the PermaSURE<sup>®</sup> Toxicity Risk Modeller.

## ChemMax<sup>®</sup> 4 Plus Encapsulated Configurations



**Level B Encapsulated Suit  
C4T400Y**

- Rear entry
  - Flat back
  - 48" zipper
  - Double storm flap
  - 20 mil Vinyl face shield
  - Elastic wrists
  - 1 exhaust port with shroud
  - Air tube inlet
  - Attached sock boots with boot flap
  - Suit is not gas/vapor tight
- Sizes: M – 4XL  
Case Pack: 3



**Level B Encapsulated Suit  
C4T450T – Tan  
C4T450Y – Yellow**

- Rear entry
  - Expanded back
  - 48" zipper
  - Double storm flap
  - 20 mil Vinyl face shield
  - Elastic wrists
  - 2 exhaust ports with shroud
  - Air tube inlet
  - Attached sock boots with boot flap
  - Suit is not gas/vapor tight
- Sizes: M – 4XL  
Case Pack: 3


### CHEMMAX 4 PLUS

## What's All The Fuss About Plus?!

Advanced Engineering, that's what!

ChemMax<sup>®</sup> 4 Plus has a chemical barrier that gives higher holdout times than our previous ChemMax<sup>®</sup> 4 material!

Lakeland's 6 Layer Protective System stands up to the toughest and most hazardous chemical environments!

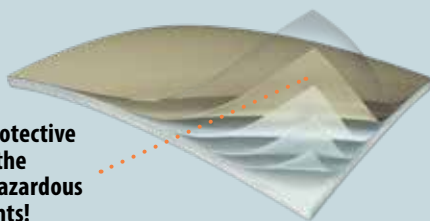

Available Colors: Yellow and Tan



**ChemMax® 4 Plus Configurations**



**Coverall  
C4T110T**

- Collar
- Storm Flap over Zipper
- Elastic Wrists and Ankles

Sizes: S – 5X  
Case Pack: 6



**Coverall  
C4T132T – Tan  
C4T132Y – Yellow**

- Respirator Fit Hood
- Storm Flap over zipper
- Elastic face, wrists and Ankles

Sizes: S – 5X  
Case Pack: 6



**Coverall  
C4T151T – Tan  
C4T151Y – Yellow**

- Respirator-fit hood
- Storm flap over zipper
- Elastic face and wrists
- Attached boots

Sizes: S – 5X  
Case Pack: 6



**Coverall  
C4T165T – Tan  
C4T165Y – Yellow**

- Attached respirator-fit hood
- Double storm flap
- Hook and loop closure
- Elastic face and wrists
- Attached boots with boot flaps


Sizes: S – 5X  
Case Pack: 6



**Coverall  
C4T166T**

- Respirator Fit Hood
- Double storm flap
- Hook and loop closure
- Elastic Wrists and Ankles


Sizes: S – 5X  
Case Pack: 6



**Hood Short Bib Style  
C4T714Y**

- 20 mil Vinyl lens

Sizes: One Size  
Case Pack: 6



**Boot Covers  
C4T740YP**

- Elastic top

Sizes: One Size  
Case Pack: 12 pair

**ChemMax® 4 Plus Physical Properties**

Property	Test Method	Units	ChemMax® 4 Plus
Basis Weight	ASTM D3776	oz./sq. yd	7.5
Grab Tensile MD	ASTM D5034	pounds	93.4
Grab Tensile XD		pounds	80.3
Trapezoidal Tear MD	ASTM D5733	pounds	24.4
Trapezoidal Tear XD		pounds	18.7
Ball Burst	ASTM D751	pounds	83
Surface Resistance	EN1149	Ω	Pass

**ChemMax® 4 Plus Permeation Testing - ASTM F1001**

Challenge Chemical	CAS Number	Physical State	ChemMax® 4 Plus
Acetone	67-64-1	Liquid	>480
Acetonitrile	75-05-8	Liquid	>480
Ammonia Gas	7664-41-7	Gas	>480
1,3-Butadiene Gas	106-99-0	Gas	>480
Carbon Disulfide	75-15-0	Liquid	>480
Chlorine Gas	7782-50-5	Gas	>480
Dichloromethane	75-09-2	Liquid	>480
Diethylamine	109-89-7	Liquid	>480
Dimethyl Formamide	68-12-2	Gas	>480
Ethyl Acetate	141-78-6	Liquid	>480
Ethylene Oxide Gas	75-21-8	Gas	>480
n-Hexane	110-54-3	Liquid	>480
Hydrogen Chloride Gas	7647-01-0	Gas	>480
Methanol	67-56-1	Liquid	>480
Methyl Chloride Gas	74-87-3	Gas	>480.
Nitrobenzene	98-95-3	Liquid	>480
Sodium hydroxide, 50%	1310-73-2	Liquid	>480
Sulfuric Acid, 98%	7664-93-9	Liquid	>480
Tetrachloroethylene	127-18-4	Liquid	>480
Tetrahydrofuran	109-99-9	Liquid	>480
Toluene	108-88-3	Liquid	>480

ND = None Detected | > = greater than | L = liquid | G = gas  
Numbers reported are averages of samples tested by the ASTM F739 test method. Sample results do vary and therefore averages for these results are reported.

**Warnings:**

1. ChemMax® 4 Plus is not flame resistant and should not be used around heat, flame sparks, or in potentially flammable or explosive environments.
2. Garments made of ChemMax® 4 Plus should have slip resistant or anti-slip materials on the outer surface of boots, shoe covers or other garment surfaces in conditions where slipping could occur.

**Note:** Chemical Resistance Data is in accordance with ASTM F-739 test method. Testing is performed on fabric samples only, not finished garments. Sources for all test data are independent laboratory conditions and not actual use conditions.

4 PLUS



# INTERCEPTOR® PLUS

## Interceptor® Plus Applications


HazMat Response

Hazardous Vapor Environments

Ammonia



Heat Sealed Seam



Heat Sealed Plus Seam

First Line Defense Against Extreme Chemical Hazards. Now Supported by PermaSURE®

Interceptor® Plus is the apex of Lakeland® Industries' chemical protective clothing line. Available in both Level A encapsulating, as well as non-encapsulating configurations, there is an Interceptor® Plus style for your needs be it gas, vapor, aerosol, liquids, harmful contaminants or particulate protection.

This next generation of Interceptor® fabric is now compatible with the PermaSURE® Toxicity Risk Modeller, giving you access to the most comprehensive chemical database in the industry.



*PTFE visor process permanently seals the visor into the suit with no sewing involved so that liquids can't penetrate the visor edge*

*PTFE outer layer on visor prevents impairment of vision due to chemical contact*

*Attached gloves include non-reversing Silver Shield® inner glove with Butyl outer glove*

*Available in CE Type 1 certified Level A as well as non-encapsulating configurations*



**Interceptor® Plus Configurations**



**INT640B  
INT640WB - Wide-View  
Face Shield**

Blue CE Type 1:EN943:2005  
Vapor tight (Level A) Deluxe  
Encapsulating Suit

- Fully encapsulated
- Front-entry
- Storage bag included

Available in wide-view  
face shield configuration as  
PS80640W.

Sizes: S – 5X  
Case Pack: 1



**INT650B  
INT650WB - Wide-View  
Face Shield**

Blue CE Type 1:EN943:2005  
Vapor tight (Level A) Deluxe  
Encapsulating Suit

- Fully encapsulated
- Rear-entry
- Storage bag included

Available in wide-view  
face shield configuration as  
PS80650W.

Sizes: S – 5X  
Case Pack: 1



**Interceptor Training Suit  
INT491B (Rear Entry)  
INT497B (Front Entry)**

Encapsulated front or rear  
entry expanded back training  
suit.

- 20 Mil Vinyl lens
- 48" non separator cloth  
zipper that zips from bottom  
to top
- Zipper is reinforced at top  
and bottom with webbing  
on the outer side
- Double storm flap
- Exhaust port on back right  
side of hood
- 1 exhaust port on left back  
side of body
- Sock boots
- Boot flaps sewn on
- Vinyl gloves sewn on
- Internal belt loops and  
assembled belt
- No hem on splash guard or  
dump valve covers.


**Training Use Only! Case Pack: 1**



**INT620B**

- Flat back front entry va-  
por-protective suit (Level A)
- Sealed seams on outside
- 48" zipper, double storm flap  
with hook and loop
- 2-layer faceshield (10 mil  
Teflon/40 mil Vinyl)
- Butyl gloves
- 2 exhaust valves
- Attached sock boots with  
boot flaps
- 1.5" waist belt with 3 belt  
loops sewn (inside) and  
sealed
- Storage bag included


Sizes: S – 5X  
Case Pack: 1



**Coverall  
INT165B**

- Attached respirator-fit hood
- Double storm flap
- Hook and loop closure
- Elastic face and wrists
- Attached boots with boot  
flaps

Sizes: S – 5X  
Case Pack: 6



**Coverall  
INT166B**

- Respirator Fit Hood
- Double Storm Flap with hook  
and loop closure
- Elastic Wrists / Ankles

Sizes: S – 5X  
Case Pack: 6

**Interceptor® Plus Physical Properties**

Physical Property	Test Method	Units	Test Results
Basis Weight	ASTM D3776	oz./sq. yd	11
Grab Tensile MD	ASTM D5034	lbs.	218.5 lbs.
Grab Tensile XD	ASTM D5034	lbs.	170.4 lbs.
Trapezoidal Tear MD	ASTM D5733	lbs.	34.7 lbs.
Trapezoidal Tear CD	ASTM D5733	lbs.	38.7 lbs.
Ball Burst	ASTM D3787	lbs.	250 lbs.

**Interceptor® Plus Permeation Testing - ASTM F1001**

Chemical Name	Physi- cal Phase	Normalized Breakthrough Time (min.)	CAS No.
Acetone	L	>480	67-64-1
Acetonitrile	L	>480	75-05-8
Ammonia (gas)	G	>480	7664-41-7
1,3- Butadiene	G	>480	106-99-0
Carbon disulfide	L	>480	75-15-0
Chlorine gas	G	>480	7782-50-5
Dichloromethane	L	>480	75-09-2
Diethylamine	L	>480	109-89-7
N,N-Dimethylforma- mide	L	>480	68-12-2
Ethyl acetate	L	>480	141-78-6
Ethylene oxide	G	>480	75-21-8
n-Hexane	L	>480	110-54-3
Hydrogen chloride	G	>480	7647-01-0
Methanol	L	>480	67-56-1
Methyl chloride	G	>480	74-87-3
Nitrobenzene	L	>480	98-95-3
Sodium hydroxide, 50%	L	>480	1310-73-2
Sulfuric acid (conc.)	L	>480	7664-93-9
Tetrachloroethylene	L	>480	127-18-4
Tetrahydrofuran	L	>480	109-99-9
Toluene	L	>480	108-88-3

> = greater than, L = liquid, G = gas

**Note:** Chemical Resistance Data is in accordance with ASTM F-739 test method. Testing is performed on fabric samples only, not finished garments. Sources for all test data are independent laboratory conditions and not actual use conditions.

PLUS



# Chemical Suit Options and Accessories



## Lakeland® ChemMax® Push-Lock® Glove System

**Quickly Install Or Remove Chemical Gloves On Lakeland® ChemMax® or Interceptor® Plus Suits!**

The Lakeland® ChemMax® **Push-Lock® Glove System** is a simple method of attaching most types of chemical gloves to the garment sleeve through the use of two concentric rings. The system has been fully tested to a CE Type 3 Jet Test and is certified for use with all Lakeland® ChemMax® and Interceptor® Plus chemical protective coveralls. Lakeland's Push-Lock® Glove System is reusable and may need decontamination before reuse.

Lakeland® item number JFR2 contains one set of Push-Lock® rings, and will secure one pair of gloves to any Lakeland® chemical protective coverall.



## Level A Test Kit

Maintain your encapsulated suits with this easy to use test kit. Kit features an easy-to-read Magnehelic pressure gauge, digital timer, sturdy brass and steel fittings, hoses and connectors in a waterproof case. Complete instructions included.

**Part No. PTK10** – Level A Test Kit

**Part No. PTK17** – Adapters for DuPont test kit to test Lakeland® suits.

**Part No. PTK220** – International Universal test kit. Convertible to 220V and 110V.

## Options for Chemical Suits

Part Number	Description
T-LEGBAND	Reflective triple trim 1.5" L/Y around legs
T-ARMBAND	Reflective triple trim 1.5" L/Y around arms
A1	Add 1 side air tube
G5	Seal-tight glove system
G6	North Silvershield® gloves heat sealed to suit
G12	Push-Fit glove system includes 2 inserts and 2 rings
GA	Glove O-ring and clamp assembly
I1	Inspect, retest, and re-certify Level A suit*
I2	Install customer supplied pass-thru
P1	Scott® pass-thru with Hanson® fittings (NFPA approved on ensembles)
P2	Scott® pass-thru with Schrader® fittings (NFPA approved on ensembles)
P3	Standard pass-thru (not NIOSH approved)
P4	Survivair® pass-thru with Hanson® fittings (NFPA approved on ensembles)
P5	Survivair® pass-thru with Schrader® fittings (NFPA approved on ensembles)
P6	Draegar pass-thru with Hanson® fittings (NFPA approved on ensembles)
P7	Draegar pass-thru with Foster® fittings (NFPA approved on ensembles)

\*Recertification of Level A Suits - Suits must NEVER have been used in an incident, for training, or exposed to ANY contaminants. Contact Customer Service prior to return for authorization at 1-800-645-9291.

## Accessories for Interceptor Plus Level A Suits

Part Number	Description	Part Number	Description
RM00389	Vinyl glove ring	V14	Exhaust valve
RM00391	Vinyl glove insert	PTK17	Adapter for DuPont test kit to pressure test Lakeland® Level A suits
RM00372	25 mil Butyl gloves	BG750	Level A storage bag
RM00375	17 mil Butyl Glove	BG760	Lakeland® Utility Bag (Small)
RM00376	North Silvershield gloves	CV55	Lakeland® Phase-Change Cooling Vest includes phase change inserts (One Size) Poly Cotton Outershell
JFR2	Push-Fit glove system includes 2 inserts and 2 rings	CV56	Lakeland® Phase-Change Cooling Vest includes phase change inserts (One Size) Banox Outershell
45P	Onguard EZ Fit Hazmax® Boots Sized S-XL (NFPA Certified)	CV58	Lakeland® Phase-Change Cooling Vest includes phase change inserts (One Size) Nomex® Outershell
46P	Tingley® Hazmat Boots Sized 7-13 (NFPA Certified)	CV57	Lakeland® Phase change inserts - set of 4 replacement packs
PTK10	Test kit for Level A suit		
PTK220	Universal Pressure test kit with blower (will test Lakeland®, DuPont & Kappler Level A suits)		

### TRAINING SUITS

#### ChemMax® 1 Encapsulated Training Suit C55450RE

ChemMax® 1 Encapsulated Training Suit, back entry, expanded back, Mylar® lens, bound seams. **Training Use Only!**

**Case Pack: 6**



### TRAINING SUITS

#### Encapsulated Nylon Training Suit 95494 (Rear Entry)

#### 95493 (Front Entry)

Encapsulated Nylon Training Suit, expanded back, sewn seams, 20 mil Vinyl faceshield, single storm flap, butyl gloves, 2 exhaust ports, attached sock boots.

**Training Use Only! Case Pack: 1**



# Phase Change Cool Vest

**Wear a Cool Vest underneath a chemical protective suit and stay cool!**



CV55



CV56



CV58



CV57 Replacement Inserts

## Get Comfortable with a Phase Change Cool Vest® from Lakeland® Industries

Working in HazMat/Protective suits can make anyone lose their cool. The Phase Change Cool Vests® worn under these suits give the user increased comfort. In fact, it creates a climate of 58° F./14° C for up to three hours (depending on work environment).

### How Do They Work?

These vests create a cooling energy from a unique Phase Change Material that is mechanically sealed in durable inserts. After freezing the inserts in ice water or a refrigerator for just 30 minutes, the vests deliver the constant cool temperature.

Unlike frozen water or gel products, our Phase Change Material maintains a consistent temperature of 58° F./14° C during its transition from a solid to a liquid. This ensures that the wearer receives a constant cooling temperature throughout the entire two to three-hour period.

### Safe and Effective

At Lakeland® Industries, we are very concerned about the materials we use in our products. Our Phase Change Material is made of a proprietary blend of alkanes with unique thermal properties. The inserts are non-toxic and non-flammable and can be used over and over again. To achieve continuous cooling, additional insert sets are available so the user can rotate each set.

### Comfort is Key

Designed for comfort, these vests are washable and lightweight. The built-in side and shoulder adjustments provide a better fit. To suit a variety of users, the vests come in many styles, sizes and fabrics, including polycotton and Nomex®.

If you want a safe and effective way to keep your workers cool, get the Phase Change Cool Vest®, available at Lakeland®.

Style CV55 – Polycotton Cool Vest® with Phase Change inserts. **Case Pack:** 1

Style CV58 – Nomex® Cool Vest® with Phase Change inserts. **Case Pack:** 1

Style CV56 – Banox (FR Cotton) with Phase Change inserts. **Case Pack:** 1

Style CV57 – Set of 4 Cool Vest replacement inserts. **Case Pack:** 1

**58° F / 14° C  
for up to  
3 Hours!**



**STAY COOL – NOT FROZEN!**



FR/AR Clothing



Heat Protective Apparel



Fire Fighter Turnout Gear



Dual Certified Gear

## Your First Line of Defense in Protective Apparel

  
Protect Your People®

In the USA

Toll Free: 800-645-9291

Voice: 256-350-3873

Fax: 256-350-0773

Email: [info@lakeland.com](mailto:info@lakeland.com)



FR/AR Hi-Visibility



Hand and Arm Protection



Wildland Gear



FR/AR Rainwear