

Fig. 776

Brace Clamp

Size Range: Service Pipe: 2½" through 8" Sch. 10 and Sch. 40 IPS
 Service Pipe: 2½" through 6" FM Approved Flow Pipe
 Brace Pipe: 1" or 1¼" Sch. 40 IPS

Material: Carbon steel

Finish: Plain or Galvanized

Service: Used to rigidly brace piping systems subjected to sway and seismic disturbances. Pipe clamp component of Anvil's 700 series sway brace assembly. Utilized only as a lateral brace clamp.

Approvals: FM Approved (FM 1950:2010). Complies with seismic bracing requirements of NFPA-13. Office of Statewide Health Planning and Development (OSHPD) State of California approved.


Features:

- Used to brace schedules 10 IPS, 40 IPS, and Flow pipe
- Field adjustable design requires no threading of bracing pipe
- Can be used as a component of a four-way brace support
- Brace clamp design for installation of brace pipe above or below horizontal service pipe.

Installation Instructions:

1. Installation of this component must be a minimum of 6" from any pipe joint, so that any deformation does not affect the pipe joint.
2. Minimum brace pipe extension 1" beyond clamp stirrup.
3. Tighten hex bolt until heads bottom out on surface

Ordering: Specify service pipe diameter x brace pipe diameter, figure number, name and finish.

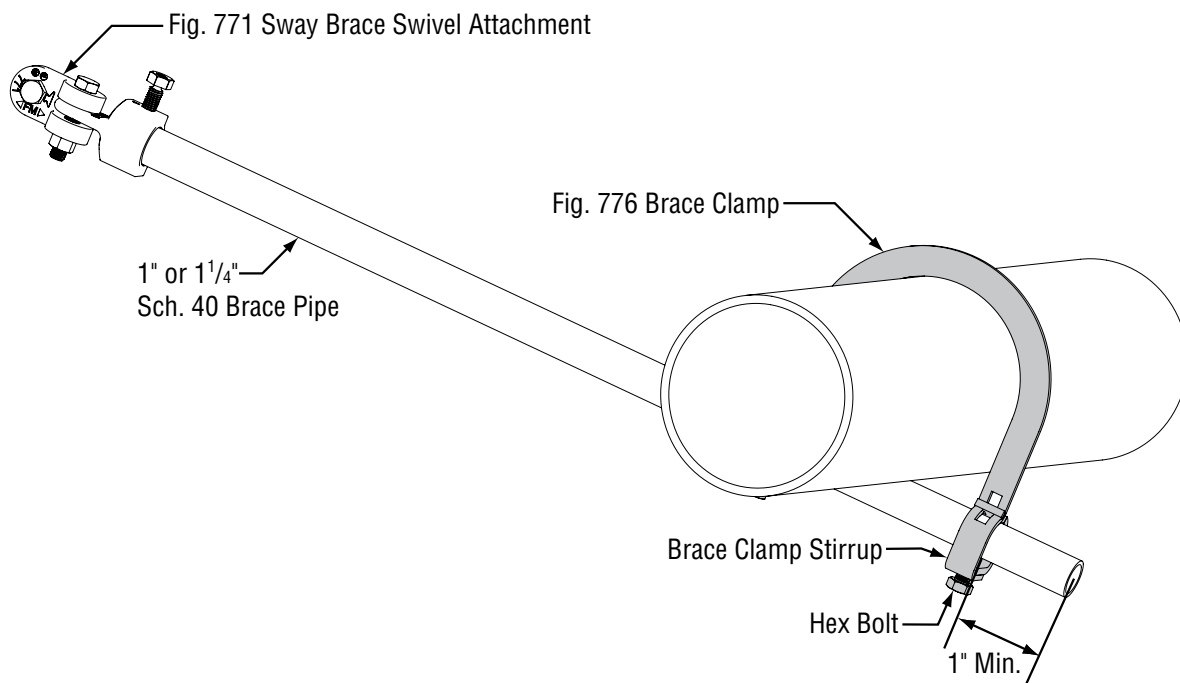

**Typical Assembly
 (Brace Pipe Below Service Pipe)**

Fig. 776

Brace Clamp (cont.)

FIG. 776 FM MAX LOAD: LOADS (LBS) • DIMENSIONS (IN) • ANGLES (DEGREES)			
Service Pipe Size (1" or 1¼" Brace Pipe)	Brace Angle***	FM Max Load** (Horizontal)	
		Sch. 10 Sch. 40	Flow Pipe
2½	30-44	620	600
	45-59	880	850
	60-74	1000	1000
	75-90	1200	1100
3	30-44	620	520
	45-59	880	740
	60-74	1000	910
	75-90	1200	1000
4	30-44	690	520
	45-59	980	740
	60-74	1200	910
	75-90	1300	1000
5	30-44	670	520
	45-59	940	740
	60-74	1100	910
	75-90	1200	1000
6	30-44	670	560
	45-59	940	790
	60-74	1100	970
	75-90	1200	1000
8	30-44	540	–
	45-59	770	–
	60-74	940	–
	75-90	1000	–

* See FM Approvals for approved flow pipe.

** The allowable FM approved capacity of brace subassemblies have been determined by resolving the load rating to the horizontal direction and dividing by a safety factor of 1.5 to allow the values to be used directly for Allowable Stress Design. For Load Resistance Factor Design (LRFD) capacities, the above values will need to be multiplied by 1.5.

*** Brace Pipe Angles are determined from vertical.

FIG. 776: WEIGHT (LBS) • DIMENSIONS (IN)		
Service Pipe Size	Weight	
	1" Brace Pipe	1¼" Brace Pipe
2½	1.26	1.50
3	1.44	1.58
4	1.55	1.68
5	1.66	1.87
6	1.74	1.95
8	1.98	2.29

See page 14 for notes on sway brace-seismic components concerning – installation, performance and warranty.