

Specifications

Product name and Model number	Inada Chair i.2 HCP-i2A	
Power supply	AC120V	
Power consumption	210W	
Power frequency	60Hz	
Rating time	30 minutes	
Upper body	Kneading speed	6 speeds
	Tapping speed	4 speeds
	Width between rollers	3 levels (Narrow, Medium, Wide)
	Back stroke range	Approx. 23 inches (in the case of Partial rollers, automatic repetition will be performed in the range of approx. 6 inches)
Preset programs	5 Healthcare programs / 3 Well-Being programs (with Automatic Massage Point Detection System)	
Manual selection	10 Upper body modes / 3 Lower body modes	
Air massage	Legs/Seat (High, Medium, Low)	
Auto timer	Approx. 15 minutes (varies in the case of Preset Programs)	
Vibration function	Back • Seat (High, Low) / Armrest (1 setting)	
Footrest adjustment range	Adjustable range: Approx. 4 inches	
Reclining angle	Power recline to any position between approx. 120 and 170 degrees	
Chair dimensions	Upright 29"W×47"L×45"H, Reclined 29"W×68"L×29"H	
Weight	Approx. 167 lbs	
Upholstery	Synthetic leather	
Accessories	Remote control, Remote control stand	

Specifications

FAMILY INADA INC.

US Headquarters: 7 West 56th Street, New York, NY 10019

Toll-free Customer Service: 1-877-22-INADA(1-877-224-6232)

Technical assistance: 10:00 - 17:00 (Eastern Standard Time) / Closed: Saturday, Sunday, and Public Holidays

<http://www.inada-chair.com>


M-6210601

FAMILY inada chair i.2

HCP-i2A

Operating Manual

Warranty card provided separately

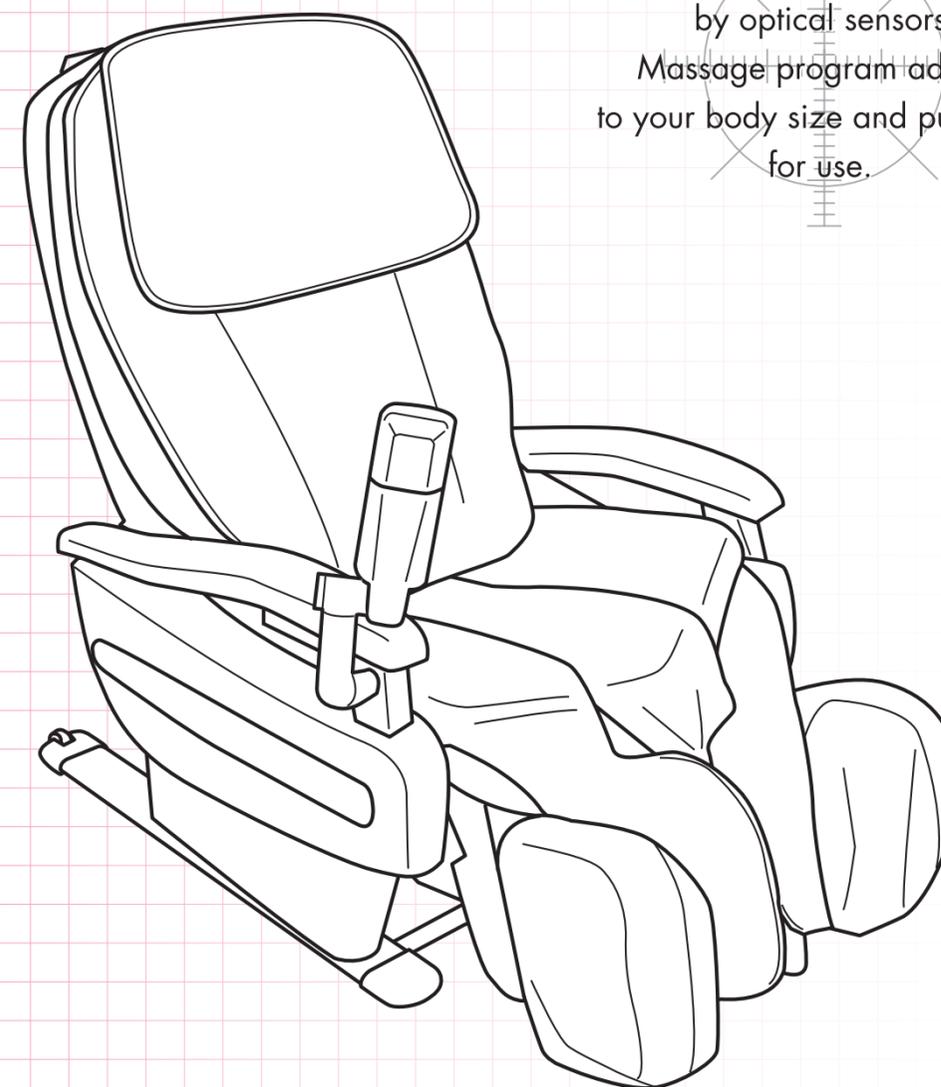

Massage points detected automatically
by optical sensors.
Massage program adapts
to your body size and purposes
for use.

For U.S. Model Only

- Please read this Operating Manual before use.
- Remember to keep this Operating Manual in a place easily accessible to persons using the unit.



Greetings

Thank you for purchasing the Inada Chair.

FAMILY INADA has expanded its business specializing in developing of massage chairs with the sincere wish for everyone's better health and well-being, ever since its establishment.

The Inada Chair that you have purchased is the culmination of our best efforts. We have conceived and implemented several new and unique functions into the Inada Chair that other massage chairs are unable to offer. We deliver you the Inada Chair with the utmost confidence, from the 'Birthplace of Massage Chairs' --- Japan.

After using the Inada Chair, we are sure that you will love and see it as one of the best partners for your health management, providing you with the best and most professional-like massage techniques.

FAMILY INADA INC. is a U.S. subsidiary of Japan's best-selling luxury massage chair manufacturer, FAMILY CO., LTD.

CONTENTS

● Features	2
● Safety Precautions	3
● Parts Descriptions	7
● Before Use	9
● Massage Types And Features	11
● Preset Programs ① /Massage Types	12
● Preset Programs ② /Operation	13
● Manual Selection Modes ①/Liquid Crystal Display·Explanation Of Movements	15
● Manual Selection Modes ②/Operation	17
● Cleaning And Storage	19
● Troubleshooting Guide	21
● Service	22
● Specifications	Back Page

Features

Provides a hybrid massage function using roller pressure and air pressure:

Four rollers provide professional-like techniques for massaging the upper half of the body.

Ten air cells provide a delicate massage for the lower half of the body.

Equipped with vibration systems for your back, seat and arms. (Armrest vibration will automatically stop after approx. five minutes.)

The footrest is adjustable in length to cater to the height proportion of each user.

Various massage courses / programs:

- Five Healthcare programs.
- Three Well-Being programs.
- Automatic detection of massage points.

Power recline to any position between 120 and 170 degrees (relative to the floor).

A remote control with a liquid crystal display that gives you comprehensive information on the operation of the chair.

Equipped with a pneumatic device for raising/lowering the footrest (available for both independent operation and linked operation with the power recline).

A stand to hold and store the remote control.

Equipped with an automatic timer function for safety.

Safety Precautions

Please be sure that you have read these SAFETY PRECAUTIONS carefully before using the massage chair for the first time. This Operating Manual contains important information about using the massage chair safely and correctly, avoiding possible damage to property or injury to persons using the unit, as well as others. Make sure you understand the display warnings and symbols described below that appear throughout this manual, and adhere to all precautions when using the massage chair. Descriptions of each part of the unit are given on pages 6-8.

Display Warnings

 Warning	This action could result in death or serious injury.
 Caution	This action could result in personal injury or damage to property.

Warning Symbols

	Prohibited: This action is prohibited.
	Required Action: This action is required.

Remember to keep this Operating Manual in a place easily accessible to persons using the unit.

Safety Precautions: Installation

 Caution	
 Prohibited	<ul style="list-style-type: none"> Do not install the chair in an area of high humidity such as a bathroom or sauna. <ul style="list-style-type: none"> → Could result in electric shock or damage to the chair.
 Required Action	<ul style="list-style-type: none"> Chair should only be installed on a flat, level surface. <ul style="list-style-type: none"> → Unit could tip over, resulting in accident or injury, if placed on uneven surfaces.

Safety Precautions: Before Use

 Warning	
 Prohibited	<ul style="list-style-type: none"> The following persons must not use this massage chair: <ul style="list-style-type: none"> Persons with serious circulatory problems such as varicose veins, thrombosis, etc. Persons who have been advised by their doctor not to use the chair. Persons with suspected acute neck sprain (whiplash injury).
 Required Action	<ul style="list-style-type: none"> Persons with any of the following conditions must seek medical advice before using the chair: <ul style="list-style-type: none"> Misuse could result in injury or be harmful to health. Serious heart problem Serious diabetes Serious osteoporosis High fever Persons planning to use the chair to treat a specific ailment or parts of the body that have already undergone some kind of treatment Malignant tumor Persons under bed rest orders Pregnancy or suspected pregnancy Serious skin condition Sensory impairment Persons with pacemakers or other electronic medical devices Acute gastro-intestinal complaints (gastritis, hepatitis, enteritis) Persons under a doctor's care, or those experiencing unusual physical discomfort Joint dysfunction such as rheumatism, hammer toe, and gout Persons with spinal abnormalities due to past injury or ailment, persons with curvature of the spine Persons with a history of vertigo, fainting, or tinnitus
 Prohibited	<ul style="list-style-type: none"> Do not use the chair with anything other than a 120 V power source. <ul style="list-style-type: none"> → May result in fire or electric shock. Do not use with any type of transformer device. <ul style="list-style-type: none"> → May result in injury or electric shock. Do not use if the power cord or outlet is damaged or if the power outlet is loose. <ul style="list-style-type: none"> → May result in electric shock, short circuit, or combustion. Before each use, check for holes or tears in the chair fabric (lift back pad). Do not use the chair if there are any holes or tears in the chair fabric or upholstery. If on, turn off the chair immediately and unplug the chair from the wall. Contact the vendor (see back cover) for assistance. <ul style="list-style-type: none"> → Using the chair with holes or tears in the fabric of the main body could result in injury or electric shock.
 Caution	
 Required Action	<ul style="list-style-type: none"> Be sure that the main POWER switch on the chair is set to OFF before plugging the power cord into the wall outlet. <ul style="list-style-type: none"> → Failure to do so could result in injury or electric shock. Be sure that the plugs on the power cord are inserted fully into the connector and outlet. <ul style="list-style-type: none"> → Failure to do so could result in electric shock, short circuit, or combustion. Before using the chair for the first time, turn on all the switches in order as indicated in this manual to check that the chair is operating properly. When using the chair for the first time, be sure the reclining seat back is in its fully upright position and start off with a lighter massage. You can then recline the seat back gradually to increase the pressure of the massage to the most desirable level. <ul style="list-style-type: none"> → Starting with a deep massage can result in injury. Elderly people and persons with weak bones should be especially careful when selecting massage intensity. For safety purposes, it is best to lower yourself slowly into the chair as you check that the spinal rollers are in the correct position at either side of the spine, so that the backbone lies comfortably between the rollers without having to turn or twist the body. If you have not used the chair for a period of time, please read this Operating Manual again to ensure correct usage.
 Prohibited	<ul style="list-style-type: none"> Do not use the chair in any way not prescribed by this Operating Manual. Do not use the chair together with any other therapeutic device or electric blanket. <ul style="list-style-type: none"> → May result in injury or have a negative effect on health. Do not move the chair while someone is in it. <ul style="list-style-type: none"> → May result in accident or injury if the chair tips over.

Safety Precautions

Safety Precautions: While Using The Chair

Warning	
 Prohibited	<ul style="list-style-type: none"> ● Do not wrap the power cord or the remote control cord around the chair, or place the chair on top of either cord. Do not scratch, tear, treat, unduly twist, stretch or bend the power cord or the remote control cord. →Cord may fray or tear, resulting in fire or electric shock. ● Do not spill or drop water on the chair or the remote control. →May result in electric shock, short circuit, or combustion. ● Children, persons who are unable to communicate, and/or persons who are physically challenged should not be allowed to use the chair. Do not allow children or pets to play near the chair (especially behind the reclining seat back or under the seat or footrest), climb on the chair or sit in the chair. →May result in injury or accident. ● Do not use if the chair fabric or upholstery is torn. Unplug the power cord from the wall outlet. →May result in injury, accident, or electric shock. Call the vendor (see back cover) for assistance. ● Do not use the chair with a wet body or wet hands. →May result in injury, accident, or electric shock. ● Do not place fingers or objects in between the footrest position lever and the footrest, or in between the footrest and the chair. Do not release hands while lifting the footrest by hand until it is in the proper position.
 Required Action	<ul style="list-style-type: none"> ● Be sure that there are no children, pets or others in the way when reclining the seat back, and raising or lowering the footrest. Be careful when reclining the seat back not to catch any parts of the body or objects behind the seat back.
Caution	
 Prohibited	<ul style="list-style-type: none"> ● Do not use the chair without clothes on. ● Do not use the chair for purposes other than massage, or other than the ordinary uses of a chair. →May result in accident or injury. ● Do not use the chair to massage the head, chest, stomach, or joints (knees, elbow). Do not place hands, feet, or arms in between the rollers. →May result in nausea or injury. Place a soft towel behind your neck if you want to avoid intense stimulation of the area. ● Do not place hands or feet on the roller tracks or on the space between the seat back and the seat or into moving parts. Do not use the chair while wearing hair accessories. →May result in injury. ● Do not place anything other than the calves on the footrest. →May result in injury. ● Do not operate or leave the massage chair operating when there is no one in it. →May result in accident or injury.
 Required Action	<ul style="list-style-type: none"> ● In an emergency, or if there is any sudden malfunction, push the STOP button on the remote control to make the chair stop immediately. ● If you begin to experience marked pain or other unusual physical discomfort while using the chair, seek medical advice immediately and discontinue use of the chair. ● Be sure to keep the back pad in place during massage. Do not use the chair without the back pad. →May result in injury.

Caution	
 Required Action	<ul style="list-style-type: none"> ● Keep massage sessions to no more than 15 minutes in length. Limit focused massage of any particular area on the body to no more than 5 minutes. →Continual use for extended periods of time can result in over-stimulation, having the opposite of the desired effect, or even injury. Aim to have no more than 30 minutes total massage time per day. ● Do not allow yourself to fall asleep in the chair during a massage. →May result in injury. ● If your legs or feet fall out of the footrest during the air massage, do not try to force them back in. →Undue force on the chair may damage it.
 Unplug	<ul style="list-style-type: none"> ● If there is a power outage or the possibility of a power outage, stop the chair immediately and turn the main POWER switch to OFF. Unplug the chair from the wall outlet. →Accident or injury could result if the chair is still in operating mode when power resumes. ● If there is a threat of lightning, stop the chair immediately and turn the main POWER switch to OFF. Unplug the chair from the wall outlet. ● If the chair does not start, or if there is any type of malfunction, to prevent accidents, it is best to stop the chair immediately and turn the main POWER switch to OFF. Unplug the chair from the wall outlet. Contact the vendor (see back cover) for assistance regarding repairs or maintenance. →Electric shock or fire caused by a short circuit could result if the chair is left plugged in.


Safety Precautions: After Use or When Not in Use

Caution	
 Required Action	<ul style="list-style-type: none"> ● Make sure to turn the main POWER switch to OFF after every use, and to unplug the chair from the wall outlet. →Accident or injury could result if children or pets try to play with or on the chair. ● Be sure to return the reclining seat back to the upright position and lower the footrest completely after using the chair. ● Wipe the chair off after every use, and store your chair in a place that is relatively dry. ● Do not place objects on the seat, reclining seat back, footrest or armrest.
 Unplug	<ul style="list-style-type: none"> ● Do not pull on the cord to unplug the chair from the wall outlet; be sure to grasp the plug firmly when unplugging. →Electric shock or fire caused by a short circuit could result. ● When cleaning or caring for your chair, be sure to unplug the chair from the wall outlet first. Do not touch the plug with wet hands. ● If the chair will not be used for a time, be sure to unplug it from the wall outlet. →Dust and moisture can cause electrical insulation to deteriorate, resulting in possible electric shock, short circuit, or fire.

Other Safety Precautions

Warning	
 Prohibited	<ul style="list-style-type: none"> ● Do not stand on the chair. Do not sit on any part of the chair other than the seat. →Personal injury or damage to the chair could occur. ● Do not stand or place objects on the control box. ● Do not place fingers or foreign objects in the special option port on the back of the chair.
 Do Not Disassemble	<ul style="list-style-type: none"> ● Do not modify the chair. Repairs or disassembly may not be performed by anyone other than an authorized serviceperson. →Could result in fire, electric shock, or injury. Contact the vendor (see back cover) for repairs.
Caution	
 Required Action	<ul style="list-style-type: none"> ● If you lend, sell, or otherwise transfer the chair to another person, be sure to include this Operating Manual.

Parts Descriptions

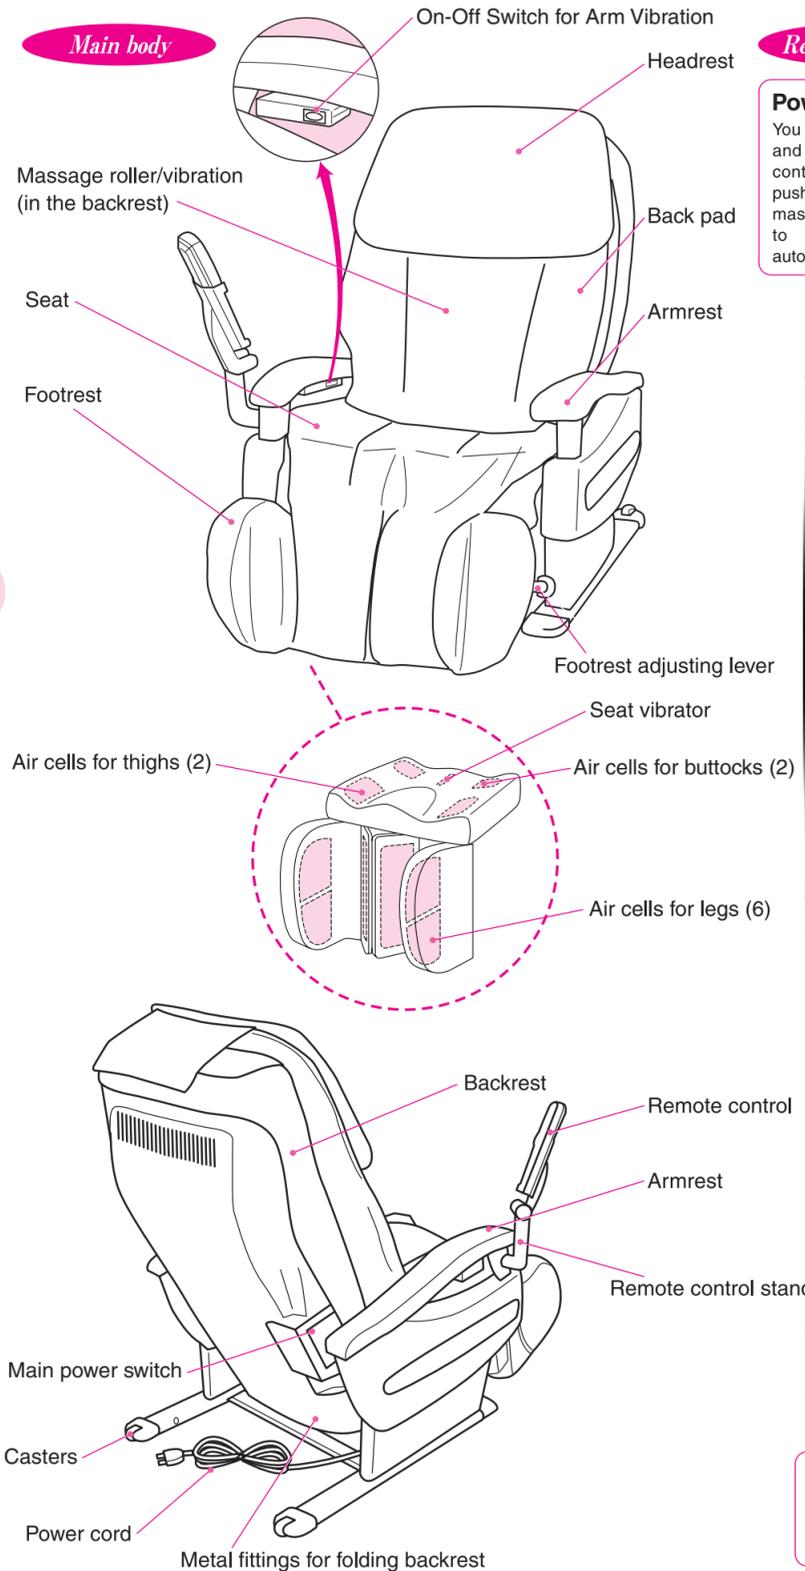

Remote control

Power button
You can turn the power on and off using the remote control. If this button is pushed during operation, the massage rollers will return to the starting position automatically.

STOP button
Use this button to shut the chair off immediately in case of emergency or if there is some malfunction during the operation of the chair.

Liquid crystal display (small)
Displays the operation being performed. See the figure to the right.

Liquid crystal display (large)
Displays the selected program, current points being massaged, and time remaining. See the figure to the right.

Shoulder position fine-adjustment
Five shoulder kneading cycles at the position detected by the optical sensor during auto search. If necessary, fine adjust the position using the UP and DOWN buttons. (For preset programs only)

Power reclining
Adjusts the reclining angle.

Healthcare Programs
Five programs are available.
1. Full body relief
2. Stiff shoulders
3. Lower back tension
4. Legs & hips fatigue
5. Shiatsu

External panel
See the internal buttons layout shown to the right.

Cancel 'Back Vibration'
Cancels the back vibrating operation in the automatic operation mode.

Well-Being Programs
Three programs are available:
1. Morning
2. Nighttime
3. Seat



Footrest buttons
You can adjust the angle of the footrest using the UP and DOWN buttons.


Liquid crystal display (small)

- Displays the current operation using text or graphics.
- For details of the display, see page 17 and 18.



Liquid crystal display (large)

- Shiatsu Points (indicator)**
 - Shiatsu Points (back)**
 - Shiatsu Points (seat)**
 - Shiatsu Points (legs)**
- The points being massaged are lit or blink.

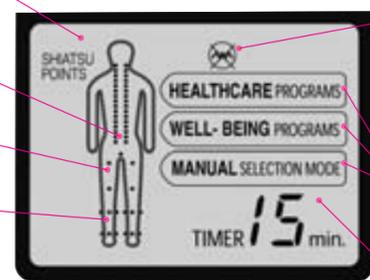

Back vibration cancellation
During an automatic program, pressing the Back vibration cancellation button will light the indicator and pressing the button again will turn off the indicator.

Program indicator

Timer
Displays the time remaining for the current program.

Internal buttons layout

Power reclining

Footrest buttons

Manual Selection Mode
Kneading, Human Touch, Double-kneading, Kneading & Tapping, Rhythm Shiatsu (1 and 2), Tapping (1 and 2) and Rolling (Partial and Whole massage)

Width adjustment buttons
Adjusts the width between the right and left massage points for Rhythm Shiatsu (1), Tapping (1 and 2), rolling (Partial and Whole massage) and Back vibration.



Back/seat vibration
Two options: Back or Seat vibration.

Speed adjustment
Adjusts the speed of Kneading, Tapping (1), and Kneading & Tapping operations.

Roller vertical position
UP / DOWN-Use these buttons to adjust the vertical position of the rollers.

Lower body button
Low-medium-high buttons: Use these buttons to adjust the intensity of the air massage, legs or seat separately or legs and seat together. Select one of these buttons to massage your lower body only.

Warning Prohibited Do not allow the remote control to get wet, and do not perform any operation with wet hands, in order to prevent electric shock or fire.


Caution: ● To prevent damage and malfunction, do not sit on the remote control. Do not step on or place any heavy objects on the remote control. Do not pull on the remote control wire.
● To prevent damage to the remote control, do not use sharp or hard objects to press the buttons on the control.

Before Use

- This chair is delivered with the backrest folded down. Before use, raise the backrest until a click is heard.

Space requirements

- Allow sufficient space for reclining.
- Allow at least 20 inches behind the chair for the backrest to be fully reclined.
- Allow at least 12 inches in front of the chair for full extension of the footrest.

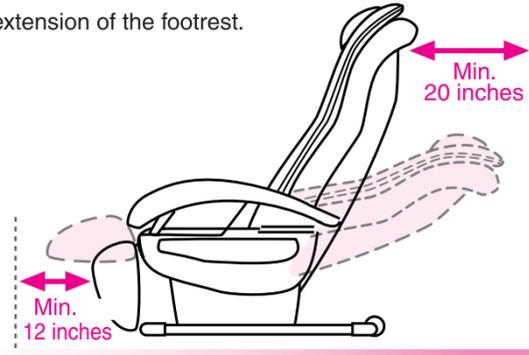


- Do not expose the chair to sudden changes in temperature. If the room where the chair is to be used is cold, turn the heat up slowly. If the chair is to be moved from a cold place into a heated room, wait one hour before using the chair.

→ Condensation can occur in the moving parts of the chair, which may compromise performance.

How to fold down the backrest

- By raising up the metal fittings for folding, the backrest can be folded down easily.

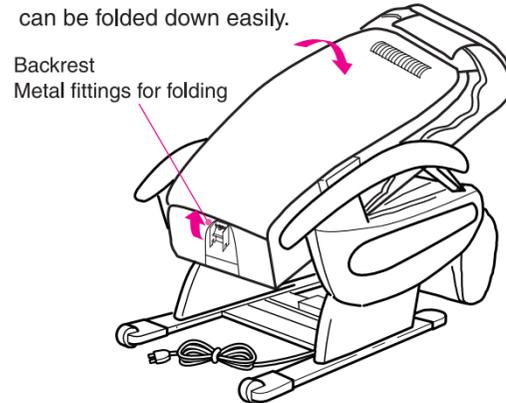


Caution

- Place the chair on a carpet to protect the floor surface and to prevent noise when operating.
- Place the chair down carefully when putting it on the floor in order to prevent scratches. It is heavy.
- Place the chair at least 3 feet away from a TV, radio, or other AV equipment. It may cause noise in the equipment.

How to attach the stand for the remote control

Attach the stand to the right armrest of main body using the screw included, as shown in the figure.

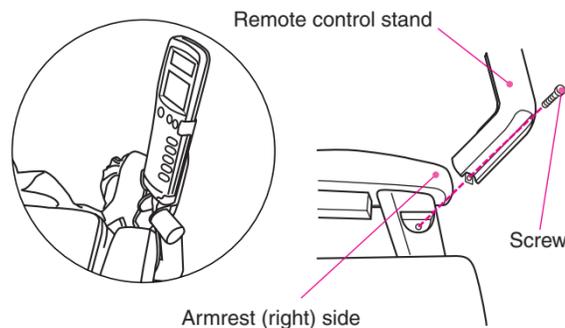

Power on


1. Connect the power plug to a wall receptacle (socket).
2. The main power switch is on the right side of the backrest. Turn the power on and the display on the remote control will light up.

*Before connecting the plug to the wall receptacle, make sure that the main power switch is in the OFF position.

*If the massage rollers are in mid-motion when the power is turned off, they will automatically return to the starting position.

Check the fabric

As shown in the figure, raise the back pad and make sure that the cover of the main body is not torn.

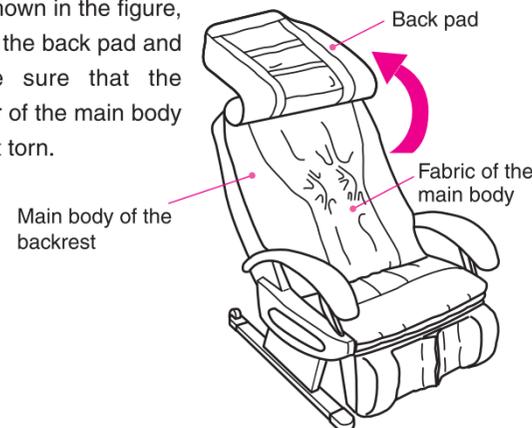

Warning

Before each use, check for holes or tears in the chair fabric (lift back pad). Do not use the chair if there are any holes or tears in the chair fabric or upholstery.

- **Prohibited** Disconnect the plug and consult the vendor immediately.
 - Using the chair with holes or tears in the chair fabric could result in injury or electric shock.

How to sit in the chair

Make sure the footrest is down. When the chair power is off, the rollers are normally drawn back into the left and right sides of the upper part of the backrest (storage position). For safety reasons, first check the position of the rollers. If they are in any position other than the storage position, turn the main POWER switch on before sitting down to allow the rollers to return to the storage position. Then sit down slowly with your back centered in the backrest.


Warning

- **Required Action** Do not sit or step on the footrest when it is raised, as this could result in injury, malfunction and accidents.

How to use the power recline

- **Lowering the backrest:** Press and hold the reclining button labeled "DOWN" until the desired angle is obtained.
- **Raising the backrest:** Press and hold the reclining button labeled "UP" until the desired angle is obtained.

Reclining buttons

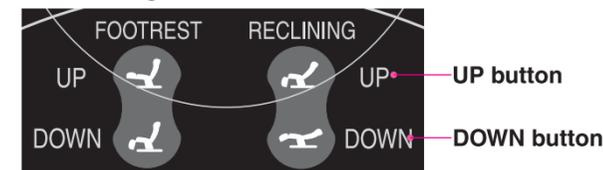


Warning

- **Required Action** When reclining, make sure that nothing is behind the backrest.
- When reclining or lowering the footrest, always be sure that there are no persons, pets or obstructions around.

How to adjust the footrest

While sitting in the chair with the footrest up, pull the lever up toward the footrest. While the lever is up, you can adjust the footrest so that your calves are resting comfortably on it.

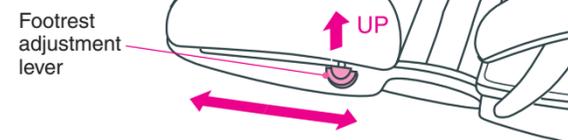

Note: The reclining and footrest operating functions are active by adjusting the UP/DOWN buttons even if the remote control is turned off.


Warning

- **Prohibited** Make sure that your fingers or any other objects are not caught between the footrest and footrest adjustment lever to avoid injury and/or accident.
- Do not let go of the footrest suddenly after putting it up.

How to adjust angle of the footrest

- **Raising the footrest:** Press and hold the UP button until the footrest reaches the desired angle.
- **Lowering the footrest:** Press and hold the DOWN button until the footrest reaches the desired angle.

Footrest buttons

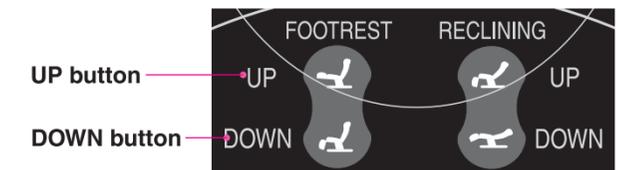

Warning

- **Prohibited** When lowering the footrest, make sure that nothing is caught between the seat and footrest.

After Use

Turn off the main power switch and be sure to disconnect the plug from the socket.

Caution

- The auto timer function will automatically stop the chair. However, you should be familiar with how to manually turn off the power after use to prevent an accidental start of the chair.
- To avoid accidents, turn off the power and disconnect the power plug.

Massage Types And Features

●The chair can be operated in a variety of automatic modes for pre-programmed massage operations, and manual modes called Manual Selection Mode.

HEALTHCARE PROGRAMS

FULLBODY RELIEF 1

Relaxes the muscles that affect your whole body and alleviates fatigue by stimulating shiatsu points. Recommended for general fatigue and restlessness.

STIFF SHOULDERS 2

Helps relieve tension and stiffness around the neck and shoulders. Recommended for shoulder and neck fatigue.

LOWER BACK TENSION 3

Recommended for lower back muscle pain and fatigue.

LEGS & HIPS FATIGUE 4

Recommended to help relieve pain in the hips and the legs.

SHIATSU 5

Recommended for general recovery of fatigued muscles. Uses shiatsu techniques.

WELL-BEING PROGRAMS

MORNING

Invigorating morning massage.

NIGHTTIME

Recommended before going to sleep at night.

SEAT

Combined vibration and air massage directly stimulates the muscles of the seat area.

Preset Operation

Press the program buttons shown on the right to select your desired massage function.

Manual Selection Mode

On the internal panel, select your desired massage type: Kneading, Human Touch, Double-Kneading, Kneading & Tapping, Rhythm Shiatsu (1 and 2), Tapping (1 and 2), and Rolling (Partial and Whole massage), lower body massage, or any combination of the above. Also, you can make adjustments for the speed, the strength, the up-down position, and the movement of the massage. For details, please refer to page 15.

Preset Programs ① / Massage Types

Preset Programs

- Inada Chair i.2 allows you to select your desired preset program massage.
- There are five different Healthcare programs, and three Well-Being programs.
- These programs can be combined with the armrest vibration feature.


Strength adjustment for massaging the lower half of your body

"Medium" has been preset, but you can select the desired intensity from three options.



Back Vibration Cancellation button

The back vibration function in the Healthcare and Well-being Programs can be disabled using this button.

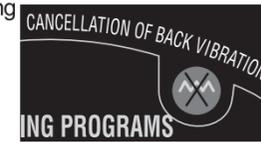

Changing Programs

You can switch to other massage types anytime, even during the operation of a program. However, the timer will be reset.

●From a preset program to another preset program

During the operation of a preset program, if you select another preset program, the rollers will return to the home position, and then the function for automatically detecting massage points will start.

●From a preset program to the Manual Selection Mode

During the operation of a preset program, if you select any of the Manual Selection Mode buttons on the internal panel, the preset program will be interrupted, and the manual mode selected will start.

Ending the operation before completing the program

To end the operation before completing the program, press the power switch. The operation will stop after the rollers return to the home (storage) position.

Remote control



Liquid crystal display (small)

Liquid crystal display (large)

Fine Tuning Shoulder Position

POWER button

STOP button

HEALTHCARE PROGRAM buttons

Back Vibration Cancellation button

WELL-BEING PROGRAM buttons

Caution

Do not place hands or feet on the roller track or in the space between the backrest and the seat or on the moving parts. Do not use the chair while wearing hair accessories. →May result in injury.


Armrest Vibration Feature

The on-off switch is located under the right armrest. (The vibration repeats at regular intervals and the system automatically shuts off after approx. five minutes.)

*This feature can be combined with all programs.



Preset Programs ② / Operation

1 Press Power button.

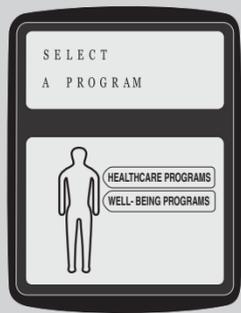

The display will light up. To select a preset program, close the external panel on the remote control. If no buttons are pushed for five minutes, the power will automatically turn off.

2 Press the button for the desired program.

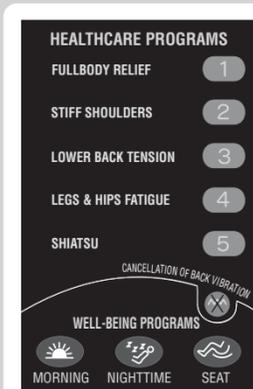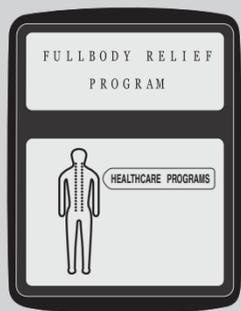

The name of the program selected will be displayed.

*This illustration shows that the FULLBODY RELIEF Program has been selected.

3 The function for automatically detecting massage points will start.




Massage points will be detected during a once-through operation of the rollers (a beeping sound is heard during the detecting operation).

Caution:
During the operation of the detecting function, you must stay seated in the chair with your head against the backrest.

4 Massage points are detected.




5 The shoulder position can now be fine-tuned.

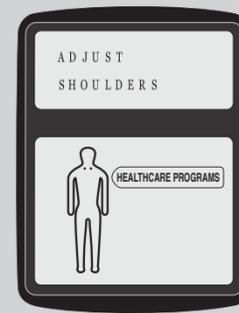

When you hear the beeping sound (during the operation of the rollers), you can adjust the position of the shoulder rollers by using the Shoulder Position Adjustment buttons. The rollers move approximately 0.16 inches every time a Shoulder Position Adjustment button is pressed. If the detected position is OK, do not press the buttons.

6 Massage points are determined.

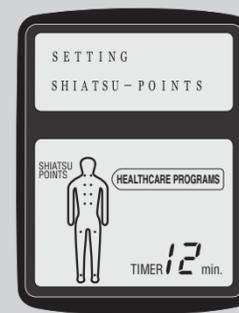

7 Massage will start.



●Liquid crystal display (small):

Shows a continuous description of the selected program.

●Liquid crystal display (large):

The points being massaged are lit or blinking. The timer displays the approximate time of operation remaining (actual time left may vary slightly).

If you wish to stop the program during the operation, press the Power switch. The rollers will then return to the home position, and the program will stop.

8 When the massage ends, the lights on the display will go out.



Manual Selection Modes ① / Liquid Crystal Display • Explanation Of Movements

Manual Selection Modes

- You can select from the following functions: Kneading, Human Touch, Double-Kneading, Kneading & Tapping, Rhythm Shiatsu (1 and 2), Tapping (1 and 2), and Rolling (Partial and Whole massage), lower body air massage, or you can make any combination of the above. Also, you can make adjustments for the speed, the strength, the vertical position, and the movement of the massage.
- These programs can be combined with the armrest vibration feature.

Standard program

Press the program buttons to select your desired massage function.
You can change the operating program to another one by pushing the button of desired program.

Kneading		Normal massage; the direction of the roller rotation is adjustable by pressing the button. The direction of the roller rotation, the speed, and the vertical position are adjustable.
Human Touch		Roller operation feels like a hand massage; the direction of the roller rotation is adjustable by pressing the button. The direction of roller rotation and the vertical position are adjustable.
Double-Kneading		A programmed, automatic roller operation that repeats a cycle of normal and reverse rotation during which the speed varies. The vertical position is adjustable as well.
Kneading & Tapping		Simultaneous operation of kneading & tapping; the direction of the roller rotation is adjustable by pressing the button. The direction of the roller rotation, the speed, and the vertical position are adjustable.
Rhythm Shiatsu 1		Repeated slow pushing (simulating finger pressure); The width between rollers and their vertical position are adjustable.
Rhythm Shiatsu 2		Repeated slow pushing (simulating finger pressure) while the massage point varies horizontally; The vertical position of rollers is adjustable.
Tapping 1		Simple tapping; The width between rollers, speed and the vertical position are adjustable.
Tapping 2		A programmed, automatic operation of rollers using varying speeds; The width between rollers and vertical position are adjustable.

Types of rollers

Rolling (Whole) massage		Massages the entire back; The width between rollers and their vertical position are adjustable.
Rolling (Partial) massage		Massages part of the back; The width between rollers and their vertical position are adjustable.

Lower body air massage

You can make a selection between Legs, Seat, and Legs & Seat air massages.
You can adjust the intensity using the Low, Medium, and High buttons even while operating.

Legs massage		Massages the legs using air pressure.
Seat massage		Massages the buttocks using air pressure.
Legs and Seat massage		Massages the legs and seat using air pressure.

Liquid Crystal Display [Manual selection mode operation]

The Liquid Crystal Display displays the selected course, speed, intensity, width, rotational direction, and vertical position in words for 3 seconds and then displays the relevant icons.

The illustration states that the respective operation is being done.

- **Kneading** (Normal rotation · Speed 4)
- **Rolling (Partial) massage**
- **Roller width/ [Wide]**
- **Back vibration/[High]**
- **Seat vibration/[High]**
- **Lower body air massage/ [Legs & Seat · High]**

Remote control

Figure shows the remote control with the external panel opened.



Width adjustment buttons

During Rhythm Shiatsu 1, Tapping 1 or 2, Rolling (Partial or Whole), or Vibration (Back), the width between rollers can be adjusted using the Width adjustment buttons (Narrow, Medium, and Wide).

Narrow		*Note, the function of Width adjustment will not work during the operations: Kneading, Human Touch, Kneading & Tapping, Double Kneading, Rhythm Shiatsu 2.
Medium		
Wide		

Speed adjustment buttons

During Kneading, Kneading & Tapping, or Tapping 1, the operation speed can be adjusted using the High or Low buttons.

Speed **v4** The display shows the Kneading set at Speed 4.

Levels of Speed adjustment:
You can select among six speeds for Kneading, and four speeds for Kneading & Tapping and Tapping 1.

Up/Down adjustment

During Kneading, Human Touch, Double-Kneading, Kneading & Tapping, Rhythm Shiatsu 1 or 2, Tapping 1 or 2, Rolling (Partial) massage, and Back vibration, the position of the rollers can be adjusted using the UP/DOWN adjustment buttons.

UP rollers move up	*The central position of the massage can be adjusted during the partial rolling massage. The UP/DOWN rolling movement of the back rollers can be adjusted by pressing the UP/DOWN buttons.
DOWN rollers move down	


Back/Seat vibration

Vibration massage of Back and Seat will be operated simultaneously. The intensity between High and Low can be adjusted by pressing the buttons respectively.

Back vibration		Vibration massage of the back will operate. The width between rollers and vertical position are adjustable.
Seat vibration		Vibration massage of the buttocks will operate.


Manual Selection Modes ② / Operation

1 Press Power button.

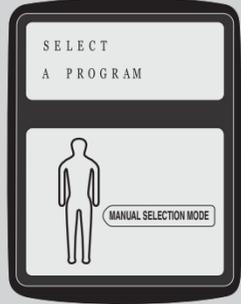

The display will light up. To make a selection from the Manual Selection Mode, open the external panel on the remote control. If no buttons are pressed within five minutes, the power will automatically turn off.

2 Press the button of the desired program.

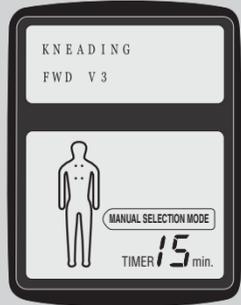

On the manual selection mode, some programs can be turned on with one push and can be cancelled by pressing the same button again. Others will go through three steps: rotation, reverse rotation, and off (The above illustration shows a course for "Kneading, forward" and "speed, 3"). The liquid crystal display (small) displays the name of the course selected for three seconds and then displays the relevant icons (shown on pages 17 and 18). The liquid crystal display (large) displays some information on the course selected, as well as the remaining time of operation.

3 The operation will automatically end 15 minutes after starting.



The rollers will return to the home (storage) position.
To cancel the program during its operation, press the Power switch. The program will end after the rollers return to the home (storage) position.

4 The operation will stop, and the display will automatically turn off.

Changing Programs

You can switch to other massage types anytime, even during the operation of a program. However, the timer will be reset.

● Manual Selection Mode to preset program

During any operation of the Manual Selection Mode, if you select a preset program on the external panel/door, the rollers will return to the home position. The function for automatically detecting massage points will then start. The preset program selected will start after this.

Table of illustrations displayed

During the Manual Selection Mode, the operating status is displayed by the relevant icons.

- ① Message Type
- ② Direction of rotation (normal or reverse)
- ③ Speed
- ④ Roller
- ⑤ Roller width
- ⑥ Back vibration (intensity)
- ⑦ Seat vibration (intensity)
- ⑧ Lower body massage (intensity)



Message type	Displayed icon	Message type	Displayed icon
Kneading		Tapping 1	
Human Touch		Tapping 2	
Double Kneading		Normal rotation	
Kneading & Tapping		Reverse rotation	
Rhythm Shiatsu 1		Speed	
Rhythm Shiatsu 2			

Table showing the massage types which can be combined, and the items which are adjustable.

You can select the desired massage type from the message menu from 1 to 5. You can also make combinations among them.

● Adjustable items during operation will be marked ○(circle).

● Rollers and back vibration are not adjustable if you combine those with Kneading, Human Touch, Double Kneading, Kneading & Tapping or Rhythm Shiatsu 2.

1 • Standard program (select any one of the message adjustments)

Course/program	Message adjustment	Normal rotation/Reverse rotation	Speed adjustment	Width adjustment	Vertical position adjustment	Intensity
Kneading		○	○ Speed 1~6 6 levels	—	○	—
Human Touch		○	—	—	○	—
Double Kneading		—	—	—	○	—
Kneading & Tapping		○	○ Speed 1~4 4 levels	—	○	—
Rhythm Shiatsu 1		—	—	○ Narrow·Medium·Wide 3 levels	○	—
Rhythm Shiatsu 2		—	—	—	○	—
Tapping 1		—	○ Speed 1~4 4 levels	○ Narrow·Medium·Wide 3 levels	○	—
Tapping 2		—	—	○ Narrow·Medium·Wide 3 levels	○	—

2 • Rollers (select any one of the message adjustments)

⊕ Plus

Roller types	Message adjustment	Normal rotation/Reverse rotation	Speed adjustment	Width adjustment	Vertical position adjustment	Intensity
Roller (Whole)		—	—	○ Narrow·Medium·Wide 3 levels	○ Up/Down movement	—
Roller (Partial)		—	—	○ Narrow·Medium·Wide 3 levels	○ Adjustment of center position	—

3 • Back vibration

⊕ Plus

Message adjustment	Normal rotation/Reverse rotation	Speed adjustment	Width adjustment	Vertical position adjustment	Intensity
Back vibration		—	—	○ Narrow·Medium·Wide 3 levels	○ Low·High

4 • Seat vibration

⊕ Plus

Message adjustment	Normal rotation/Reverse rotation	Speed adjustment	Width adjustment	Vertical position adjustment	Intensity
Seat vibration		—	—	—	○ Low·High

5 • Lower body air massage (select any one of the message adjustments)

⊕ Plus

Air massage	Message adjustment	Normal rotation/Reverse rotation	Speed adjustment	Width adjustment	Vertical position adjustment	Intensity
Legs		—	—	—	—	○ Low·Medium·High
Seat		—	—	—	—	○ Low·Medium·High
Legs & Seat		—	—	—	—	○ Low·Medium·High

*These programs can be combined with the armrest vibration feature.

Message type	Displayed icon	Message type	Displayed icon	Message type	Displayed icon
④ Roller (Whole)		⑥ Back vibration	High	⑧ Lower body (Seat)	Low
④ Roller (Partial)		⑥ Seat vibration	Low		Medium
⑤ Roller width	Narrow		High		High
	Medium	⑦ Lower body (Legs)	Low	Low	
	Wide		Medium	Medium	
⑥ Back vibration	Low	High	High	High	

Cleaning And Storage

Storage

- Store the chair in a dry area after cleaning.
- To shield from dust, please make sure to cover the chair.

Caution Do not keep the chair in a dusty or high-temperature (104°F/40°C) area. Do not keep the chair near a stove or in direct sunlight as it may cause discoloration and/or degeneration of the external parts.

Cleaning

Before any cleaning is carried out, make sure that the power is turned off and the plug is disconnected from the socket.

Warning Do not connect or disconnect the power plug with wet hands. You may be exposed to the danger of electric shock and injury.

Main parts

- Plastic parts, pipes, and fabric should be cleaned by wiping with a mild detergent and damp cloth. Wipe with a dry cloth next to dry the surface of the chair.

Caution Never use alcohol, solvents, or abrasive agents. Using these chemicals may cause scratches, discoloration, and/or cracks.

Back pad Headrest Covers

- Remove stains by wiping with a mild detergent and a damp cloth. Wipe with a dry cloth next to dry the surface of the chair.

Caution Long contact with vinyl, plastic material, or wallpaper may cause discoloration.

Remote control


- Remove stains by using a dry cloth.

Caution Never use a wet cloth. Moisture can damage the controls.

How to remove covers


How to remove the seat cover

1. Undo the velcro that fixes the seat cover to the footrest bottom cover.
 2. Undo the 6 velcro strips that fix the seat cover to the seat and remove the seat cover.
- *To re-attach the seat cover, reverse the above procedure (Note that you should securely put the bag-shaped part of the seat cover on the footrest cover).

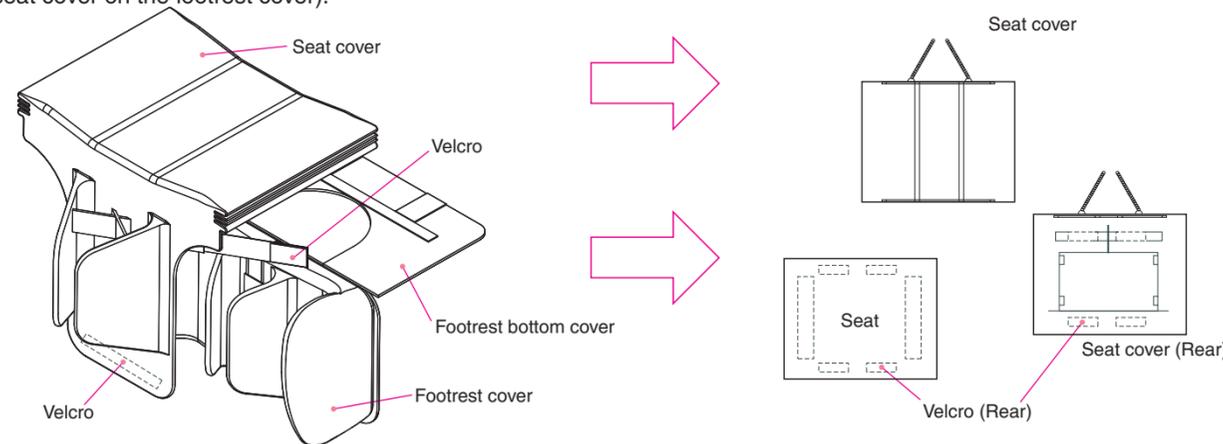


How to remove the footrest cover

1. Undo the zipper that fixes the footrest cover on the footrest and remove the footrest cover.
- *To re-attach the footrest cover, reverse the above procedure. (Note that you should securely put the bag-shaped part of the footrest cover on the air cushion.)

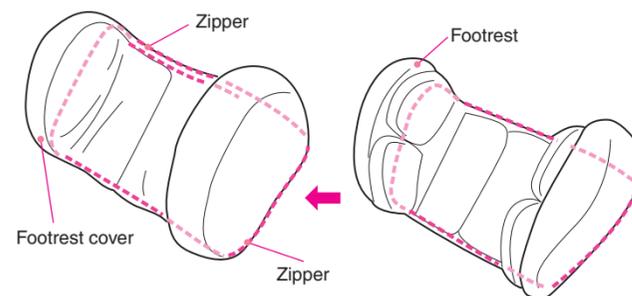


How to remove the backrest cover

1. Undo the velcro that fixes the backrest cover to the headrest and remove the headrest.
 2. Undo the zipper that connects the back pad and the backrest and remove the back pad.
 3. Undo the 13 velcro strips that fix the backrest cover to the backrest and remove the backrest cover.
- *To re-attach the backrest cover, reverse the above procedure.

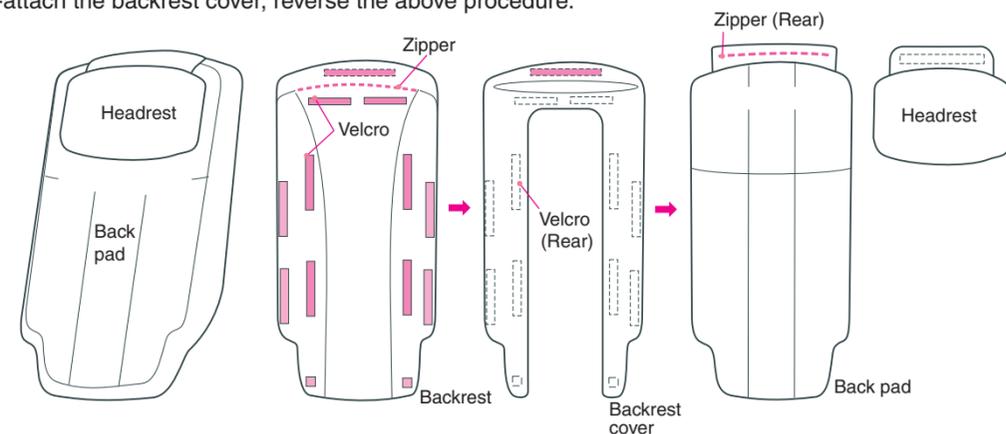

How to remove the arm cover

1. Undo the velcro that fixes the arm cover.
 2. Remove the arm cover from the arm blow.
- *To re-attach the arm cover, reverse the above procedure.

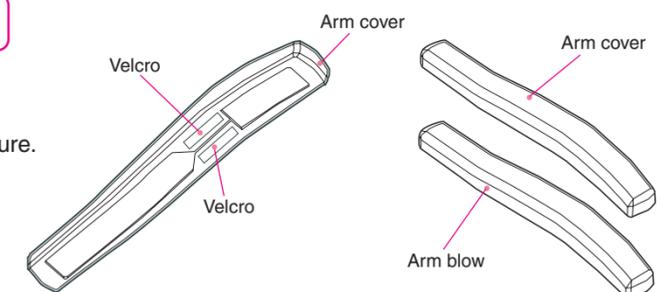

Troubleshooting Guide

Please refer to the following Q&As for checking your chair before calling for service. If this does not solve the problem, stop using the chair immediately and disconnect the power plug. Then consult the vendor.

● Only qualified service technicians should repair the massage chair.

Q The chair will not operate. Is it broken?

A Please try the following operations:
1) Is the power plug securely connected to a wall outlet?
2) Is the main power switch (on the side of the backrest) turned on completely?

Q In the preset program, the actual operation time differs from that shown on the display of the remote control.

A This is because the height of the person using the chair may be different from the standard height used for calculating the operation time. This time discrepancy is not a malfunction.

Q The external panel on the remote control came off.

A If you try to open the external panel too far, the panel may come off in order to prevent it from being damaged. Please re-attach it to the remote control.

Q The recliner moved in the opposite direction from what was chosen.

A You may be pushing both of the reclining buttons together at the same time. Please release the button(s) and try again.

Q How can I increase the level of stimulation?

A Recline the backrest further, sit back deeply in the seat, and try to lean back into the chair.

Q How can I decrease the level of stimulation?

A Raise the backrest position. If it is still too strong, apply a towel to the area being massaged.

Q The message "Reset main power switch" is shown on the liquid crystal display.

A The main power switch is located on the side of the backrest and turn it on again after about 5 seconds.
1) If the chair recovers, continue use.
2) If the same message is displayed again, stop using the chair, disconnect the power plug, and contact the vendor.

Q Automatic massage points detected unsuccessfully.

A Keep your body at the deepest position in the chair and keep your head on the headrest.
The Automatic Massage Points Detection System will not function if the Manual Selection Mode is in operation. You can adjust the width and vertical positions of the rollers using the buttons while the rollers are operating.

Q The chair stops during use.

A Press the main power switch on the side of the backrest and turn it on again after about 5 seconds.
1) If the chair recovers, continue use.
2) If the chair does not restart, stop use, disconnect the power plug, and contact the vendor.


Q The rollers stop halfway.

A The rollers may have been strained due to excessive force. Slow down the speed or try to lightly lift your body.

Q The rollers have moved to the upper position.

A When the massage finishes operating as programmed by the auto timer, the rollers move to the upper position automatically to prevent interfering with the body. To continue the massage, press the power button on the remote control again.

Q The right and left rollers are not positioned horizontally.

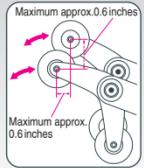A This is the result of alternate tapping and is normal.


Q There is noise during operation, should use be continued?


A The following sounds do not indicate any trouble or malfunction. They may occur during normal operation.
● Rattling during kneading or tapping.
● A sound (creak) due to rubbing between the rollers and fabric in the kneading operation.
● Whirring sound from the air pump.
● Whirring sound from the vibration function.
● When the backrest has been fully reclined, the pump for operating the footrest is working (a whirring sound is heard).
● Whirring sound when reclining.

Q During use, the air massage stops when the footrest is moved up or down.

A The air massage will stop when the footrest is moved up or down to ensure safety. The air massage will start operating again when the footrest stops moving.

Q How do I move the chair when cleaning the room or changing rooms?

A There are casters on the chair. Turn off the main power switch with the backrest in the raised position, disconnect the power plug from the socket, lift the front part of the chair as shown in the figure and move it using the casters.

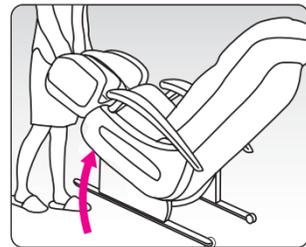

Warning

Do not move the chair while someone is in it. → Accident or injury could result if the chair tips over.

Service

Service

1. Warranty

The chair is under warranty for three years from the date of purchase. A warranty card is provided with each chair. Keep this card in a safe place since it is required for repair during the warranty period.

2. When requesting service

Before requesting service, be sure to read the Troubleshooting section on Page 21 in this manual. If this does not resolve your problem, call the vendor for assistance. The following information should be given to the vendor when requesting service.

1. Your name, address, and phone number
2. Product name and model number (see the back page of this manual)
3. Serial No. (see the Serial No. label on the back cover of the chair)
4. Date of purchase
5. Trouble status
6. Proof of purchase

● If the warranty is valid:

Show the vendor the warranty card.

A service charge may apply, subject to the nature of the trouble and/or repair according to the terms of the warranty. See the warranty for full details.

● If the warranty has expired:

Consult the vendor.

If the product can be repaired, the vendor will give you an estimate of the cost to repair the product.

● Replacement parts stock:

We will stock service-intended functional parts (except fabric) of this product for at least six years after terminating the production of this model. Functional parts refer to those necessary for maintaining the intended performance of the product.

● For more information on service:

Contact the vendor.

Safety inspections for Inada Chair

Regular inspections are essential for maintaining the Inada Chair performance.

Possible symptoms

- The chair does not start with the main power switch on.
- The power cable has been cracked or scratched.
- The power cable or plug becomes abnormally hot.
- The chair produces a burnt smell, abnormal sound or vibration.
- The auto timer function does not work in some cases.
- The fabric is torn where it comes into contact with the rollers or air cells.
- Other failures.

■ If you see any of the symptoms or problems shown on the left, stop using the chair, disconnect the power plug, and consult the vendor to repair the product.

- ◆ After about five years of use, a professional inspection should be performed even if there are no symptoms or problems. For inspection fees, contact the vendor.


attach



inada chair-i.2

How to attach the stand

Attach the stand to the right armrest of the main body using the screw included, as shown in the figure.
To remove the stand, reverse the attachment procedure.

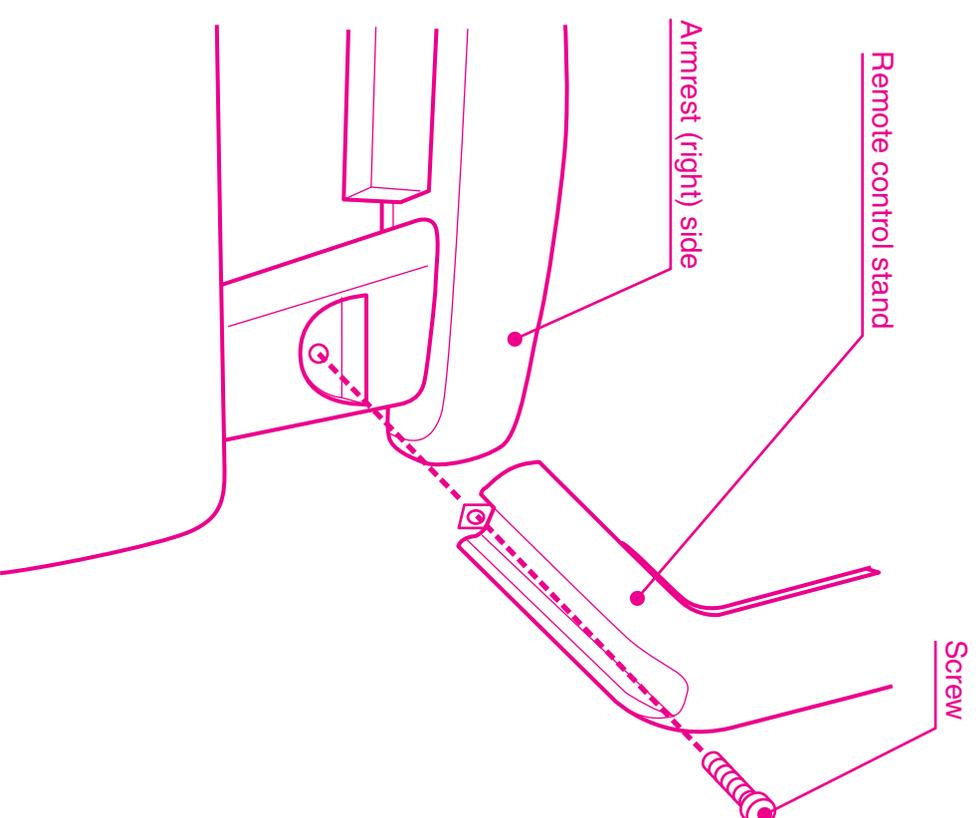

How to attach the stand for the remote control

Accessories

- Remote control stand (1)
- Screw (1)
- Tool (1)

